



Function List

AutoMaker: Mazda

NOTES:

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Special Function
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	4X4	✓	✓	✓	✓	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	ABS	✓	✓	✓	✓	8
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	GEM	✓	✓	✓	✓	000A 000F
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	IC	✓	✓	✓	✓	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	PAM	✓	✓	✓	✓	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	PCM	✓	✓	✓	✓	0009 0023 0025 00C5
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	RCM	✓	✓	✓	✓	000C
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	4X4	✓	✓	✓	✓	○
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	ABS	✓	✓	✓	✓	8
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	GEM	✓	✓	✓	✓	000A 000F

(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	IC	✓	✓	✓	✓	5
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	PAM	✓	✓	✓	✓	○
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	PCM	✓	✓	✓	✓	0009 0023 0025 00C5
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	RCM	✓	✓	✓	✓	000C
626 / 626 WAGON / TELSTAR	1. 8L	FP	1997 – 2000	PCM	✓	✓	✓	✓	0023 0025
626 / 626 WAGON / TELSTAR	1. 8L	FP	1999	ABS	✓	✓	✓	✓	○
626 / 626 WAGON / TELSTAR	1. 8L	FP	2000	ABS/TCS	✓	✓	✓	✓	○
626 / 626 WAGON / TELSTAR	2. 0L	FS	1997 – 1999	ABS	✓	✓	✓	✓	○
626 / 626 WAGON / TELSTAR	2. 0L	FS	1997 – 2001	PCM	✓	✓	✓	✓	0023 0025
626 / 626 WAGON / TELSTAR	2. 0L	FS	1998 – 2001	ABS/TCS	✓	✓	✓	✓	○
626 / 626 WAGON / TELSTAR	2. 0L	RF-T	1997 – 2000	PCM	✓	✓	✓	✓	○
626 / 626 WAGON / TELSTAR	2. 0L	RF-T	1999 – 2000	ABS	✓	✓	✓	✓	○
626 / 626 WAGON / TELSTAR	2. 5L	KL	1997 – 2001	PCM	✓	✓	✓	✓	0023 0025
626 / 626 WAGON / TELSTAR	2. 5L	KL	1998 – 2001	ABS/TCS	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	ABS	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	BCM/GEM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	EATC	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	EPS	✓	✓	✓	✓	○

ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	IC	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	ICCM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	LCM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	MPM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	PCM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RCM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RKE	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RVM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	TCM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	4X4	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	ABS	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	BCM/GEM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	EATC	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	EPS	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	IC	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	ICCM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	LCM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	MPM	✓	✓	✓	✓	○

ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	PCM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	RCM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	RKE	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	RVM	✓	✓	✓	✓	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	TCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	4X4	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	ABS	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	ACU	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	AFS	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	BCM/GEM	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	BSML	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	BSMR	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	EATC	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	EPS	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	FFH	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	IC	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	ICCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	LCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	MPM	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	PCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	RCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	RKE	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	RVM	✓	✓	✓	✓	○
ATENZA / MAZDA6	1. 8L	L8	Other	TCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	4X4	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	ABS	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	ACU	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	AFS	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	BCM/GEM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	BSML	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	BSMR	✓	✓	✓	✓	○

ATENZA / MAZDA6	2. 0L	LF	Other	EATC	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	EPS	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	FFH	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	IC	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	ICCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	LCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	MPM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	PCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	RCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	RKE	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	RVM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 0L	LF	Other	TCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	4X4	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	ABS	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	ACU	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	AFS	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	BCM/GEM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	BSML	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	BSMR	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	EATC	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	EPS	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	FFH	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	IC	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	ICCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	LCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	MPM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	PCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	RCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	RKE	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	RVM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	TCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	4X4	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	ABS	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	ACU	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	AFS	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	BCM/GEM	✓	✓	✓	✓	○

ATENZA / MAZDA6	2. 5L	L5	Other	BSML	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	BSMR	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	EATC	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	EPS	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	FFH	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	IC	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	ICCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	LCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	MPM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	PCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	RCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	RKE	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	RVM	✓	✓	✓	✓	○
ATENZA / MAZDA6	2. 5L	L5	Other	TCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	4X4	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	ABS	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	ACU	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	AFS	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	BCM/GEM	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	BSML	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	BSMR	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	EATC	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	EPS	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	FFH	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	IC	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	ICCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	LCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	MPM	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	PCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	RCM	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	RKE	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	RVM	✓	✓	✓	✓	○
ATENZA / MAZDA6	3. 7L	CA	Other	TCM	✓	✓	✓	✓	○
ATENZA AMC MZ	2. 0L	PE	Other	BSML	✓	✓	✓	✓	○
ATENZA AMC MZ	2. 0L	PE	Other	BSMR	✓	✓	✓	○	○
ATENZA AMC MZ	2. 0L	PE	Other	RVM	✓	✓	✓	○	○

ATENZA AMC MZ	2. 2L	SH	Other	BSML	✓	✓	✓	✓	○
ATENZA AMC MZ	2. 2L	SH	Other	BSMR	✓	✓	✓	○	○
ATENZA AMC MZ	2. 2L	SH	Other	RVM	✓	✓	✓	○	○
ATENZA AMC MZ	2. 5L	PY	Other	BSML	✓	✓	✓	✓	○
ATENZA AMC MZ	2. 5L	PY	Other	BSMR	✓	✓	✓	○	○
ATENZA AMC MZ	2. 5L	PY	Other	RVM	✓	✓	✓	○	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 – 2005	ABS/TCS	✓	✓	✓	✓	001E
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 – 2005	IC	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 – 2005	LHID	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 – 2005	PCM	✓	✓	✓	✓	0009 00C5 00C6
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 – 2005	RCM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 – 2005	RHID	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2005	GEM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2005	LCM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2005	RKE	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2005	TCM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 – 2005	4X4	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 – 2005	ABS/TCS	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 – 2005	IC	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 – 2005	LHID	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 – 2005	PCM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 – 2005	RCM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 – 2005	RHID	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 – 2005	TCM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2005	GEM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2005	LCM	✓	✓	✓	✓	○

ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2005	RKE	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	4X4	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	ABS/TCS	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	GEM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	IC	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	LCM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	LHID	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	PCM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	RCM	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	RHID	✓	✓	✓	✓	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	4X4	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	ACU	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	AFS	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	BCM/GEM	✓	✓	✓	○	○
AXELA / MAZDA3	1. 5L	ZY	Other	BSML	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	BSMR	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	EATC	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	IC	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	LCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	MID#1	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	PCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	RVM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 5L	ZY	Other	TCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	4X4	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	ABS	✓	✓	✓	✓	○

AXELA / MAZDA3	1. 6L	Y6	Other	ACU	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	AFS	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	BCM/GEM	✓	✓	✓	○	○
AXELA / MAZDA3	1. 6L	Y6	Other	BSML	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	BSMR	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	EATC	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	FACM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	IC	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	LCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	MID#1	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	PCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	RVM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Y6	Other	TCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	4X4	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	ACU	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	AFS	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	BCM/GEM	✓	✓	✓	○	○
AXELA / MAZDA3	1. 6L	Z6	Other	BSML	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	BSMR	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	EATC	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	IC	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	LCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	MID#1	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	PCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	RVM	✓	✓	✓	✓	○
AXELA / MAZDA3	1. 6L	Z6	Other	TCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	4X4	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	ACU	✓	✓	✓	✓	○

AXELA / MAZDA3	2. 0L	LF	Other	AFS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	BCM/GEM	✓	✓	✓	○	○
AXELA / MAZDA3	2. 0L	LF	Other	BSML	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	BSMR	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	EATC	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	IC	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	LCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	MID#1	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	PCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	RVM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	LF	Other	TCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	ACU	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	AFS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	BCM/GEM	✓	✓	✓	○	○
AXELA / MAZDA3	2. 0L	PE	Other	BSML	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	BSMR	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	EATC	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	IC	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	LCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	MID#1	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	PCM	✓	✓	✓	○	9
AXELA / MAZDA3	2. 0L	PE	Other	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 0L	PE	Other	RVM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	4X4	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	ACU	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	AFS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	BCM/GEM	✓	✓	✓	○	○
AXELA / MAZDA3	2. 2L	R2_T	Other	BSML	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	BSMR	✓	✓	✓	✓	○

AXELA / MAZDA3	2. 2L	R2_T	Other	EATC	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	FFH	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	IC	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	LCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	MID#1	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	PCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	RVM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 2L	R2_T	Other	TCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	4X4	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	ACU	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	AFS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	BCM/GEM	✓	✓	✓	○	○
AXELA / MAZDA3	2. 3L	L3_T	Other	BSML	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	BSMR	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	EATC	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	IC	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	LCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	MID#1	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	PCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	RVM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 3L	L3_T	Other	TCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	4X4	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	ACU	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	AFS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	BCM/GEM	✓	✓	✓	○	○
AXELA / MAZDA3	2. 5L	L5	Other	BSML	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	BSMR	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	EATC	✓	✓	✓	✓	○

AXELA / MAZDA3	2. 5L	L5	Other	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	IC	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	LCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	MID#1	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	PCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	RVM	✓	✓	✓	✓	○
AXELA / MAZDA3	2. 5L	L5	Other	TCM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	EATC	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	GEM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	IC	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	PCM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	EATC	✓	✓	✓	✓	○

AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	GEM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	IC	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	PCM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2006	4X4	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2006	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2006	TCM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	EATC	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	EPS	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	GEM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	IC	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	PCM	✓	✓	✓	✓	○

AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2006	RKE	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2006	TCM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	ABS	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	EATC	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	GEM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	IC	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	PCM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	RCM	✓	✓	✓	✓	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	RKE	✓	✓	✓	✓	○
AZ WAGON (MD/MJ) /SPIANO (HF)	660cc	F6A-T	1998 - Other	ABS	✓	✓	✓	✓	○
AZ WAGON (MD/MJ) /SPIANO (HF)	660cc	F6A-T	1998 - Other	PCM	✓	✓	✓	✓	○
AZ WAGON (MD/MJ) /SPIANO (HF)	660cc	F6A-T	1998 - Other	RCM	✓	✓	✓	✓	○
AZ WAGON (MD/MJ) /SPIANO (HF)	660cc	K6A	1998 - 2005	ABS	✓	✓	✓	✓	○
AZ WAGON (MD/MJ) /SPIANO (HF)	660cc	K6A	1998 - 2005	PCM	✓	✓	✓	✓	○

AZ WAGON (MD/MJ) /SPIANO (HF)	660cc	K6A	1998 – 2005	RCM	✓	✓	✓	✓	○
AZ WAGON (MD/MJ) /SPIANO (HF)	660cc	K6A_T	1998	TCM	✓	✓	✓	✓	○
AZ WAGON (MD/MJ) /SPIANO (HF)	660cc	K6A_T	1998 – Other	ABS	✓	✓	✓	✓	○
AZ WAGON (MD/MJ) /SPIANO (HF)	660cc	K6A_T	1998 – Other	PCM	✓	✓	✓	✓	○
AZ WAGON (MD/MJ) /SPIANO (HF)	660cc	K6A_T	1998 – Other	RCM	✓	✓	✓	✓	○
AZ-WAGON (MJ)	660cc	K6A	2003 – 2006	ABS	✓	✓	✓	✓	○
AZ-WAGON (MJ)	660cc	K6A	2003 – 2006	PCM	✓	✓	✓	✓	○
AZ-WAGON (MJ)	660cc	K6A	2003 – 2006	RCM	✓	✓	✓	✓	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 – 2005	ABS	✓	✓	✓	✓	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 – 2005	PCM	✓	✓	✓	✓	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 – 2005	RCM	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A	Other	ABS	✓	✓	✓	○	○
AZ-WAGON / CAROL	660cc	K6A	Other	BCM#1	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A	Other	EATC	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A	Other	EPS	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A	Other	PCM	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A	Other	RCM	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A	Other	TCM	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A S	Other	ABS	✓	✓	✓	○	○
AZ-WAGON / CAROL	660cc	K6A S	Other	BCM#1	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A S	Other	EATC	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A S	Other	EPS	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A S	Other	PCM	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A S	Other	RCM	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A S	Other	TCM	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	ABS	✓	✓	✓	○	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	BCM#1	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	EATC	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	EPS	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	PCM	✓	✓	✓	✓	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	RCM	✓	✓	✓	✓	○

AZ-WAGON / CAROL	660cc	K6A_T	Other	TCM	✓	✓	✓	✓	○
AZ_OFFROAD	660cc	K6A_T	1999 – 2008	ABS	✓	✓	✓	✓	○
AZ_OFFROAD	660cc	K6A_T	1999 – 2008	PCM	✓	✓	✓	✓	○
AZ_OFFROAD	660cc	K6A_T	1999 – 2008	RCM	✓	✓	✓	✓	○
AZ_OFFROAD	660cc	K6A_T	1999 – 2008	TCM	✓	✓	✓	✓	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 2L	F2	1996 – Other	PCM	✓	✓	✓	✓	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001	PCM	✓	✓	✓	✓	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001 – 2002	ABS	✓	✓	✓	✓	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 – 2005	ABS	✓	✓	✓	✓	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 – 2005	PCM	✓	✓	✓	✓	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1996 – 1999	PCM	✓	✓	✓	✓	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1999	ABS	✓	✓	✓	✓	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 9L	W9	2002	ABS	✓	✓	✓	✓	○
BONGO / BONGO BRAUNNY / SPECTRON	1. 8L	F8	1999	ABS	✓	✓	✓	✓	○

BONGO / BONGO BRAUNY / SPECTRON	1. 8L	F8	1999 – 2002	PCM	✓	✓	✓	✓	○
BONGO / BONGO BRAUNY / SPECTRON	1. 8L	F8	2002	ABS/TCS	✓	✓	✓	✓	○
BONGO / BONGO BRAUNY / SPECTRON	1. 8L	F8	2002	TCM	✓	✓	✓	✓	○
BONGO / BONGO BRAUNY / SPECTRON	1. 8L	L8	2010	ABS	✓	✓	✓	✓	○
BONGO / BONGO BRAUNY / SPECTRON	1. 8L	L8	2010	IC	✓	✓	✓	○	○
BONGO / BONGO BRAUNY / SPECTRON	1. 8L	L8	2010	PCM	✓	✓	✓	✓	○
BONGO / BONGO BRAUNY / SPECTRON	1. 8L	L8	2010	TCM	✓	✓	✓	✓	○
BONGO / BONGO BRAUNY / SPECTRON	2. 0L	RF-T	2003 – 2007	ABS/TCS	✓	✓	✓	✓	○
BONGO / BONGO BRAUNY / SPECTRON	2. 0L	RF-T	2003 – 2007	PCM	✓	✓	✓	✓	○
BONGO / BONGO BRAUNY / SPECTRON	2. 0L	RF-T	2003 – 2007	TCM	✓	✓	✓	✓	○
BONGO / BONGO BRAUNY / SPECTRON	2. 2L	R2	1999	ABS	✓	✓	✓	✓	○
BONGO / BONGO BRAUNY / SPECTRON	2. 2L	R2	1999	PCM	✓	✓	✓	✓	○
BONGO BRAUNY / ECONOVAN / MAZDA E- SERIES	1. 8L	F8	1999	ABS	✓	✓	✓	✓	○
BONGO BRAUNY / ECONOVAN / MAZDA E- SERIES	1. 8L	F8	1999	PCM	✓	✓	✓	✓	○
BONGO BRAUNY / ECONOVAN / MAZDA E- SERIES	2. 0L	FE	1997 – 1999	ABS	✓	✓	✓	✓	○
BONGO BRAUNY / ECONOVAN / MAZDA E- SERIES	2. 0L	FE	1997 – 2002	PCM	✓	✓	✓	✓	○

BONGO BRAUNNY / ECONOVAN / MAZDA E- SERIES	2. 0L	FE	2002	ABS/TCS	✓	✓	✓	✓	○
BONGO BRAUNNY / ECONOVAN / MAZDA E- SERIES	2. 0L	FE	2002	TCM	✓	✓	✓	✓	○
BONGO BRAUNNY / ECONOVAN / MAZDA E- SERIES	2. 2L	R2	1999	ABS	✓	✓	✓	✓	○
BONGO BRAUNNY / ECONOVAN / MAZDA E- SERIES	2. 2L	R2	1999	PCM	✓	✓	✓	✓	○
BONGO BRAUNNY / ECONOVAN / MAZDA E- SERIES	2. 5L	WL	1999	ABS	✓	✓	✓	✓	○
BONGO BRAUNNY / ECONOVAN / MAZDA E- SERIES	2. 5L	WL	1999	PCM	✓	✓	✓	✓	○
BT-50 / Ranger	2. 2L	F2	2007	ABS/TCS	✓	✓	✓	✓	○
BT-50 / Ranger	2. 2L	F2	2007	PCM	✓	✓	✓	✓	○
BT-50 / Ranger	2. 2L	F2	2007	RCM	✓	✓	✓	✓	○
BT-50 / Ranger	2. 5L	L5	2012	ABS	✓	✓	✓	✓	○
BT-50 / Ranger	2. 5L	L5	2012	PCM	✓	✓	✓	○	○
BT-50 / Ranger	2. 5L	WL	2007	ABS/TCS	✓	✓	✓	✓	○
BT-50 / Ranger	2. 5L	WL	2007	PCM	✓	✓	✓	✓	○
BT-50 / Ranger	2. 5L	WL	2007	RCM	✓	✓	✓	✓	○
BT-50 / Ranger	2. 5L	WL-CD	2007	ABS/TCS	✓	✓	✓	✓	○
BT-50 / Ranger	2. 5L	WL-CD	2007	PCM	✓	✓	✓	✓	○
BT-50 / Ranger	2. 5L	WL-CD	2007	RCM	✓	✓	✓	✓	○
BT-50 / Ranger	2. 5L	WL-CD	2007	TCM	✓	✓	✓	✓	○
BT-50 / Ranger	2. 6L	G6	2007	ABS/TCS	✓	✓	✓	✓	○
BT-50 / Ranger	2. 6L	G6	2007	PCM	✓	✓	✓	✓	○
BT-50 / Ranger	2. 6L	G6	2007	RCM	✓	✓	✓	✓	○
BT-50 / Ranger	3. 0L	WE-CD	2007	ABS/TCS	✓	✓	✓	✓	○
BT-50 / Ranger	3. 0L	WE-CD	2007	PCM	✓	✓	✓	✓	○
BT-50 / Ranger	3. 0L	WE-CD	2007	RCM	✓	✓	✓	✓	○
BT-50 / Ranger	3. 0L	WE-CD	2007	TCM	✓	✓	✓	✓	○
BT-50 / Ranger	4. 0L	V6 SOHC	2007	ABS/TCS	✓	✓	✓	✓	8
BT-50 / Ranger	4. 0L	V6 SOHC	2007	ESOF	✓	✓	✓	✓	○

BT-50 / Ranger	4. 0L	V6 SOHC	2007	PCM	✓	✓	✓	✓	23
BT-50 / Ranger	4. 0L	V6 SOHC	2007	RCM	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	4X4	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	ABS	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	EATC	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	EPS	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	GEM	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	IC	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	LPSDM	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	PCM	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	RCM	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	RKE	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	RPSDM	✓	✓	✓	✓	○
Biante (Japa n)	2. 0L	LF	2008	TCM	✓	✓	✓	○	○
Biante (Japa n)	2. 3L	L3	2008	ABS	✓	✓	✓	✓	○
Biante (Japa n)	2. 3L	L3	2008	EATC	✓	✓	✓	✓	○
Biante (Japa n)	2. 3L	L3	2008	EPS	✓	✓	✓	✓	○
Biante (Japa n)	2. 3L	L3	2008	GEM	✓	✓	✓	✓	○
Biante (Japa n)	2. 3L	L3	2008	IC	✓	✓	✓	✓	○
Biante (Japa n)	2. 3L	L3	2008	LPSDM	✓	✓	✓	✓	○
Biante (Japa n)	2. 3L	L3	2008	PCM	✓	✓	✓	✓	○
Biante (Japa n)	2. 3L	L3	2008	RCM	✓	✓	✓	✓	○
Biante (Japa n)	2. 3L	L3	2008	RKE	✓	✓	✓	✓	○
Biante (Japa n)	2. 3L	L3	2008	RPSDM	✓	✓	✓	✓	○
Biante (Japa n)	2. 3L	L3	2008	TCM	✓	✓	✓	○	○
CAPELLA / CAPELLA_W / TELSTAR / TELSTAR W	1. 8L	FP	1997 - 1999	PCM	✓	✓	✓	✓	○
CAPELLA / CAPELLA_W / TELSTAR / TELSTAR W	1. 8L	FP	1999	ABS	✓	✓	✓	✓	○
CAPELLA / CAPELLA_W / TELSTAR / TELSTAR W	2. 0L	FS	1997 - 1999	PCM	✓	✓	✓	✓	○
CAPELLA / CAPELLA_W / TELSTAR / TELSTAR W	2. 0L	FS	1999	ABS	✓	✓	✓	✓	○

CAPELLA / CAPELLA_W / TELSTAR / TELSTAR_W	2. 0L	RF	1997	PCM	✓	✓	✓	✓	○
CAPELLA / CAPELLA_W / TELSTAR / TELSTAR_W	2. 5L	KL	1999	ABS	✓	✓	✓	✓	○
CAROL	660cc	F6A	1998 – Other	ABS	✓	✓	✓	✓	○
CAROL	660cc	F6A	1998 – Other	PCM	✓	✓	✓	✓	○
CAROL	660cc	F6A	1998 – Other	RCM	✓	✓	✓	✓	○
CAROL	660cc	K6A	1998 – Other	ABS	✓	✓	✓	✓	○
CAROL	660cc	K6A	1998 – Other	PCM	✓	✓	✓	✓	○
CAROL	660cc	K6A	1998 – Other	RCM	✓	✓	✓	✓	○
CAROL	660cc	K6A	1998 – Other	TCM	✓	✓	✓	✓	○
CAROL (2003 / 9 –)	660cc	K6A	2003 – 2004	PCM	✓	✓	✓	✓	○
CAROL (2003 / 9 –)	660cc	K6A	2003 – Other	ABS	✓	✓	✓	✓	○
CAROL (2003 / 9 –)	660cc	K6A	2003 – Other	RCM	✓	✓	✓	✓	○
CAROL (HB24S)	660cc	K6A	2004 – 2005	ABS	✓	✓	✓	✓	○
CAROL (HB24S)	660cc	K6A	2004 – 2005	PCM	✓	✓	✓	✓	○
CAROL (HB24S)	660cc	K6A	2004 – 2005	RCM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	4X4	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	ABS	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	ACU	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	AM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	EATC	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	EPS	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	FFH	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	GEM	✓	✓	✓	✓	○

CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	IC	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	LCM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	MID#1	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	PCM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RCM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RKE	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RVM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	SCR CU	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	4X4	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	ABS	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	AM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	EATC	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	GEM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	IC	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	LCM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	PCM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	RCM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	RKE	✓	✓	✓	✓	○

CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	TCM	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	ACU	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	MID#1	✓	✓	✓	✓	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	RVM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	4X4	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	ABS	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	AM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	EATC	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	GEM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	IC	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	ICCM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	LCM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	PCM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	RCM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	RKE	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	TCM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	ACU	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	MID#1	✓	✓	✓	✓	○

CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	RVM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	4X4	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	ABS	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	ACU	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	AM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	EATC	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	GEM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	IC	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	ICCM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	LCM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	MID#1	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	PCM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	RCM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	RKE	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	RVM	✓	✓	✓	✓	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	TCM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	4X4	✓	✓	✓	✓	○

CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	ABS	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	AM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	EATC	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	GEM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	IC	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	PCM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	RCM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	RKE	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	TCM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	ACU	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	BSML	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	BSMR	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	LCM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	MID#1	✓	✓	✓	✓	○

CX-7 (North America / General Specs.)	2. 5L	L5	2010	4X4	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	ABS	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	ACU	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	AM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	BSML	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	BSMR	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	EATC	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	GEM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	IC	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	LCM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	MID#1	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	PCM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	RCM	✓	✓	✓	✓	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	RKE	✓	✓	✓	✓	○

CX-7 (North America / General Specs.)	2. 5L	L5	2010	TCM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	4X4	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	ABS	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	AM	✓	✓	✓	✓	5
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	GEM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	IC	✓	✓	✓	✓	0005 001A
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	LCM	✓	✓	○	○	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	LTM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	PCM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	RCM	✓	✓	✓	✓	5
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	RKE	✓	✓	✓	✓	5
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	TCM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	4X4	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	ABS	✓	✓	✓	✓	○

CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	AM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	BSML	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	BSMR	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	GEM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	IC	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	LCM	✓	✓	○	○	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	LTM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	PCM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	RCM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	RKE	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 – 2011	TCM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2010 – 2011	ACU	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2010 – 2011	DSM	✓	✓	✓	✓	○
CX-9 (North America / General Specs.)	3. 7L	CA	2011	VSM	✓	✓	✓	○	○
CX_7	2. 0L	PE	Other	BSML	✓	✓	✓	✓	○

CX_7	2. 0L	PE	Other	BSMR	✓	✓	✓	○	○
CX_7	2. 0L	PE	Other	RVM	✓	✓	✓	○	○
CX_7	2. 2L	SH	Other	BSML	✓	✓	✓	✓	○
CX_7	2. 2L	SH	Other	BSMR	✓	✓	✓	○	○
CX_7	2. 2L	SH	Other	RVM	✓	✓	✓	○	○
CX_7	2. 5L	PY	Other	BSML	✓	✓	✓	✓	○
CX_7	2. 5L	PY	Other	BSMR	✓	✓	✓	○	○
CX_7	2. 5L	PY	Other	RVM	✓	✓	✓	○	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	4X4	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	ABS	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	BCM/GEM	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	EPS	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	IC	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	PCM	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	RCM	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	RKE	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	TCM	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	ABS	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	BCM/GEM	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	EPS	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	IC	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	PCM	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	RCM	✓	✓	✓	✓	○

DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	RKE	✓	✓	✓	✓	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	TCM	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - 2005	PCM	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - Other	4X4	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - Other	ABS/TCS	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - Other	IC	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - Other	RCM	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - Other	RKE	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2005	EPS	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2005	LCM	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 5L	ZY	2002 - 2005	PCM	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 5L	ZY	2002 - Other	4X4	✓	✓	✓	✓	○

DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 5L	ZY	2002 - Other	ABS/TCS	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 5L	ZY	2002 - Other	IC	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 5L	ZY	2002 - Other	RCM	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 5L	ZY	2002 - Other	RKE	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 5L	ZY	2005	EPS	✓	✓	✓	✓	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 5L	ZY	2005	LCM	✓	✓	✓	✓	○
DEMIO / 121_DEMIO / 121	1. 3L	B3	1996 - 2000	ABS	✓	✓	✓	✓	○
DEMIO / 121_DEMIO / 121	1. 3L	B3	1996 - 2000	PCM	✓	✓	✓	✓	○
DEMIO / 121_DEMIO / 121	1. 3L	B3	2000	ABS/TCS	✓	✓	✓	✓	○
DEMIO / 121_DEMIO / 121	1. 5L	B5	1996 - 2000	ABS	✓	✓	✓	✓	○
DEMIO / 121_DEMIO / 121	1. 5L	B5	2000	ABS/TCS	✓	✓	✓	✓	○
DEMIO / 121_DEMIO / 121	1. 5L	B5	2000	PCM	✓	✓	✓	✓	○
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	1996 - 1999	ABS	✓	✓	✓	✓	○
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	1996 - Other	PCM	✓	✓	✓	✓	○
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	2000	ABS/TCS	✓	✓	✓	✓	○
DEMIO / FESTIVA MINI WAGON	1. 5L	B5	1996 - 1999	ABS	✓	✓	✓	✓	○

DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	4X4	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	ABS	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	BCM/GEM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	EATC	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	EPS	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	IC	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	PCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	RCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	RKE	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	TCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	P3	Other	VSM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	4X4	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	ABS	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	BCM/GEM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	EATC	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	EPS	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	IC	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	PCM	✓	✓	✓	✓	○

DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	RCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	RKE	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	TCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 3L	ZJ	Other	VSM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	4X4	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	ABS	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	BCM/GEM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	EATC	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	EPS	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	IC	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	PCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	RCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	RKE	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	TCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 5L	ZY	Other	VSM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	4X4	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	ABS	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	BCM/GEM	✓	✓	✓	✓	○

DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	EATC	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	EPS	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	IC	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	PCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	RCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	RKE	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	TCM	✓	✓	✓	✓	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1. 6L	Y6	Other	VSM	✓	✓	✓	✓	○
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	ABS	✓	✓	✓	✓	○
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	GEM	✓	✓	✓	✓	○
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	IC	✓	✓	✓	✓	○
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	PCM	✓	✓	✓	✓	○
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	RCM	✓	✓	✓	✓	○
Escape / Tribute (2006/3)	2. 3L	L3	2003	ABS	✓	✓	✓	✓	○
Escape / Tribute (2006/3)	2. 3L	L3	2003	GEM	✓	✓	✓	✓	○
Escape / Tribute (2006/3)	2. 3L	L3	2003	IC	✓	✓	✓	✓	○
Escape / Tribute (2006/3)	2. 3L	L3	2003	PCM	✓	✓	✓	✓	○
Escape / Tribute (2006/3)	2. 3L	L3	2003	RCM	✓	✓	✓	✓	○
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	ABS/TCS	✓	✓	✓	✓	8

Escape / Tribute / Maverick	2. 0L	Zetec	2001 – 2004	GEM	✓	✓	✓	✓	000A
Escape / Tribute / Maverick	2. 0L	Zetec	2001 – 2004	IC	✓	✓	✓	✓	○
Escape / Tribute / Maverick	2. 0L	Zetec	2001 – 2004	PCM	✓	✓	✓	✓	0009 0010 0023 0025 0028 0031 0033
Escape / Tribute / Maverick	2. 0L	Zetec	2001 – 2004	RCM	✓	✓	✓	✓	○
Escape / Tribute / Maverick	2. 0L	Zetec	2003 – 2004	PAM	✓	✓	✓	✓	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 – 2007	4X4	✓	✓	✓	✓	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 – 2007	ABS	✓	✓	✓	✓	8
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 – 2007	GEM	✓	✓	✓	✓	000A 000F
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 – 2007	IC	✓	✓	✓	✓	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 – 2007	PAM	✓	✓	✓	✓	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 – 2007	PCM	✓	✓	✓	✓	0009 0010 0023 0025 0028 0031 0033 00C5
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 – 2007	RCM	✓	✓	✓	✓	000C
Escape / Tribute / Maverick	3. 0L	4V	2001 – 2004	ABS/TCS	✓	✓	✓	✓	8
Escape / Tribute / Maverick	3. 0L	4V	2001 – 2007	GEM	✓	✓	✓	✓	000A 000F
Escape / Tribute / Maverick	3. 0L	4V	2001 – 2007	IC	✓	✓	✓	✓	5
Escape / Tribute / Maverick	3. 0L	4V	2001 – 2007	PCM	✓	✓	✓	✓	0009 0010 0023 0025 0028 0031 0033 00C5
Escape / Tribute / Maverick	3. 0L	4V	2001 – 2007	RCM	✓	✓	✓	✓	000C
Escape / Tribute / Maverick	3. 0L	4V	2003 – 2007	PAM	✓	✓	✓	✓	○
Escape / Tribute / Maverick	3. 0L	4V	2006 – 2007	4X4	✓	✓	✓	✓	○
Escape / Tribute / Maverick	3. 0L	4V	2006 – 2007	ABS	✓	✓	✓	✓	0005 0008
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	ABS	✓	✓	✓	✓	12

Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	ACM	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	APIM	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	BCM#1	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	DDM	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	DSM	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	DSP	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	FCDIM	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	FCIM	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	GPSM	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	HCM	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	HVAC	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	IPC	✓	✓	✓	✓	○

Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	IPM-B	✓	✓	✓	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	OCSM	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	PAM	✓	✓	○	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	PCM	✓	✓	✓	✓	0023 0025
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	PDM	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	PSCM	✓	✓	✓	○	00CB 00CC
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	RCM	✓	✓	✓	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	RFA	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	RGTM	✓	✓	✓	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	SASM	✓	✓	✓	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	SOD-L	✓	✓	✓	✓	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	SOD-R	✓	✓	✓	✓	○

Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharge d Direct Injection	2013	TRM	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	ABS	✓	✓	✓	✓	12
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	ACM	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	APIM	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	BCM#1	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	DDM	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	DSM	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	DSP	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	FCDIM	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	FCIM	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	GPSM	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharge d Direct Injection	2013	HCM	✓	✓	✓	✓	○

Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	HVAC	✓	✓	✓	✓	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	IPC	✓	✓	✓	✓	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	IPM-B	✓	✓	✓	○	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	OCSM	✓	✓	✓	✓	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	PAM	✓	✓	○	○	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	PCM	✓	✓	✓	✓	0023 0025
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	PDM	✓	✓	✓	✓	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	PSCM	✓	✓	✓	○	00CB 00CC
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	RCM	✓	✓	✓	○	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	RFA	✓	✓	✓	✓	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	RGTM	✓	✓	✓	○	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	SASM	✓	✓	✓	○	○

Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct Injection	2013	SOD-L	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct Injection	2013	SOD-R	✓	✓	✓	✓	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct Injection	2013	TRM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	ABS	✓	✓	✓	✓	12
Escape/Kuga	2. 5L	IVCT	2013	ACM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	APIM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	BCM#1	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	DDM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	DSM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	DSP	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	FCDIM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	FCIM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	GPSM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	HCM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	HVAC	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	IPC	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	IPM-B	✓	✓	✓	○	○
Escape/Kuga	2. 5L	IVCT	2013	OCSM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	PAM	✓	✓	○	○	○
Escape/Kuga	2. 5L	IVCT	2013	PCM	✓	✓	✓	✓	0023 0025
Escape/Kuga	2. 5L	IVCT	2013	PDM	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	PSCM	✓	✓	✓	○	00CB 00CC
Escape/Kuga	2. 5L	IVCT	2013	RCM	✓	✓	✓	○	○
Escape/Kuga	2. 5L	IVCT	2013	RFA	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	RGTM	✓	✓	✓	○	○
Escape/Kuga	2. 5L	IVCT	2013	SASM	✓	✓	✓	○	○
Escape/Kuga	2. 5L	IVCT	2013	SOD-L	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	SOD-R	✓	✓	✓	✓	○
Escape/Kuga	2. 5L	IVCT	2013	TRM	✓	✓	✓	✓	○

Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	4X4	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	ABS	✓	✓	✓	✓	0005 0008 0012
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	ACM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	FCIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	FDIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	GEM / SJB	✓	✓	✓	✓	000A 000F 0042
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	HVAC	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	IC	✓	✓	✓	✓	0005 0009
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	OCSM	✓	✓	✓	○	000C
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	PAM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	PCM	✓	✓	✓	✓	0010 0023 0025 0028 0031 0033
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	PSCM	✓	✓	○	○	0005 0053
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	RCM	✓	✓	✓	✓	5
Escape_/Tri bute / Mariner	2. 3L	DURATEC-HE / I4	2008	SDARS	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	4X4	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	ABS	✓	✓	✓	✓	0005 0012
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	ACM	✓	✓	✓	✓	5
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	BCM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	FCIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	FDIM	✓	✓	✓	✓	5
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	GEM / SJB	✓	✓	✓	✓	000A 000F 0042
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	HVAC	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	IC	✓	✓	✓	✓	0005 0009
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	OCSM	✓	✓	✓	○	000C

Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PAM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PCM	✓	✓	✓	✓	0010 0023 0025 0028 0031 0033 00C5
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PSCM	✓	✓	○	○	0005 0053
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	RCM	✓	✓	✓	✓	5
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	SDARS	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	TCM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009	SDARS	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	4X4	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	ABS	✓	✓	✓	✓	12
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	ACM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	APIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	FCIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	FDIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	GEM / SJB	✓	✓	✓	✓	000A 000F 0042
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	HVAC	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	IC	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	OCSM	✓	✓	✓	○	000C
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	PAM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	PCM	✓	✓	✓	✓	25
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	PSCM	✓	✓	○	○	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	RCM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	DURATEC-HE / I4	2010 - 2012	GPSM	✓	✓	✓	○	○
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009	SDARS	✓	✓	✓	✓	○

Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	4X4	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	ABS	✓	✓	✓	✓	5
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	ACM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	APIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	BCM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	FCIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	FDIM	✓	✓	✓	✓	5
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	GEM / SJB	✓	✓	✓	✓	000A 000F 0042
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	HVAC	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	IC	✓	✓	✓	✓	0009 0005
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	OCSM	✓	✓	✓	○	000C
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	PAM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	PCM	✓	✓	✓	✓	0023 0025 0010 0028 0031 0033
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	PSCM	✓	✓	○	○	0053 0005 00CC
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	RCM	✓	✓	✓	✓	5
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	TCM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2010 - 2012	ACCM#2	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	2. 5L	HEV / ATKINSON 4V	2010 - 2012	GPSM	✓	✓	✓	○	○
Escape_/Tri bute / Mariner	3. 0L	4V	2008 - 2009	SDARS	✓	✓	✓	✓	0005 0019
Escape_/Tri bute / Mariner	3. 0L	4V	2008 - 2012	4X4	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	3. 0L	4V	2008 - 2012	ABS	✓	✓	✓	✓	0005 0008 0012
Escape_/Tri bute / Mariner	3. 0L	4V	2008 - 2012	ACM	✓	✓	✓	✓	0017 0018
Escape_/Tri bute / Mariner	3. 0L	4V	2008 - 2012	FCIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	3. 0L	4V	2008 - 2012	FDIM	✓	✓	✓	✓	5

Escape_/Tri bute / Mariner	3. 0L	4V	2008 – 2012	GEM / SJB	✓	✓	✓	✓	000A 000F 0042
Escape_/Tri bute / Mariner	3. 0L	4V	2008 – 2012	HVAC	✓	✓	✓	✓	5
Escape_/Tri bute / Mariner	3. 0L	4V	2008 – 2012	IC	✓	✓	✓	✓	0009 0005
Escape_/Tri bute / Mariner	3. 0L	4V	2008 – 2012	OCSM	✓	✓	✓	○	000C
Escape_/Tri bute / Mariner	3. 0L	4V	2008 – 2012	PAM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	3. 0L	4V	2008 – 2012	PCM	✓	✓	✓	✓	0010 0023 0025 0028 0031 0033 0009 00C5
Escape_/Tri bute / Mariner	3. 0L	4V	2008 – 2012	PSCM	✓	✓	○	○	0005 0053
Escape_/Tri bute / Mariner	3. 0L	4V	2008 – 2012	RCM	✓	✓	✓	✓	5
Escape_/Tri bute / Mariner	3. 0L	4V	2009 – 2012	APIM	✓	✓	✓	✓	001C
Escape_/Tri bute / Mariner	3. 0L	4V	2010 – 2012	GPSM	✓	✓	✓	○	○
Escape_/Tri bute / Mariner	Other	Other	2012	4X4	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	Other	Other	2012	ABS	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	Other	Other	2012	ACM	✓	✓	✓	○	○
Escape_/Tri bute / Mariner	Other	Other	2012	APIM	✓	✓	✓	○	○
Escape_/Tri bute / Mariner	Other	Other	2012	FCIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	Other	Other	2012	FDIM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	Other	Other	2012	GEM / SJB	✓	✓	✓	✓	42
Escape_/Tri bute / Mariner	Other	Other	2012	GPSM	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	Other	Other	2012	HVAC	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	Other	Other	2012	IC	✓	✓	✓	✓	○
Escape_/Tri bute / Mariner	Other	Other	2012	OCSM	✓	✓	✓	○	○
Escape_/Tri bute / Mariner	Other	Other	2012	PAM	✓	✓	✓	○	○
Escape_/Tri bute / Mariner	Other	Other	2012	PSCM	✓	✓	○	○	○

Escape_/Tri bute / Mariner	Other	Other	2012	RCM	✓	✓	✓	✓	○
FAMILIA / LASER	1. 3L	B3	1998	ABS	✓	✓	✓	✓	○
FAMILIA / LASER	1. 3L	B3	1998	PCM	✓	✓	✓	✓	○
FAMILIA / LASER	1. 5L	ZL	1998 – 2000	ABS	✓	✓	✓	✓	○
FAMILIA / LASER	1. 5L	ZL	1998 – 2002	PCM	✓	✓	✓	✓	○
FAMILIA / LASER	1. 5L	ZL	2000 – 2002	ABS/TCS	✓	✓	✓	✓	○
FAMILIA / LASER	1. 8L	FP	1998	ABS	✓	✓	✓	✓	○
FAMILIA / LASER	1. 8L	FP	1998	PCM	✓	✓	✓	✓	○
FAMILIA / LASER	2. 0L	FS	1999 – 2000	ABS	✓	✓	✓	✓	○
FAMILIA / LASER	2. 0L	FS	1999 – 2002	PCM	✓	✓	✓	✓	○
FAMILIA / LASER	2. 0L	FS	2002	ABS/TCS	✓	✓	✓	✓	○
FAMILIA / LASER	2. 0L	RF	1998	ABS	✓	✓	✓	✓	○
FAMILIA / LASER	2. 0L	RF	1998	PCM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	ABS	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	EPS	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	GEM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	IC	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	IPDM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	PCM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	RCM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	ABS	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	EPS	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	GEM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	IC	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	IPDM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	PCM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	RCM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	ABS	✓	✓	✓	✓	○

FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	EPS	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	GEM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	IC	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	IPDM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	PCM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	RCM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	ABS	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	EPS	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	GEM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	IC	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	IPDM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	PCM	✓	✓	✓	✓	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	RCM	✓	✓	✓	✓	○
FAMILIA WAGON/VAN (B*Y11_5000 00)	1. 3L	QG13	1999 – 2002	PCM	✓	✓	✓	✓	○
FAMILIA WAGON/VAN (B*Y11_5000 00)	1. 3L	QG13	2002	ABS	✓	✓	✓	✓	○
FAMILIA WAGON/VAN (B*Y11_5000 00)	1. 5L	QG15	1999 – 2002	PCM	✓	✓	✓	✓	○
FAMILIA WAGON/VAN (B*Y11_5000 00)	1. 5L	QG15	2002	ABS	✓	✓	✓	✓	○
FAMILIA WAGON/VAN (B*Y11_5000 00)	1. 8L	QG18	1999 – 2002	PCM	✓	✓	✓	✓	○
FRIENDEE / FREDA / BONGO FRIENDEE	2. 0L	FE	1997 – 2002	PCM	✓	✓	✓	✓	○
FRIENDEE / FREDA / BONGO FRIENDEE	2. 0L	FE	2002	TCM	✓	✓	✓	✓	○
FRIENDEE / FREDA / BONGO FRIENDEE	2. 5L	WL_T	1999	PCM	✓	✓	✓	✓	○

Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996 – 1999	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996 – 1999	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996 – 1999	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996 – 1999	PCM	✓	✓	✓	✓	0025 0023
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1999	ECS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999	ECS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999	GEM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999	PCM	✓	✓	✓	✓	0023 0025
Fiesta / Mazda_121 / Bantam	1. 25L	Zetec-SE	1996 – 2000	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 25L	Zetec-SE	1996 – 2000	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 25L	Zetec-SE	1996 – 2000	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 25L	Zetec-SE	1996 – 2000	PCM	✓	✓	✓	✓	0023 0025
Fiesta / Mazda_121 / Bantam	1. 25L	Zetec-SE	1999 – 2000	ECS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 25L	Zetec-SE	1999 – 2000	GEM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 25L	Zetec-SE	2000	PATS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 3L	Endura-E	1996 – 1999	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 3L	Endura-E	1996 – 1999	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 3L	Endura-E	1996 – 1999	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 3L	Endura-E	1996 – 1999	PCM	✓	✓	✓	✓	0023 0025 0009
Fiesta / Mazda_121 / Bantam	1. 3L	Endura-E	1999	ECS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 3L	Endura-E	1999	GEM	✓	✓	✓	✓	○

Fiesta / Mazda_121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	PT-E	2000	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	PT-E	2000	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	PT-E	2000	ECS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	PT-E	2000	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	PT-E	2000	PCM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	PCM	✓	✓	✓	✓	0023 0025 0009
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1999	ECS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1999	GEM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Other	2001	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Other	2001	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Other	2001	GEM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Other	2001	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Other	2001	PATS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Other	2001	PCM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999	ECS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999	GEM	✓	✓	✓	✓	○

Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999	PCM	✓	✓	✓	✓	0023 0025
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec-SE	2000	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec-SE	2000	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec-SE	2000	ECS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec-SE	2000	GEM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec-SE	2000	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec-SE	2000	PCM	✓	✓	✓	✓	0009 0023 0025
Fiesta / Mazda_121 / Bantam	1. 8L	Endura DI	2000	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura DI	2000	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura DI	2000	ECS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura DI	2000	FIP	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura DI	2000	GEM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura DI	2000	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura DI	2000	PATS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura DI	2000	PCM	✓	✓	✓	✓	9
Fiesta / Mazda_121 / Bantam	1. 8L	Endura-DE	1996 - Other	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura-DE	1996 - Other	CSM	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura-DE	1996 - Other	ECS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura-DE	1996 - Other	HEC	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura-DE	1996 - Other	PATS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Endura-DE	1996 - Other	PCM	○	○	✓	○	○
Fiesta / Mazda_121 / Bantam	1. 8L	Zetec	1992 - 1994	ABS/TCS	✓	✓	✓	✓	○
Fiesta / Mazda_121 / Bantam	1. 8L	Zetec	1992 - 1994	CSM	✓	✓	✓	✓	○

Fiesta / Mazda_121 / Bantam	1. 8L	Zetec	1992 - 1994	HEC	✓	✓	✓	✓	○
LAPUTA	660cc	F6A-T	1998	TCM	✓	✓	✓	✓	○
LAPUTA	660cc	F6A-T	1998 - Other	ABS	✓	✓	✓	✓	○
LAPUTA	660cc	F6A-T	1998 - Other	PCM	✓	✓	✓	✓	○
LAPUTA	660cc	F6A-T	1998 - Other	RCM	✓	✓	✓	✓	○
LAPUTA	660cc	K6A	2000 - Other	ABS	✓	✓	✓	✓	○
LAPUTA	660cc	K6A	2000 - Other	PCM	✓	✓	✓	✓	○
LAPUTA	660cc	K6A	2000 - Other	RCM	✓	✓	✓	✓	○
LAPUTA	660cc	K6A_T	1999 - Other	ABS	✓	✓	✓	✓	○
LAPUTA	660cc	K6A_T	1999 - Other	PCM	✓	✓	✓	✓	○
LAPUTA	660cc	K6A_T	1999 - Other	RCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 3L	B3	1996 - Other	ABS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 3L	B3	1996 - Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 3L	B3	2000	ABS/TCS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 3L	Other	Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 5L	Other	Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 5L	Z5	1996 - Other	ABS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 5L	Z5	1996 - Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 5L	ZL	1998 - Other	ABS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 5L	ZL	1998 - Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 6L	B6	1996 - Other	ABS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 6L	B6	1996 - Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 6L	Other	Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 6L	ZM	1998 - Other	ABS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 6L	ZM	1998 - Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 6L	ZM	2000	ABS/TCS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 8L	BP	1996 - Other	ABS	✓	✓	✓	✓	○

LASER / 323 / TIERRA	1. 8L	BP	1996 – Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 8L	FP	1998 – Other	ABS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 8L	FP	1998 – Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	1. 8L	Other	Other	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	2. 0L	FS	2000	ABS/TCS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	2. 0L	FS	2000 – 2001	ABS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	2. 0L	FS	2000 – 2001	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	2. 0L	RF	1998	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	2. 0L	RF	1998 – Other	ABS	✓	✓	✓	✓	○
LASER / 323 / TIERRA	2. 0L	RF-T	1998 – 2000	PCM	✓	✓	✓	✓	○
LASER / 323 / TIERRA	2. 0L	RF-T	2000	ABS	✓	✓	✓	✓	○
MARVIE	2. 5L	G5	1996	PCM	✓	✓	✓	✓	○
MAZDA 929	3. 0L	JE	1997	PCM	✓	✓	✓	✓	○
MAZDA2 (China)	1. 3L	ZJ	2007	ABS	✓	✓	✓	✓	○
MAZDA2 (China)	1. 3L	ZJ	2007	BCM/GEM	✓	✓	✓	✓	○
MAZDA2 (China)	1. 3L	ZJ	2007	EPS	✓	✓	✓	✓	○
MAZDA2 (China)	1. 3L	ZJ	2007	IC	✓	✓	✓	✓	○
MAZDA2 (China)	1. 3L	ZJ	2007	PCM	✓	✓	✓	✓	○
MAZDA2 (China)	1. 3L	ZJ	2007	RCM	✓	✓	✓	✓	○
MAZDA2 (China)	1. 3L	ZJ	2007	RKE	✓	✓	✓	✓	○
MAZDA2 (China)	1. 5L	ZY	2007	ABS	✓	✓	✓	✓	○
MAZDA2 (China)	1. 5L	ZY	2007	BCM/GEM	✓	✓	✓	✓	○
MAZDA2 (China)	1. 5L	ZY	2007	EPS	✓	✓	✓	✓	○
MAZDA2 (China)	1. 5L	ZY	2007	IC	✓	✓	✓	✓	○
MAZDA2 (China)	1. 5L	ZY	2007	PCM	✓	✓	✓	✓	○
MAZDA2 (China)	1. 5L	ZY	2007	RCM	✓	✓	✓	✓	○
MAZDA2 (China)	1. 5L	ZY	2007	RKE	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 25L	MZI	2002 – 2006	ABS/TCS	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 25L	MZI	2002 – 2006	IC	✓	✓	✓	✓	○

MAZDA2 (EURO STG3/4 Specs)	1. 25L	MZI	2002 – 2006	PCM	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 25L	MZI	2002 – 2006	RCM	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZI	2002 – 2006	ABS/TCS	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZI	2002 – 2006	IC	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZI	2002 – 2006	PCM	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZI	2002 – 2006	RCM	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZI	2002 – 2006	TCM	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZ_CD_DI	2002 – 2006	ABS/TCS	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZ_CD_DI	2002 – 2006	IC	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZ_CD_DI	2002 – 2006	PCM	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZ_CD_DI	2002 – 2006	RCM	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZ_CD_DI	2002 – 2006	TCM	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 6L	MZI	2002	TCM	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 6L	MZI	2002 – 2006	ABS/TCS	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 6L	MZI	2002 – 2006	IC	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 6L	MZI	2002 – 2006	PCM	✓	✓	✓	✓	○
MAZDA2 (EURO STG3/4 Specs)	1. 6L	MZI	2002 – 2006	RCM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	ABS	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	BCM/GEM	✓	✓	✓	✓	○

MAZDA2 (Europe)	1. 3L	ZJ	2007	EPS	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	IC	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	PCM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	RCM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	RKE	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	VSM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 4L	Y4	2007	ABS	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 4L	Y4	2007	BCM/GEM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 4L	Y4	2007	EPS	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 4L	Y4	2007	IC	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 4L	Y4	2007	PCM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 4L	Y4	2007	RCM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 4L	Y4	2007	RKE	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 4L	Y4	2007	VSM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 5L	ZY	2007	ABS	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 5L	ZY	2007	BCM/GEM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 5L	ZY	2007	EPS	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 5L	ZY	2007	IC	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 5L	ZY	2007	PCM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 5L	ZY	2007	RCM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 5L	ZY	2007	RKE	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 5L	ZY	2007	VSM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 6L	Y6	2008	ABS	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 6L	Y6	2008	BCM/GEM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 6L	Y6	2008	EPS	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 6L	Y6	2008	IC	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 6L	Y6	2008	PCM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 6L	Y6	2008	RCM	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 6L	Y6	2008	RKE	✓	✓	✓	✓	○
MAZDA2 (Europe)	1. 6L	Y6	2008	VSM	✓	✓	✓	✓	○
MAZDA3 (China / General)	1. 6L	Z6	2007	ABS	✓	✓	✓	✓	○
MAZDA3 (China / General)	1. 6L	Z6	2007	EATC	✓	✓	✓	✓	○
MAZDA3 (China / General)	1. 6L	Z6	2007	GEM	✓	✓	✓	✓	○
MAZDA3 (China / General)	1. 6L	Z6	2007	IC	✓	✓	✓	✓	○

MAZDA3 (China / General)	1. 6L	Z6	2007	PCM	✓	✓	✓	✓	○
MAZDA3 (China / General)	1. 6L	Z6	2007	RCM	✓	✓	✓	✓	○
MAZDA3 (China / General)	1. 6L	Z6	2007	RKE	✓	✓	✓	✓	○
MAZDA3 (China / General)	2. 0L	LF	2007	ABS	✓	✓	✓	✓	○
MAZDA3 (China / General)	2. 0L	LF	2007	EATC	✓	✓	✓	✓	○
MAZDA3 (China / General)	2. 0L	LF	2007	EPS	✓	✓	✓	✓	○
MAZDA3 (China / General)	2. 0L	LF	2007	GEM	✓	✓	✓	✓	○
MAZDA3 (China / General)	2. 0L	LF	2007	IC	✓	✓	✓	✓	○
MAZDA3 (China / General)	2. 0L	LF	2007	PCM	✓	✓	✓	✓	○
MAZDA3 (China / General)	2. 0L	LF	2007	RCM	✓	✓	✓	✓	○
MAZDA3 (China / General)	2. 0L	LF	2007	RKE	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	ABS	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	EATC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	GEM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	IC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	PCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	RCM	✓	✓	✓	✓	○

MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2006	RKE	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	ABS	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	EATC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	EPS	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	FACM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	GEM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	IC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	PCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	RCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2006	RKE	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	ABS	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	EATC	✓	✓	✓	✓	○

MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	GEM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	IC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	PCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	RCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2006	RKE	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	ABS	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	EATC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	EPS	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	GEM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	IC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	PCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	RCM	✓	✓	✓	✓	○

MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2006	RKE	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	ABS	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	EATC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	FFH	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	GEM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	IC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	PCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	RCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	RKE	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	ABS	✓	✓	✓	✓	001E
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	EATC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	EPS	✓	✓	✓	✓	○

MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	GEM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	IC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	PCM	✓	✓	✓	✓	9
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	RCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2006	RKE	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	ABS	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	EATC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	GEM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	IC	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	PCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	RCM	✓	✓	✓	✓	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	RKE	✓	✓	✓	✓	○

MAZDA3 (North America / General)	1. 6L	Z6	2006	PCM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	1. 6L	Z6	2006	RKE	✓	✓	✓	✓	○
MAZDA3 (North America / General)	1. 6L	Z6	2006	TPM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	1. 6L	Z6	2006 – 2012	ABS	✓	✓	✓	✓	○
MAZDA3 (North America / General)	1. 6L	Z6	2006 – 2012	GEM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	1. 6L	Z6	2006 – 2012	IC	✓	✓	✓	✓	○
MAZDA3 (North America / General)	1. 6L	Z6	2006 – 2012	RCM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	ABS	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	EPS	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	GEM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	IC	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	PCM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	RCM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	TPM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 0L	LF	2006	EATC	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 0L	LF	2006	RKE	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3	2004 – 2009	ABS	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3	2004 – 2009	EATC	✓	✓	✓	✓	○

MAZDA3 (North America / General)	2. 3L	L3	2004 - 2009	EPS	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3	2004 - 2009	GEM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3	2004 - 2009	IC	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3	2004 - 2009	PCM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3	2004 - 2009	RCM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3	2004 - 2009	TPM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3	2006	RKE	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3	2006 - 2009	TCM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3_T	2007 - 2009	ABS	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3_T	2007 - 2009	EATC	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3_T	2007 - 2009	GEM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3_T	2007 - 2009	IC	✓	✓	✓	○	○
MAZDA3 (North America / General)	2. 3L	L3_T	2007 - 2009	PCM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3_T	2007 - 2009	RCM	✓	✓	✓	✓	○
MAZDA3 (North America / General)	2. 3L	L3_T	2007 - 2009	TPM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i- MAX	1. 8L	L8	2005	GEM	✓	✓	✓	✓	○

MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	1. 8L	L8	2005 – 2007	ABS	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	1. 8L	L8	2005 – 2007	EATC	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	1. 8L	L8	2005 – 2007	EPS	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	1. 8L	L8	2005 – 2007	IC	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	1. 8L	L8	2005 – 2007	LPSDM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	1. 8L	L8	2005 – 2007	PCM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	1. 8L	L8	2005 – 2007	RCM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	1. 8L	L8	2005 – 2007	RKE	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	1. 8L	L8	2005 – 2007	RPSDM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	1. 8L	L8	2007	TCM	✓	✓	✓	✓	○

MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2005 – 2007	ABS	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2005 – 2007	EATC	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2005 – 2007	EPS	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2005 – 2007	GEM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2005 – 2007	IC	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2005 – 2007	PCM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2005 – 2007	RCM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2005 – 2007	RKE	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2007	LPSDM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2007	RPSDM	✓	✓	✓	✓	○

MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	LF	2007	TCM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	RF-T	2005 - 2007	ABS	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	RF-T	2005 - 2007	EATC	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	RF-T	2005 - 2007	FFH	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	RF-T	2005 - 2007	GEM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	RF-T	2005 - 2007	IC	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	RF-T	2005 - 2007	PCM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	RF-T	2005 - 2007	RCM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	RF-T	2005 - 2007	RKE	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i MAX	2. 0L	RF-T	2007	LPSDM	✓	✓	✓	✓	○

MAZDA5 (EURO STG3/4/5 and General Specs.) / i- MAX	2. 0L	RF-T	2007	RPSDM	✓	✓	✓	✓	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i- MAX	2. 0L	RF-T	2007	TCM	✓	✓	✓	✓	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	ABS	✓	✓	✓	✓	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	EATC	✓	✓	✓	✓	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	EPS	✓	✓	✓	✓	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	GEM	✓	✓	✓	✓	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	IC	✓	✓	✓	✓	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	PCM	✓	✓	✓	✓	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	RCM	✓	✓	✓	✓	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	TPM	✓	✓	✓	✓	○
MAZDA5 (North America Specs.)	2. 3L	L3	2008 - 2010	TCM	✓	✓	✓	✓	○
MAZDA6 (China)	2. 0L	LF	2007	ABS	✓	✓	✓	✓	○
MAZDA6 (China)	2. 0L	LF	2007	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (China)	2. 0L	LF	2007	EATC	✓	✓	✓	✓	○
MAZDA6 (China)	2. 0L	LF	2007	EPS	✓	✓	✓	✓	○
MAZDA6 (China)	2. 0L	LF	2007	IC	✓	✓	✓	✓	○
MAZDA6 (China)	2. 0L	LF	2007	LCM	✓	✓	✓	✓	○
MAZDA6 (China)	2. 0L	LF	2007	PCM	✓	✓	✓	✓	○
MAZDA6 (China)	2. 0L	LF	2007	RCM	✓	✓	✓	✓	○
MAZDA6 (China)	2. 0L	LF	2007	RKE	✓	✓	✓	✓	○
MAZDA6 (China)	2. 0L	LF	2007	TCM	✓	✓	✓	✓	○
MAZDA6 (China)	2. 5L	L5	2007	ABS	✓	✓	✓	✓	○

MAZDA6 (China)	2. 5L	L5	2007	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (China)	2. 5L	L5	2007	EATC	✓	✓	✓	✓	○
MAZDA6 (China)	2. 5L	L5	2007	EPS	✓	✓	✓	✓	○
MAZDA6 (China)	2. 5L	L5	2007	IC	✓	✓	✓	✓	○
MAZDA6 (China)	2. 5L	L5	2007	LCM	✓	✓	✓	✓	○
MAZDA6 (China)	2. 5L	L5	2007	PCM	✓	✓	✓	✓	○
MAZDA6 (China)	2. 5L	L5	2007	RCM	✓	✓	✓	✓	○
MAZDA6 (China)	2. 5L	L5	2007	RKE	✓	✓	✓	✓	○
MAZDA6 (China)	2. 5L	L5	2007	TCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	ABS/TCS	✓	✓	✓	✓	001E
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	IC	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	LHID	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	PCM	✓	✓	✓	✓	9
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	RCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	RHID	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	GEM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	LCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	RKE	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	ABS/TCS	✓	✓	✓	✓	○

MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	IC	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	LHID	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	PCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	RCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	RHID	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	GEM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	LCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	RKE	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	TCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	ABS/TCS	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	FFH	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	IC	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	LHID	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	PCM	✓	✓	✓	✓	○

MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	RCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	RHID	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2005	GEM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2005	LCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2005	RKE	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002	4X4	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	ABS/TCS	✓	✓	✓	✓	001E
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	IC	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	LHID	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	PCM	✓	✓	✓	✓	9
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	RCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	RHID	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	TCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2005	GEM	✓	✓	✓	✓	○

MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2005	LCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2005	RKE	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	4X4	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	ABS/TCS	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	GEM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	IC	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	LCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	LHID	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	PCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	RCM	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	RHID	✓	✓	✓	✓	○
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	RKE	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	ABS	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	EATC	✓	✓	✓	✓	○

MAZDA6 (Europe and General)	1. 8L	L8	2007	EPS	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	IC	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	LCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	PCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	RCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	RKE	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	RVM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	TCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	ABS	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	EATC	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	EPS	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	IC	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	LCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	PCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	RCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	RKE	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	RVM	✓	✓	✓	✓	○

MAZDA6 (Europe and General)	2. 0L	LF	2007	TCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	ABS	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	EATC	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	EPS	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	FFH	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	IC	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	LCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	PCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	RCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	RKE	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	RVM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	TCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	ABS	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	EATC	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	EPS	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	FFH	✓	✓	✓	✓	○

MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	IC	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	LCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	PCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	RCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	RKE	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	RVM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 – 2008	TCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	ABS	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	EATC	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	EPS	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	IC	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	LCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	PCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	RCM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	RKE	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	RVM	✓	✓	✓	✓	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	TCM	✓	✓	✓	✓	○

MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	ABS	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	BSML	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	BSMR	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	EATC	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	IC	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	LCM	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	PCM	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	RCM	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	RKE	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 – 2010	TCM	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	ABS	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	BSML	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	BSMR	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	EATC	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	IC	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	LCM	✓	✓	✓	✓	○

MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	PCM	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	RCM	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	RKE	✓	✓	✓	✓	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	TCM	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	ABS	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	BSML	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	BSMR	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	EATC	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	IC	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	LCM	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	PCM	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	RCM	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	RKE	✓	✓	✓	✓	○
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	TCM	✓	✓	✓	✓	○
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	ABS	✓	✓	✓	✓	○
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	BCM/GEM	✓	✓	✓	✓	○
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	BSML	✓	✓	✓	✓	○

MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	BSMR	✓	✓	✓	✓	○
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	EATC	✓	✓	✓	✓	○
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	IC	✓	✓	✓	✓	○
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	LCM	✓	✓	✓	✓	○
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	PCM	✓	✓	✓	✓	○
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	RCM	✓	✓	✓	✓	○
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	RKE	✓	✓	✓	✓	○
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	TCM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3	2003 – 2008	ABS/TCS	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3	2003 – 2008	IC	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3	2003 – 2008	PCM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3	2003 – 2008	RCM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3	2003 – 2008	TCM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3	2006 – 2008	GEM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3	2008	TPM	✓	✓	✓	○	○
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	4X4	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	ABS/TCS	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	GEM	✓	✓	✓	✓	○

MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	IC	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	PCM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	RCM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	RKE	✓	✓	✓	✓	○
MAZDA6 (North America/General)	3. 0L	AJ	2003 – 2008	PCM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	3. 0L	AJ	2003 – 2008	TCM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	3. 0L	AJ	2003 – Other	ABS/TCS	✓	✓	✓	✓	○
MAZDA6 (North America/General)	3. 0L	AJ	2003 – Other	IC	✓	✓	✓	✓	○
MAZDA6 (North America/General)	3. 0L	AJ	2003 – Other	RCM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	3. 0L	AJ	2006 – 2008	GEM	✓	✓	✓	✓	○
MAZDA6 (North America/General)	3. 0L	AJ	2008	TPM	✓	✓	✓	○	○
MILLENNIA / EUNOS 800	2. 0L	KF	1998 – 2000	ABS	✓	✓	✓	✓	○
MILLENNIA / EUNOS 800	2. 3L	KJ	1998 – 2000	ABS	✓	✓	✓	✓	○
MILLENNIA / EUNOS 800	2. 5L	KL	1998 – 2000	ABS	✓	✓	✓	✓	○
MILLENNIA / EUNOS 800	2. 5L	KL	2002	ABS/TCS	✓	✓	✓	✓	○
MILLENNIA / EUNOS 800	2. 5L	KL	2002	PCM	✓	✓	✓	✓	○
MPV (Europe/General)	2. 0L	FS	1999	ABS	✓	✓	✓	✓	○
MPV (Europe/General)	2. 0L	FS	1999 – 2000	PCM	✓	✓	✓	✓	○
MPV (Europe/General)	2. 0L	FS	2000	ABS/TCS	✓	✓	✓	✓	○
MPV (Europe/General)	2. 0L	RF-T	2002 – 2004	ABS/TCS	✓	✓	✓	✓	○

MPV (Europe/General)	2. 0L	RF-T	2002 – 2004	FFH	✓	✓	✓	✓	○
MPV (Europe/General)	2. 0L	RF-T	2002 – 2004	PCM	✓	✓	✓	✓	○
MPV (Europe/General)	2. 3L	L3	2002	ABS/TCS	✓	✓	✓	✓	○
MPV (Europe/General)	2. 3L	L3	2002	PCM	✓	✓	✓	✓	○
MPV (Europe/General)	2. 5L	GY	1999 – 2000	ABS	✓	✓	✓	✓	○
MPV (Europe/General)	2. 5L	GY	1999 – 2000	ABS/TCS	✓	✓	✓	✓	○
MPV (Europe/General)	2. 5L	GY	1999 – 2000	PCM	✓	✓	✓	✓	00C5 00C6
MPV (Europe/General)	3. 0L	AJ	2002	ABS/TCS	✓	✓	✓	✓	○
MPV (Europe/General)	3. 0L	AJ	2002	PCM	✓	✓	✓	✓	○
MPV (Europe/General)	3. 0L	AJ	2002	TCM	✓	✓	✓	✓	○
MPV (JPN/General)	2. 0L	FS	1999	ABS	✓	✓	✓	✓	○
MPV (JPN/General)	2. 0L	FS	1999	PCM	✓	✓	✓	✓	○
MPV (JPN/General)	2. 3L	L3	2002 – 2004	ABS/TCS	✓	✓	✓	✓	○
MPV (JPN/General)	2. 3L	L3	2002 – 2004	PCM	✓	✓	✓	✓	00C5 00C6
MPV (JPN/General)	2. 5L	GY	1999	ABS	✓	✓	✓	✓	○
MPV (JPN/General)	2. 5L	GY	1999	PCM	✓	✓	✓	✓	00C5 00C6
MPV (JPN/General)	3. 0L	AJ	2002 – 2004	ABS/TCS	✓	✓	✓	✓	○
MPV (JPN/General)	3. 0L	AJ	2002 – 2004	PCM	✓	✓	✓	✓	○
MPV (JPN/General)	3. 0L	AJ	2002 – 2004	TCM	✓	✓	✓	✓	○
MPV (North America / General)	2. 5L	GY	2000 – 2001	ABS/TCS	✓	✓	✓	✓	○
MPV (North America / General)	2. 5L	GY	2000 – 2001	PCM	✓	✓	✓	✓	00C5 00C6
MPV (North America / General)	3. 0L	AJ	2002 – 2006	ABS/TCS	✓	✓	✓	✓	○

MPV (North America / General)	3. 0L	AJ	2002 - 2006	PCM	✓	✓	✓	✓	00C5 00C6
MPV (North America / General)	3. 0L	AJ	2002 - 2006	TCM	✓	✓	✓	✓	00C5
MPV (North America / General)	3. 0L	AJ	2004 - 2006	RCM	✓	✓	✓	✓	○
MPV (North America / General)	3. 0L	JE	1997 - 1999	PCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	4X4	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	ABS	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	AM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	GEM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	HCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	IC	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	ICCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	LCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	LPSDM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	LTM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	PCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	RCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	RKE	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General 1)	2. 3L	L3	2006	RPSDM	✓	✓	✓	✓	○

MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3	2006	TCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	4X4	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	ABS	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	AM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	GEM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	HCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	IC	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	ICCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	LCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	LPSDM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	LTM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	PCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	RCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	RKE	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	RPSDM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 3L	L3_T	2006	TCM	✓	✓	✓	○	○
MPV / Mazda8 (JPN/Genera 1)	2. 5L	L5	2012	ABS	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/Genera 1)	2. 5L	L5	2012	AM	✓	✓	✓	✓	○

MPV / Mazda8 (JPN/General_1)	2.5L	L5	2012	GEM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General_1)	2.5L	L5	2012	HCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General_1)	2.5L	L5	2012	ICCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General_1)	2.5L	L5	2012	LCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General_1)	2.5L	L5	2012	LPSDM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General_1)	2.5L	L5	2012	LTM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General_1)	2.5L	L5	2012	RCM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General_1)	2.5L	L5	2012	RKE	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General_1)	2.5L	L5	2012	RPSDM	✓	✓	✓	✓	○
MPV / Mazda8 (JPN/General_1)	2.5L	L5	2012	TCM	✓	✓	✓	✓	○
MX-5 (Europe / General_1 Specs.)	1.8L	L8	2005	TCM	✓	✓	✓	✓	○
MX-5 (Europe / General_1 Specs.)	1.8L	L8	2005 - 2008	ABS	✓	✓	✓	✓	001E
MX-5 (Europe / General_1 Specs.)	1.8L	L8	2005 - 2008	IC	✓	✓	✓	✓	○
MX-5 (Europe / General_1 Specs.)	1.8L	L8	2005 - 2008	PCM	✓	✓	✓	✓	○
MX-5 (Europe / General_1 Specs.)	1.8L	L8	2005 - 2008	RCM	✓	✓	✓	✓	○
MX-5 (Europe / General_1 Specs.)	1.8L	L8	2005 - 2008	RHT	✓	✓	✓	✓	○
MX-5 (Europe / General_1 Specs.)	1.8L	L8	2005 - 2008	RKE	✓	✓	✓	✓	○
MX-5 (Europe / General_1 Specs.)	2.0L	LF	2005 - 2008	ABS	✓	✓	✓	✓	○

MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	IC	✓	✓	✓	✓	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	PCM	✓	✓	✓	✓	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	RCM	✓	✓	✓	✓	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	RHT	✓	✓	✓	✓	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	RKE	✓	✓	✓	✓	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	TCM	✓	✓	✓	✓	○
MX-5 (North America / General Specs.)	2. 0L	LF	2006 - Other	ABS	✓	✓	✓	✓	5
MX-5 (North America / General Specs.)	2. 0L	LF	2006 - Other	IC	✓	✓	✓	✓	5
MX-5 (North America / General Specs.)	2. 0L	LF	2006 - Other	PCM	✓	✓	✓	✓	○
MX-5 (North America / General Specs.)	2. 0L	LF	2006 - Other	RCM	✓	✓	✓	✓	5
MX-5 (North America / General Specs.)	2. 0L	LF	2006 - Other	RKE	✓	✓	✓	✓	5
MX-5 (North America / General Specs.)	2. 0L	LF	2006 - Other	TCM	✓	✓	✓	✓	○
MX-5 (North America / General Specs.)	2. 0L	LF	2007 - 2010	RHT	✓	✓	✓	✓	○
MX-5 MIATA	1. 8L	BP	1997 - 2005	PCM	✓	✓	✓	✓	○
MX-5 MIATA	1. 8L	BP	2001 - 2005	ABS/TCS	✓	✓	✓	✓	○
MX-5 MIATA	1. 8L	BP Turbo	2004	ABS/TCS	✓	✓	✓	✓	○
MX-5 MIATA	1. 8L	BP Turbo	2004	PCM	✓	✓	✓	✓	○
MX_5	1. 6L	B6	2000	ABS/TCS	✓	✓	✓	✓	○
MX_5	1. 6L	B6	2000	PCM	✓	✓	✓	✓	○
MX_5	1. 8L	BP	2000	ABS/TCS	✓	✓	✓	✓	○

MX_5	1. 8L	BP	2000	PCM	✓	✓	✓	✓	○
Millenia	2. 3L	KJ	1997 – 2001	PCM	✓	✓	✓	✓	○
Millenia	2. 3L	KJ	2000 – 2001	ABS/TCS	✓	✓	✓	✓	○
Millenia	2. 5L	KL	1997 – 2001	PCM	✓	✓	✓	✓	○
Millenia	2. 5L	KL	2000 – 2001	ABS/TCS	✓	✓	✓	✓	○
PREMACY	1. 8L	FP	1999	ABS	✓	✓	✓	✓	○
PREMACY	1. 8L	FP	2000	ABS/TCS	✓	✓	✓	✓	○
PREMACY	1. 8L	FP	2000	PCM	✓	✓	✓	✓	○
PREMACY	2. 0L	FS	2001	ABS	✓	✓	✓	✓	○
PREMACY	2. 0L	FS	2001	ABS/TCS	✓	✓	✓	✓	○
PREMACY	2. 0L	FS	2001	PCM	✓	✓	✓	✓	○
PREMACY	2. 0L	RF-T	1999 – 2000	ABS	✓	✓	✓	✓	○
PREMACY	2. 0L	RF-T	1999 – 2003	PCM	✓	✓	✓	✓	○
PREMACY	2. 0L	RF-T	2000 – 2003	ABS/TCS	✓	✓	✓	✓	○
PREMACY / IXION	1. 8L	FP	1999	ABS	✓	✓	✓	✓	○
PREMACY / IXION	1. 8L	FP	1999 – 2002	PCM	✓	✓	✓	✓	○
PREMACY / IXION	1. 8L	FP	2002	ABS/TCS	✓	✓	✓	✓	○
PREMACY / IXION	1. 8L	FP_DE	1999	ABS	✓	✓	✓	✓	○
PREMACY / IXION	1. 8L	FP_DE	1999	PCM	✓	✓	✓	✓	○
PREMACY / IXION	2. 0L	FS	2001	ABS/TCS	✓	✓	✓	✓	○
PREMACY / IXION	2. 0L	FS	2001	PCM	✓	✓	✓	✓	○
PREMACY / IXION	2. 0L	RF-T	1999	ABS	✓	✓	✓	✓	○
PREMACY / IXION	2. 0L	RF-T	1999	PCM	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	4X4	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	ABS	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	ACU	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	BCM/GEM	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	EATC	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	EPS	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	IC	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	LPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	PCM	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	RCM	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	RKE	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	RPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 6L	Y6	Other	TCM	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 8L	L8	Other	ABS	✓	✓	✓	✓	001E
PREMACY / MAZDA5	1. 8L	L8	Other	ACU	✓	✓	✓	✓	○

PREMACY / MAZDA5	1. 8L	L8	Other	BCM/GEM	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 8L	L8	Other	EATC	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 8L	L8	Other	EPS	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 8L	L8	Other	IC	✓	✓	✓	✓	001A
PREMACY / MAZDA5	1. 8L	L8	Other	LPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 8L	L8	Other	PCM	✓	✓	✓	✓	9
PREMACY / MAZDA5	1. 8L	L8	Other	RCM	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 8L	L8	Other	RKE	✓	✓	✓	✓	○
PREMACY / MAZDA5	1. 8L	L8	Other	RPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	4X4	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	ABS	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	ACU	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	BCM/GEM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	EATC	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	EPS	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	IC	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	LPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	PCM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	RCM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	RKE	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	RPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 0L	LF	Other	TCM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 5L	L5	Other	ABS	✓	✓	✓	✓	001E
PREMACY / MAZDA5	2. 5L	L5	Other	ACU	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 5L	L5	Other	BCM/GEM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 5L	L5	Other	EATC	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 5L	L5	Other	EPS	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 5L	L5	Other	IC	✓	✓	✓	✓	001A
PREMACY / MAZDA5	2. 5L	L5	Other	LPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 5L	L5	Other	PCM	✓	✓	✓	✓	9
PREMACY / MAZDA5	2. 5L	L5	Other	RCM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 5L	L5	Other	RKE	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 5L	L5	Other	RPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5	2. 5L	L5	Other	TCM	✓	✓	✓	○	○

PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	4X4	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	ABS	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	EATC	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	EPS	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	GEM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	IC	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	PCM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	RCM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	RKE	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2006 - 2007	LPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2006 - 2007	RPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2006 - 2007	TCM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	ABS	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	EATC	✓	✓	✓	✓	○

PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	EPS	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	GEM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	IC	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	PCM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	RCM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	RKE	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2007	LPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2007	RPSDM	✓	✓	✓	✓	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2007	TCM	✓	✓	✓	✓	○
PROBE / MX- 6	2. 0L	Other	1996 - 1997	PCM	✓	✓	✓	✓	0023 0025
PROBE / MX- 6	2. 5L	KL	1996 - 1997	PCM	✓	✓	✓	✓	○
PROCEED	2. 5L	G5	1996	PCM	✓	✓	✓	✓	○
PROCEED	2. 6L	G6	1996	PCM	✓	✓	✓	✓	○
PROTEGE	1. 5L	Z5	1997 - 1998	PCM	✓	✓	✓	✓	○
PROTEGE	1. 6L	ZM	1999 - 2001	PCM	✓	✓	✓	✓	○
PROTEGE	1. 6L	ZM	2000 - 2001	ABS/TCS	✓	✓	✓	✓	○
PROTEGE	1. 8L	BP	1997 - 1998	PCM	✓	✓	✓	✓	○
PROTEGE	1. 8L	FP	1999 - 2000	PCM	✓	✓	✓	✓	○
PROTEGE	1. 8L	FP	2000	ABS/TCS	✓	✓	✓	✓	○
PROTEGE	2. 0L	FS	2001 - 2003	ABS/TCS	✓	✓	✓	✓	○
PROTEGE	2. 0L	FS	2001 - 2003	PCM	✓	✓	✓	✓	○
PROTEGE	2. 0L	FS_T	2003	ABS/TCS	✓	✓	✓	✓	○
PROTEGE	2. 0L	FS_T	2003	PCM	✓	✓	✓	✓	○
ROADSTER / MX-5	1. 6L	B6	2000	ABS	✓	✓	✓	✓	○

ROADSTER / MX-5	1. 6L	B6	2002	ABS/TCS	✓	✓	✓	✓	○
ROADSTER / MX-5	1. 6L	B6	2002	PCM	✓	✓	✓	✓	○
ROADSTER / MX-5	1. 8L	BP	2000	ABS	✓	✓	✓	✓	○
ROADSTER / MX-5	1. 8L	BP	2002	ABS/TCS	✓	✓	✓	✓	○
ROADSTER / MX-5	1. 8L	BP	2002	PCM	✓	✓	✓	✓	○
ROADSTER / MX-5	1. 8L	BP Turbo	2003	ABS/TCS	✓	✓	✓	✓	○
ROADSTER / MX-5	1. 8L	BP Turbo	2003	PCM	✓	✓	✓	✓	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	ABS	✓	✓	✓	✓	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	IC	✓	✓	✓	✓	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	PCM	✓	✓	✓	✓	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	RCM	✓	✓	✓	✓	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	RHT	✓	✓	✓	✓	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	RKE	✓	✓	✓	✓	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	TCM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	ABS	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	ABS/TCS	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	EPS	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	IC	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	LCM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	PCM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	RCM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	RKE	✓	✓	✓	✓	○

RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	SASM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	TCM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	ABS/TCS	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	EPS	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	IC	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	PCM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	RCM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	RKE	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	SASM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	TCM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	ABS/TCS	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	EPS	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	IC	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	PCM	✓	✓	✓	✓	○

RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	RCM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	RKE	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	SASM	✓	✓	✓	✓	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	TCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	ABS	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	ABS/TCS	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	EPS	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	IC	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	LCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	PCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	RCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	RKE	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	SASM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	TCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B	2009 – 2010	TPM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 – 2008	ABS/TCS	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 – 2008	EPS	✓	✓	✓	✓	○

RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	IC	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	PCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	RCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	RKE	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	SASM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	TPM	✓	✓	✓	○	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2006 - 2008	TCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	ABS/TCS	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	EPS	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	IC	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	PCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	RCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	RKE	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	SASM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	TCM	✓	✓	✓	✓	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	TPM	✓	✓	✓	○	○
Ranger	2. 3L	DURATEC-HE / I4	2009	4X4	✓	✓	✓	✓	○
Ranger	2. 3L	DURATEC-HE / I4	2009	ABS/TCS	✓	✓	✓	✓	8
Ranger	2. 3L	DURATEC-HE / I4	2009	GEM	✓	✓	✓	✓	○
Ranger	2. 3L	DURATEC-HE / I4	2009	IC	✓	✓	✓	✓	9

Ranger	2. 3L	DURATEC-HE / I4	2009	PCM	✓	✓	✓	✓	0023 0025
Ranger	2. 3L	DURATEC-HE / I4	2009	RCM	✓	✓	✓	✓	○
Ranger	2. 3L	DURATEC-HE / I4	2009	TBM	✓	✓	✓	✓	○
Ranger / Courier / Mazda B Series /Bravo	4. 0L	V6 SOHC	2003	ABS/TCS	✓	✓	✓	✓	8
Ranger / Courier / Mazda B Series /Bravo	4. 0L	V6 SOHC	2003	ESOF	✓	✓	✓	✓	○
Ranger / Courier / Mazda B Series /Bravo	4. 0L	V6 SOHC	2003	PCM	✓	✓	✓	✓	0009 0023 0025
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	✓	✓	✓	○	○

Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2007	GEM	✓	✓	✓	✓	000A
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2009	ABS/TCS	✓	✓	✓	✓	8
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	4X4	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	IC	✓	✓	✓	✓	9
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	PCM	✓	✓	✓	✓	0009 0023 0025 0010 0028 0031 0033
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	RCM	✓	✓	✓	✓	000C
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2005	TPM	✓	✓	✓	✓	○

Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2007 - 2011	OCSM	✓	✓	✓	○	000C
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2007 - 2011	SDARS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2008 - 2011	GEM / SJB	✓	✓	✓	✓	000A 0042
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2010 - 2011	ABS	✓	✓	✓	✓	0008 0012
Ranger / Mazda B Series / Courier	2. 3L	OHC	1995 - 1997	ABS/TCS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 3L	OHC	1995 - 1997	GEM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 3L	OHC	1995 - 1997	PCM	✓	✓	✓	✓	0023 0025
Ranger / Mazda B Series / Courier	2. 3L	OHC	1995 - 1997	RAP	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 3L	OHC	1996 - 1997	IAB	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 3L	Other	1996 - 2003	ABS/TCS	✓	✓	✓	✓	8
Ranger / Mazda B Series / Courier	2. 3L	Other	1996 - 2003	GEM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 3L	Other	1996 - 2003	PCM	✓	✓	✓	✓	0023 0025 0009 0010 0028 0031 0033
Ranger / Mazda B Series / Courier	2. 3L	Other	2001	PATS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 3L	Other	2001 - 2003	4X4	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 3L	Other	2001 - 2003	RAP	✓	✓	✓	✓	000A 000F
Ranger / Mazda B Series / Courier	2. 3L	Other	2001 - 2003	RCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	ABS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	ACM	✓	✓	✓	○	○

Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	BCMii	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	DDM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	FCDIM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	HVAC	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	IPC	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	PAM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	PCM	✓	✓	✓	✓	25
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	PDM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	RCM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	SRM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	TBM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	TCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	DURATEC-HE / I4	2011	TRM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	Other	1998	IAB	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	Other	1998 – 2001	ABS/TCS	✓	✓	✓	✓	8
Ranger / Mazda B Series / Courier	2. 5L	Other	1998 – 2001	GEM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	Other	1998 – 2001	PCM	✓	✓	✓	✓	0023 0025 0010 0028 0031 0033
Ranger / Mazda B Series / Courier	2. 5L	Other	1998 – 2001	RAP	✓	✓	✓	✓	000A

Ranger / Mazda B Series / Courier	2. 5L	Other	1999 – 2001	PATS	✓	✓	✓	✓	9
Ranger / Mazda B Series / Courier	2. 5L	Other	1999 – 2001	RCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 5L	Other	2001	4X4	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 8L	Other	2001	4X4	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 8L	Other	2001	ABS/TCS	✓	✓	✓	✓	8
Ranger / Mazda B Series / Courier	2. 8L	Other	2001	GEM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 8L	Other	2001	PATS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	2. 8L	Other	2001	PCM	✓	✓	✓	✓	9
Ranger / Mazda B Series / Courier	2. 8L	Other	2001	RAP	✓	✓	✓	✓	000A
Ranger / Mazda B Series / Courier	2. 8L	Other	2001	RCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 – 2000	ABS/TCS	✓	✓	✓	✓	8
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 – 2000	GEM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 – 2000	PATS	✓	✓	✓	✓	9
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 – 2000	PCM	✓	✓	✓	✓	0010 0023 0025 0028 0031 0033
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 – 2000	RAP	✓	✓	✓	✓	000A
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 – 2000	RCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3. 0L	Other	1995 – 2003	RAP	✓	✓	✓	✓	000A
Ranger / Mazda B Series / Courier	3. 0L	Other	1995 – 2007	GEM	✓	✓	✓	✓	000A

Ranger / Mazda B Series / Courier	3.0L	Other	1995 – 2008	ABS/TCS	✓	✓	✓	✓	8
Ranger / Mazda B Series / Courier	3.0L	Other	1995 – 2008	PCM	✓	✓	✓	✓	0023 0025 0010 0028 0031 0033 0009
Ranger / Mazda B Series / Courier	3.0L	Other	1996 – 1998	IAB	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3.0L	Other	1999 – 2008	RCM	✓	✓	✓	✓	000C
Ranger / Mazda B Series / Courier	3.0L	Other	2000 – 2001	PATS	✓	✓	✓	✓	9
Ranger / Mazda B Series / Courier	3.0L	Other	2001 – 2008	4X4	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3.0L	Other	2004 – 2008	IC	✓	✓	✓	✓	9
Ranger / Mazda B Series / Courier	3.0L	Other	2005	TPM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3.0L	Other	2007 – 2008	OCSM	✓	✓	✓	○	000C
Ranger / Mazda B Series / Courier	3.0L	Other	2007 – 2008	SDARS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3.0L	Other	2008	GEM / SJB	✓	✓	✓	✓	000A 0042
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	✓	✓	✓	✓	○

Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	4. 0L	Other	1995 – 2002	ABS/TCS	✓	✓	✓	✓	8

Ranger / Mazda B Series / Courier	4. 0L	Other	1995 – 2002	GEM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	4. 0L	Other	1995 – 2002	PCM	✓	✓	✓	✓	0023 0025 0010 0028 0031 0033 0009
Ranger / Mazda B Series / Courier	4. 0L	Other	1995 – 2002	RAP	✓	✓	✓	✓	000A
Ranger / Mazda B Series / Courier	4. 0L	Other	1996 – 1998	IAB	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	4. 0L	Other	1999 – 2001	PATS	✓	✓	✓	✓	9
Ranger / Mazda B Series / Courier	4. 0L	Other	1999 – 2002	RCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	4. 0L	Other	2001 – 2002	4X4	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003	RAP	✓	✓	✓	✓	000A 000F
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 – 2007	GEM	✓	✓	✓	✓	000A
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 – 2009	ABS/TCS	✓	✓	✓	✓	8
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 – 2011	4X4	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 – 2011	PCM	✓	✓	✓	✓	0009 0010 0023 0025 0028 0031 0033
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 – 2011	RCM	✓	✓	✓	✓	000C
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2004 – 2011	IC	✓	✓	✓	✓	9
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2005	TPM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2007 – 2011	OCSM	✓	✓	✓	○	000C
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2007 – 2011	SDARS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2008 – 2011	GEM / SJB	✓	✓	✓	✓	000A 0042

Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2010 – 2011	ABS	✓	✓	✓	✓	0008 0012
Ranger / Mazda B Series / Courier	Other	Other	2004	4X4	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2004	ABS/TCS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2004	GEM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2004	IC	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2004	PCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2004 – 2011	RCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2011	ABS	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2011	ACM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	Other	Other	2011	BCMii	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2011	DDM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2011	FCDIM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2011	HVAC	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2011	IPC	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2011	PAM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	Other	Other	2011	PDM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2011	SRM	✓	✓	✓	○	○
Ranger / Mazda B Series / Courier	Other	Other	2011	TBM	✓	✓	✓	○	○

Ranger / Mazda B Series / Courier	Other	Other	2011	TCM	✓	✓	✓	✓	○
Ranger / Mazda B Series / Courier	Other	Other	2011	TRM	✓	✓	✓	✓	○
SCRUM	660cc	F6A	1999 - Other	ABS	✓	✓	✓	✓	○
SCRUM	660cc	F6A	1999 - Other	PCM	✓	✓	✓	✓	○
SCRUM	660cc	F6A	1999 - Other	RCM	✓	✓	✓	✓	○
SCRUM	660cc	F6A-T	1999 - Other	ABS	✓	✓	✓	✓	○
SCRUM	660cc	F6A-T	1999 - Other	PCM	✓	✓	✓	✓	○
SCRUM	660cc	F6A-T	1999 - Other	RCM	✓	✓	✓	✓	○
SCRUM	660cc	F6A-T	1999 - Other	TCM	✓	✓	✓	✓	○
SCRUM	660cc	K6A	2001 - Other	ABS	✓	✓	✓	✓	○
SCRUM	660cc	K6A	2001 - Other	PCM	✓	✓	✓	✓	○
SCRUM	660cc	K6A	2001 - Other	RCM	✓	✓	✓	✓	○
SCRUM	660cc	K6A_T	2001 - Other	ABS	✓	✓	✓	✓	○
SCRUM	660cc	K6A_T	2001 - Other	PCM	✓	✓	✓	✓	○
SCRUM	660cc	K6A_T	2001 - Other	RCM	✓	✓	✓	✓	○
SCRUM	660cc	K6A_T	2001 - Other	TCM	✓	✓	✓	✓	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	ABS	✓	✓	✓	✓	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	PCM	✓	✓	✓	✓	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	RCM	✓	✓	✓	✓	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	ABS	✓	✓	✓	✓	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	PCM	✓	✓	✓	✓	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	RCM	✓	✓	✓	✓	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	TCM	✓	✓	✓	✓	○
SCRUM_ (2003 / 9 -)	660cc	K6A	2003 - Other	ABS	✓	✓	✓	✓	○
SCRUM_ (2003 / 9 -)	660cc	K6A	2003 - Other	PCM	✓	✓	✓	✓	○

SCRUM_(2003 / 9 -)	660cc	K6A	2003 - Other	RCM	✓	✓	✓	✓	○
SCRUM_(2003 / 9 -)	660cc	K6A_T	2003 - Other	ABS	✓	✓	✓	✓	○
SCRUM_(2003 / 9 -)	660cc	K6A_T	2003 - Other	PCM	✓	✓	✓	✓	○
SCRUM_(2003 / 9 -)	660cc	K6A_T	2003 - Other	RCM	✓	✓	✓	✓	○
SCRUM_(2003 / 9 -)	660cc	K6A_T	2003 - Other	TCM	✓	✓	✓	✓	○
SENTIA	3. 0L	JE	1997	PCM	✓	✓	✓	✓	○
SENTIA	3. 0L	JE_HO	1997	PCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	FE	2000 - 2002	PCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	FE	2002	TCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	FE LPG	2002	PCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	FE LPG	2002	TCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	RF-T	2004	PCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	RF-T	2004	TCM	✓	✓	✓	✓	○
XEDOS9	2. 0L	KF	1996	ABS	✓	✓	✓	✓	○
XEDOS9	2. 3L	KJ	1996 - 1998	ABS	✓	✓	✓	✓	○
XEDOS9	2. 5L	KL	1996 - 2000	ABS	✓	✓	✓	✓	○
XEDOS9	2. 5L	KL	2000	ABS/TCS	✓	✓	✓	✓	○
XEDOS9	2. 5L	KL	2000	PCM	✓	✓	✓	✓	○
Bongo Friendee	660cc	K6A	2003 - Other	RCM	✓	✓	✓	✓	○
SCRUM_(2003 / 9 -)	660cc	K6A_T	2003 - Other	ABS	✓	✓	✓	✓	○
SCRUM_(2003 / 9 -)	660cc	K6A_T	2003 - Other	PCM	✓	✓	✓	✓	○
SCRUM_(2003 / 9 -)	660cc	K6A_T	2003 - Other	RCM	✓	✓	✓	✓	○
SCRUM_(2003 / 9 -)	660cc	K6A_T	2003 - Other	TCM	✓	✓	✓	✓	○
SENTIA	3. 0L	JE	1997	PCM	✓	✓	✓	✓	○
SENTIA	3. 0L	JE_HO	1997	PCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	FE	2000 - 2002	PCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	FE	2002	TCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	FE LPG	2002	PCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	FE LPG	2002	TCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	RF-T	2004	PCM	✓	✓	✓	✓	○
TITAN_DASH	2. 0L	RF-T	2004	TCM	✓	✓	✓	✓	○
XEDOS9	2. 0L	KF	1996	ABS	✓	✓	✓	✓	○
XEDOS9	2. 3L	KJ	1996 - 1998	ABS	✓	✓	✓	✓	○

XEDOS9	2. 5L	KL	1996 – 2000	ABS	✓	✓	✓	✓	○
XEDOS9	2. 5L	KL	2000	ABS/TCS	✓	✓	✓	✓	○
XEDOS9	2. 5L	KL	2000	PCM	✓	✓	✓	✓	○
XEDOS9	2. 5L	KL	2000	PCM	✓	✓	✓	✓	○
Bongo Frier	2.0 L	FE	1999	PCM/TCM	✓	✓	✓	○	
Bongo Frier	2.0 L	FE	2002	PCM/TCM	✓	✓	✓	○	
Bongo Frier	2.5 L	J5	1999	PCM/TCM	✓	✓	✓	○	
Bongo Frier	2.5 L	WL T	1999	PCM/TCM	✓	✓	✓	○	
BT-50	2.6 L	G6	2007	ABS/TCS/PCM/RCM	✓	✓	✓	○	
Mazda5	1.8 L	L8	2007	ABS/HIM/EPS/IC/LPSDM/PCM/RCM/RKE/	✓	✓	✓	○	
MX-6	2.5 L	KL	1996	PCM	✓	✓	✓	○	
MX-6	2.5 L	KL	1997	PCM	✓	✓	✓	○	
B-Series	2.8 L	Other	2001	4X4/ABS/TCS/GEM/PCM, 0x	✓	✓	✓	○	
B-Series	2.2 L	Duratorq T	2015	ABS/ACM/API M/ATCM/BCM_1/C-CM/DDM/FCDI M/FCIM/GPSM/GWM/HCM/HU D/IC/IPM-	✓	✓	✓	○	
B-Series	3.2 L	Duratorq T	2015	ABS/ACM/API M/ATCM/BCM_1/C-CM/DDM/FCDI M/FCIM/GPSM/GWM/HCM/HU D/IC/IPM-	✓	✓	✓	○	
B-Series	2.5 L	IVCT	2015	ABS/ACM/API M/ATCM/BCM#1/C-CM/DDM/FCDI M/FCIM/GPSM/GWM/HCM/HU D/IC/IPM-	✓	✓	✓	○	



Special Function

index	Special Function	index	Special Function
0005	Programmable Module Installation	0098	Reset the Diesel Particulate Filter Learned Values
0006	Module Reprogramming	0099	Reset the Exhaust Gas Recirculation Valve Learned Values
0007	Programmable Parameters	009A	Reset the Intake Air Throttle Valve Learned Values
0008	ABS Service Bleed	009B	Reset / Clear Specified Function
0009	PATS Functions	009C	SCR Dosing Measurement Test
000A	Remote Keyless Entry	009D	SCR Parameter Reset
000B	G Sensor Calibration	009E	SCR System Emptying
000C	Passenger System Reset	009F	SCR System Refill Activation
000D	Neutral Position Setting	00A0	SCR Visual Leak Check
000E	Ride Height Calibration	00A1	System Prime
000F	Factory Keyless Entry Code	00A2	WIF Reset
0010	Stop Use of Transmission Adaptive	00A3	DPF Reset
0011	Power Seat Calibration	00A4	Enter the Fuel Injector Default Count Value
0012	IVD Initialization Sequence	00A5	Clutch Switch Learn
0013	Pneumatic Test	00A6	Engine Oil Quality History
0014	Accurate Trim Test	00A7	Fuel Injection Pump Learn
0015	Passenger Zero Seat Weight Test	00A8	Fuel Injector Pilot Correction Learn
0016	Microphone Test	00A9	Fuel System Leak Test
0017	Audio Speaker Walkaround Test	00AA	Initialize the Exhaust Gas Related Component.
0018	Infotainment Display Test	00AB	Reset Differential Pressure Sensor Learned Values
0019	Tones Test	00AC	Reset KAM
001A	TPMS Functions	00AD	Reset MAF Sensor Drift.
001B	Zero Speed Test	00AE	Reset MAF Sensor Offset.
001C	Rear Tones Test	00AF	Reset the air conditioning compressor learned values.

001D	Monotones Test	00B0	Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values
001E	Sensor Initialization	00B1	Reset the Exhaust Gas Temperature Value
001F	EPB calibration.	00B2	Reset the Fuel Injection Pump Learned Values
0020	EATC Operation Check	00B3	Reset the Fuel Injector Learned Values
0021	Rain Sensor Reset	00B4	Reset the Fuel Metering Valve Learned Values
0022	LPSDM and RPSDM Service Function	00B5	Reset the Fuel Pressure Relief Valve Open Count Learned Value
0023	Power Balance	00B6	Reset the Fuel Pressure Relief Valve Open Duration Learned Value
0024	EVAP Test	00B7	Reset the Fuel Rail Pressure Sensor Learned Values
0025	Reset PCM KAM	00B8	Reset the Heated Exhaust Gas Oxygen Sensor Learned Values
0026	OBDII Modes	00B9	Reset the Mass Air Flow Sensor Learned Values
0027	Clear Transmission Adaptive Learning	00BA	Reset the Neutral Gear Position Learned Value
0028	Clear Transmission Adaptive Tables	00BB	Reset the oil change indicator.
0029	Configure All Three Sensors Together.	00BC	Reset the Powertrain Control Module Learned Values
002A	Configure Both the Yaw Rate Sensor and the Lateral Acceleration Sensors.	00BD	Reset the Turbocharger Learned Values.
002B	Configure the lateral acceleration sensor.	00BE	Reset the Turbocharger Variable Vane Actuator Learned Values
002C	Configure the pressure sensor.	00BF	Reset the Turbocharger Variable Vane Position Sensor Learned Values
002D	FFH Self Test and Prefill Utility	00C0	Reset the Vehicle Speed Limit
002E	FFH Start Heater Utility	00C1	Reset the water in fuel Warning Indicator.
002F	FFH Unlock Utility	00C2	rpm Controller
0030	Auxiliary vehicle ID reset	00C3	Stop-Start Activation
0031	Halt Transmission Adaptive Learning	00C4	Speed Limiting
0032	Headlamp Alignment	00C5	TR Sensor Test
0033	Resume Transmission Adaptive Learning	00C6	Transmission Fluid Level Test
0034	Resume Transmission Adaptive Tables	00C7	Automatic Transmission PRNDL Display Test
0035	Key fob Training	00C8	BSI Solenoid Test
0036	Transmission	00C9	Automatic Transmission Park Switch Test

0037	Transmission Learning	00CA	ABS reset and configuration.
0038	Transmission Solenoid Body IDN	00CB	PDC Reset
0039	VSM Service Functions	00CC	Steering Wheel Position Sensor Calibration
003A	A/C Test	00CD	Preliminary Checks
003B	ACM	00CE	Reset TCM KAM
003C	ACM Security Bypass Test	00CF	Fuel System Prime
003D	Air/Fuel Learning	00D0	Remote Start
003E	AM Antenna Reception Sensitivity Test	00D1	TBM SIM RAV_ID
003F	ASM Service Functions	00D2	Reset TBM Password
0040	audio configuration	00D3	TBM Transit Mode
0041	Auto Leveling Sensor Re-zero Procedure	00D4	CEI Lock Configuration
0042	Tire pressure monitoring system	00D5	BMS Reset
0043	BSM Radar Test	00D6	Navigation
0044	Button Test	00D7	Calibrate Steering Angle Sensor
0045	CAN Bus Fault Test	00D8	Configure the steering column assembly
0046	CCM Calibration	00D9	Configure the longitudinal acceleration sensor
0047	Clear EGR Adaptive Tables	00DA	Configure the intermediate shaft
0048	Clear Fuel Injector & HP Pump Adaptive Tables	00DB	Module Initialization
0050	Clearing of Learning Value	00DC	Pull Drift Compensation
0051	Component/Parameter Reset	00DD	Calibrate Longitudinal Acceleration Sensor
0053	Configure the steering angle sensor.	00DE	Inhibit longitudinal accelerometer monitoring
0054	Configure the yaw rate sensor.	00DF	Pull Drift Compensation enable/disable
0055	Data Reset	00E0	Straight Ahead Adaption Angle Reset
0056	DPF	00E1	Steering Rack Limiter Configuration
0057	DPF Component Parameter	00E2	Pressure Sensor Calibration
0058	DPF Manual Regeneration	00E3	Reset Pressure Sensor Offset

0059	DPF Parameter Reset	00E4	Enable/Disable hill launch assist
005A	Electronic Throttle Control	00E5	Camera Alignment
005B	EPS Steering Angle Calibration	00E6	Shift fork system learn.
005C	ETB/EGR Initialization	00E7	Reset the High Pressure Fuel System Learned Values
005D	FACM	00E8	Bleed Master
005E	FFH Operation Check	00E9	FCDIM_Key code_reset
005F	Gauge Test	00EA	EPB
0060	ICCM Aiming Adjustment	0101	Audio
0061	Illumination Test	0102	Battery saver
0062	Input and Data Test	0103	Body Type
0063	Interior Scan Test	0104	Courtesy Lamp
0064	Keyless Entry Keypad Code Reset	0105	Door Trigger Disable Mode
0065	Learning	0106	Body and Fuel Type
0066	Misfire Check	0107	Hazard Warning
0067	Misfire Monitor Neutral Profile Correction	0108	Horn Warning
0068	Module Identification	0109	Master Door Trigger Disable Mode
0069	Multifunction Output Test	010A	Panic Alarm
006A	Network Test	010B	Police Mode
006B	New FACM	010C	Traction control system
006C	Parking Aid Switch Test	010D	Auto lamp Off Setting
006D	Passenger Seat Weight Sensor ReZero	010E	Auto lamp On Setting
006E	Rebalance	010F	Police Speedometer Offset
006F	Reset the Knock Sensor Learned Values	0110	Cabin Temperature Sensor Calibration Factor
0070	Reset Transmission Tables	0111	Taxi Mode
0071	Resetting adaptive values	0112	Low Coolant Warning
0072	RVM Aiming	0113	Parking Brake Warning

0074	Service Routine	0114	Headlamp Delay Door Open
0075	Special Ignition ON	0115	Headlamp Delay Ignition Off
0076	Steering angle sensor calibration	0116	Headlamp Delay Remote Lock Pressed
0077	Supplemental Heater Test	0117	Dynamic Stability Control
0080	Mode 1 Powertrain Data	0118	Hill Descent Control LED
0081	Mode 6 On-Board Test Results	0119	Brake System Configuration
0082	Mode 8 - On-Board device control	011A	BPM fitted
0083	Mode 9 - Vehicle Information	011B	Camera fitted
0084	OBD Drive Cycle	011C	Audio Interface Module
0085	Service Functions	011D	Sonar fitted
0090	Diesel Particulate Filter Static Regeneration	011E	Navigation System
0091	DPF Regeneration Suspension	011F	Parking Aid Module
0092	Fuel Injector Correction Factors	0120	Odometer Write
0093	IQA	0121	Subwoofer
0094	Refill the FAT.	0122	Driver Beltminder Status
0095	Relearn Vehicle Data	0123	Alarm
0096	Reset Charge Air Cooler Bypass Valve Position Offset.	0124	Audio Configure
0097	Reset the Cooling Fan Motor Learned Values		