



Function List

AutoMaker:Renault

NOTES:
√ This function is supported.
○ This function is not supported.
※ This function may be supported, which depends on the actual condition of the vehicle.
✓ This function is the new feature in this version.
As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
AVANTIME	A.B.S.	√	√	√	√	√	√	○	○	0325 0438 0367 0329 0286 0287
AVANTIME	AIR CONDITIONING	√	√	√	√	○	√	√	√	0031 0032 0033 0034 0127 0128
AVANTIME	AIRBAG / PRETENSIONERS	√	√	√	√	○	√	√	√	0175 0319 0288 0205 0352 0438 0442
AVANTIME	AUTOMATIC GEARBOX	√	√	√	√	√	√	√	○	0458 0445 0443 0442
AVANTIME	CONNECTION UNIT	√	√	√	√	√	√	√	√	0002 0016 0282 0028 0107 0553 0566 0156 0577
AVANTIME	DISCHARGE LAMP	√	√	√	√	√	○	√	○	
AVANTIME	HEATER	√	√	√	√	√	√	○	○	
AVANTIME	IMMOBILISER	√	√	√	√	√	√	○	√	0550
AVANTIME	INJECTION	√	√	√	√	√	√	√	※	0277 0442 0179 0079 0407 0434 0379 0412 0454 0119 0114 0428 0399 0382 0415 0013
AVANTIME	INSTRUMENT PANEL	√	√	√	√	√	√	○	√	0163 0011
AVANTIME	LIGHTING	√	√	√	√	√	○	√	○	
CLIO II	A.B.S.	√	√	√	√	√	※	○	※	0438 0325 0039 0367 0442
CLIO II	AIR CONDITIONING	√	√	√	√	√	√	√	○	0391 0422 0384 0417 0386 0419 0402 0430 0397 0394 0389 0403 0038 0168 0321 0111 0065 0063 0438
CLIO II	AIRBAG / PRETENSIONERS	√	√	√	√	√	√	○	※	0437 0395 0425 0208 0354 0064 0438
CLIO II	AUTOMATIC GEARBOX	√	√	√	√	√	√	○	※	0276 0437 0440 0217 0379 0412 0487 0488 0445 0451 0473 0017 0480 0344 0215 0055 0014 0470 0453 0442 0276 0438
CLIO II	CONNECTION UNIT	√	√	√	√	√	※	√	※	0554 0504 0600 0590 0595 0585 0597 0587 0392 0401 0583 0593 0544 0435 0408 0594 0584 0133 0028 0555 0538
CLIO II	GAS INJ.	√	√	√	√	√	√	√	※	0442
CLIO II	IMMOBILISER	√	√	√	√	√	※	○	○	0082 0059 0279 0280 0549 0539
CLIO II	INJECTION	√	√	√	√	√	※	○	√	0381 0414 0173 0172 0179 0079 0277 0212 0393 0442 0366 0398 0427 0412 0270 0333 0379 0340 0013 0267 0268 0112 0119 0493 0498 0156 0070 0272 0181 0182 0183 0184 0185
CLIO III	A.B.S.	√	√	√	√	√	√	√	○	0056 0039 0325 0442 0438 0126 0367 0273 0022 0125 0363
CLIO III	AIR CONDITIONING	√	√	√	√	√	√	○	√	0369 0167 0157 0442
CLIO III	AIRBAG / PRETENSIONERS	√	√	√	√	○	√	√	√	0288 0387 0371 0432 0100 0261 0251 0252 0092 0093 0071 0072 0145 0146 0144 0290 0103 0101 0262 0102 0249 0205 0352 0438 0442 0064 0318
CLIO III	AUTOMATIC GEARBOX	√	√	√	√	√	√	√	○	0445 0215 0440 0438 0442 0458 0274 0448 0476 0477 0475 0489 0490
CLIO III	COMMUNICATIONS UNIT	√	√	√	√	√	√	○	√	0110 0567 0517 0088 0442 0503 0535

CUJO III	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0007 0008 0045 0060 0073 0074 0075 0076 0112 0114 0117 0123 0151 0187 0206 0220 0246 0247 0271 0274 0277 0310 0324 0332 0353 0439 0439 0441 0442 0455 0467 0465 0491 0492 0493 0494 0496 0497 0606 0648
CUJO III	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0194 0041 0156 0066 0368 0348 0088 0069 0238 0337 0298 0204 0052 0302 0058 0312 0245 0442 0357 0221 0679 0222 0680 0147 0265 0615 0729 0086
CUJO III	LIGHTING	✓	✓	✓	✓	✓	✓	✓	✓	0369 0505 0521 0563 0518 0442 0711
CUJO III	MULTIMED. CONNECTION	✓	✓	✓	✓	○	✓	✓	○	0567 0438
CUJO III	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	✓	✓	0061 0484 0552 0670 0541 0369 0442
CUJO III	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442 0447
CUJO III	RADIO	✓	✓	✓	✓	✓	✓	○	✓	0422
CUJO III	TYRES	✓	✓	✓	✓	○	✓	○	✓	0278 0275 0369 0442 0122 0315
CUJO III	UCH	✓	✓	✓	✓	✓	✓	○	✓	0509 0577 0156 0107 0131 0233 0084 0372 0137 0057 0078 0164 0442 0627 0165 0001 0316 0338 0672 0289
CUJO III	UPC	✓	✓	✓	✓	✓	✓	○	✓	
CUJO III	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	✓	0442 0330 0437 0514
CUJO V6	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	○	○	0384 0417 0386 0419 0402 0430 0394 0397 0389 0403 0168 0038 0065 0063
CUJO V6	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	○	✓	0208 0354 0064 0438
CUJO V6	CONNECTION UNIT	✓	✓	✓	✓	✓	○	✓	○	0554 0504 0600 0590 0595 0585 0597 0587 0392 0401 0583 0593 0544 0435 0408 0594 0584
CUJO V6	INJECTION	✓	✓	✓	✓	✓	✓	✓	○	0277
CUJO V6 PH 2	AIR CONDITIONING	✓	✓	✓	✓	✓	○	○	○	
CUJO V6 PH 2	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	○	✓	✓	0249 0092 0093 0251 0252 0097 0258 0105 0264 0145 0146 0071 0072 0104 0101 0262 0205 0352 0242
CUJO V6 PH 2	CONNECTION UNIT	✓	✓	✓	✓	✓	✓	✓	✓	0028
CUJO V6 PH 2	IMMOBILISER	✓	✓	✓	✓	✓	✓	○	✓	0549 0539
CUJO V6 PH 2	INJECTION	✓	✓	✓	✓	✓	✓	✓	○	0277
CUJOHP2/3/4	A.B.S.	✓	✓	✓	✓	✓	✖	○	✖	0438 0325 0367 0329 0286 0287 0134 0039 0442
CUJOHP2/3/4	AIR CONDITIONING	✓	✓	✓	✓	✓	○	○	○	
CUJOHP2/3/4	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	○	✓	✓	0249 0092 0093 0251 0252 0097 0258 0105 0264 0145 0146 0071 0072 0104 0101 0262 0205 0352 0242
CUJOHP2/3/4	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	✖	0445 0451 0473 0017 0480 0344 0440 0437 0215 0055 0442 0458 0476 0274 0448 0477 0438 0490 0489 0014 0470 0453 0276
CUJOHP2/3/4	CONNECTION UNIT	✓	✓	✓	✓	✓	✓	✓	✓	0028
CUJOHP2/3/4	DISCHARGE LAMP	✓	✓	✓	✓	✓	○	✓	○	
CUJOHP2/3/4	GAS INJ.	✓	✓	✓	✓	✓	✓	○	✖	0442
CUJOHP2/3/4	IMMOBILISER	✓	✓	✓	✓	✓	✖	○	✖	0549 0539 0588 0598 0028
CUJOHP2/3/4	INJECTION	✓	✓	✓	✓	✓	✓	✓	✖	0277 0179 0079 0442 0112 0119 0366 0493 0498 0156 0013 0268 0340 0070 0272 0181 0182 0183 0184 0185 0274 0441 0206 0353
CUJOHP2/3/4	LIGHTING	✓	✓	✓	✓	✓	○	✓	○	
CUJOHP2/3/4	VARIABLE P.A.S.	✓	✓	✓	✓	○	○	○	○	0514 0438
DUSTER	4 WHEELS DRIVE	✓	✓	✓	✓	✓	✓	✓	○	0056 0369 0156 0442 0325 0516 0666 0367
DUSTER	A.B.S.	✓	✓	✓	✓	✓	✓	✓	○	0317 0039 0056 0325 0442 0438 0367
DUSTER	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0318 0311 0312 0259 0260 0263 0257 0249 0254 0248 0177 0096 0099 0102 0145 0146 0098 0442 0352 0205
DUSTER	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0445 0215 0440 0442 0438
DUSTER	INJECTION	✓	✓	✓	✓	✓	✓	✓	✖	0112 0271 0455 0441 0206 0073 0074 0075 0076 0277 0442 0492 0497 0496 0117 0187 0151 0247 0114 0220 0007 0008 0465 0060
DUSTER	RADIO	✓	✓	✓	✓	✓	✓	○	✓	0437 0519 0660

DUSTER	TRACKER	✓	✓	✓	✓	○	✓	○	✓	0571 0019 0441
DUSTER	UCH	✓	✓	✓	✓	✓	✓	○	※	0133 0442 0562
DUSTER	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	✓	0442 0437 0514
ESPACE	A.B.S.	✓	✓	✓	✓	✓	✓	○	○	0438 0325
ESPACE	AIR CONDITIONING	✓	✓	✓	✓	○	✓	✓	✓	0031 0032 0033 0034 0127 0128
ESPACE	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	○	○	0438 0432 0405 0420 0388
ESPACE	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	○	※	0015 0276 0437 0440 0217 0379 0412 0487 0488 0445 0451 0473 0017 0480 0344 0215 0055
ESPACE	CONNECTION UNIT	✓	✓	✓	✓	✓	※	✓	✓	0067 0507 0364 0589 0599 0400 0429 0546 0530 0377 0409 0561 0523 0580 0579 0196 0303 0582 0592 0390 0421
ESPACE	DISCHARGE LAMP	✓	✓	✓	✓	✓	○	✓	○	
ESPACE	HEATER	✓	✓	✓	✓	✓	✓	○	○	
ESPACE	IMMOBILISER	✓	✓	✓	✓	✓	※	○	※	0082 0080 0279 0280 0392 0401 0435 0408 0528
ESPACE	INJECTION	✓	✓	✓	✓	✓	✓	○	※	0381 0414 0173 0172 0277 0379 0412 0398 0427 0340 0013 0267 0179 0079 0407 0385 0418 0379 0412 0406 0433 0119 0114 0454 0428 0399 0434 0382 0415 0442 0197 0198 0304 0199 0305 0306 0438 0377 0409 0374 0214 0266 0081 0404 0431 0381 0414 0383 0416 0067 0364 0400 0429 0196 0303 0226 0225 0390 0421
ESPACE	INSTRUMENT PANEL	✓	※	※	✓	○	※	○	✓	
ESPACE	LIGHTING	✓	✓	✓	✓	✓	○	✓	○	
ESPACE IV	A.B.S.	✓	✓	✓	✓	✓	✓	✓	✓	0056 0367 0003 0156 0325 0438 0442 0328 0345 0043 0273 0022 0054 0169
ESPACE IV	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	○	✓	0016 0062 0020 0090 0107 0294 0010 0442 0167 0157 0343
ESPACE IV	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	○	✓	0288 0064 0175 0319 0205 0352 0438 0442 0318
ESPACE IV	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0445 0443 0442 0438 0472
ESPACE IV	DISCHARGE LAMP	✓	✓	✓	✓	✓	✓	✓	✓	0369 0514 0442
ESPACE IV	HANDS-FREE KIT	✓	✓	✓	✓	✓	✓	○	✓	0660 0438 0442 0706 0665 0613 0628
ESPACE IV	HEATER	✓	✓	✓	✓	✓	✓	✓	○	0643
ESPACE IV	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0277 0179 0079 0442 0274 0441 0151 0332 0018 0353 0206 0112 0117 0455 0310 0439 0340 0013
ESPACE IV	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0369 0195 0152 0088 0066 0349 0339 0344 0025 0069 0348 0370 0238 0213 0158 0358 0359 0235 0236 0178 0442 0085 0156 0005 0204 0245 0227 0230 0243 0083 0068 0265
ESPACE IV	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442
ESPACE IV	PARKING BRAKE	✓	✓	✓	✓	✓	✓	○	✓	0483 0309 0436 0484 0442
ESPACE IV	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0135 0512 0162 0012 0351 0049 0207 0275 0278 0369 0365 0156 0107 0347 0238 0346 0077 0283 0203 0204 0164 0314 0050 0160 0159 0161 0078 0023 0021 0115 0316 0180 0335 0165 0211 0360 0442 0122 0284 0084 0034
ESPACEIV PH2	A.B.S.	✓	✓	✓	✓	✓	✓	✓	✓	0328 0345 0043 0056 0156 0442 0325 0367 0438 0273 0022 0054 0169
ESPACEIV PH2	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	○	✓	0016 0062 0020 0090 0107 0294 0010 0167 0157 0442 0343
ESPACEIV PH2	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0064 0175 0318 0205 0352 0438 0442
ESPACEIV PH2	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0445 0443 0442 0438 0472 0458 0456
ESPACEIV PH2	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	✓	○	✓	0369 0567 0517 0088 0503 0535
ESPACEIV PH2	HEATER	✓	✓	✓	✓	✓	✓	✓	○	0643
ESPACEIV PH2	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0274 0442 0353 0206 0112 0117 0310 0439 0455 0340 0013 0441 0079 0179 0277 0018 0332 0331 0151 0272 0110 0045 0187 0220

ESPACEIV PH2	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0195 0156 0152 0005 0344 0348 0088 0238 0204 0349 0069 0245 0243 0083 0227 0068 0230 0442 0265
ESPACEIV PH2	LIGHTING	✓	✓	✓	✓	✓	✓	✓	✓	0369 0107 0505 0563 0083 0540 0711 0441
ESPACEIV PH2	MULTIMED. CONNECTION	✓	✓	✓	✓	○	✓	✓	○	0567 0438
ESPACEIV PH2	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	○	✓	0369 0484
ESPACEIV PH2	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442 0447
ESPACEIV PH2	PARKING BRAKE	✓	✓	✓	✓	✓	✓	✓	✓	0483 0309 0436 0484 0442 0484
ESPACEIV PH2	PARKING PROX CAN	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0459 0460 0442 0447 0438
ESPACEIV PH2	RADIO	✓	✓	✓	✓	✓	✓	○	✓	0510 0088
ESPACEIV PH2	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0135 0512 0162 0012 0351 0275 0278 0369 0365 0156 0107 0347 0346 0077 0283 0284 0203 0204 0164 0160 0159 0161 0078 0023 0021 0115 0316 0180 0335 0084 0165 0211 0024 0360 0122 0442
KANGOO	A.B.S.	✓	✓	✓	✓	✓	✓	○	○	0438 0325 0437
KANGOO	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	○	○	0391 0422 0384 0417 0386 0419 0402 0430 0397 0394 0389 0403 0038 0168 0321 0111 0065 0063 0438
KANGOO	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	※	✓	○	※	0438 0205 0352 0413 0061 0426 0424 0396 0320 0208 0354 0437 0064 0175 0319 0288 0442
KANGOO	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	○	※	0276 0437 0440 0217 0379 0412 0487 0488 0445 0451 0473 0017 0480 0344 0215 0055 0014 0470 0453 0442 0276 0438
KANGOO	CONNECTION UNIT	✓	✓	✓	✓	✓	○	✓	○	0392 0401 0544 0435 0408 0554 0504
KANGOO	GAS INJ.	✓	✓	✓	✓	✓	✓	○	※	0442
KANGOO	HEATER	✓	✓	✓	✓	✓	✓	○	○	
KANGOO	IMMOBILISER	✓	✓	✓	✓	✓	✓	○	○	0082 0059 0279 0280
KANGOO	INJECTION	✓	✓	✓	✓	✓	※	○	✓	0381 0414 0173 0172 0179 0079 0277 0212 0393 0218 0442 0366 0398 0427 0412 0270 0333 0379 0340 0013 0267 0268 0112 0119 0493 0498 0156 0070 0272 0181 0182 0183 0184 0185 0114 0454 0412 0379 0428 0399 0434 0407 0382 0415 0274 0441 0206 0353
KANGOO	INVERTER	✓	✓	✓	✓	✓	○	○	○	
KANGOO	SUPERVISOR	✓	✓	✓	✓	✓	✓	○	○	0586 0596 0500 0437 0042 0556
KANGOO II	A.B.S.	✓	✓	✓	✓	※	✓	✓	○	0056 0039 0367 0325 0442 0438 0273 0022 0125
KANGOO II	ADAPTATION UNIT	✓	✓	✓	✓	○	✓	✓	○	
KANGOO II	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	✓	✓	0107 0041 0157 0442
KANGOO II	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	✓	✓	0288 0096 0257 0102 0138 0141 0139 0142 0202 0308 0200 0307 0291 0292 0249 0318 0205 0352 0442
KANGOO II	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0110 0567 0517 0088 0535 0442
KANGOO II	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	✓	○	※	0567 0517 0088 0535
KANGOO II	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0274 0324 0353 0206 0441 0112 0271 0277 0310 0439 0123 0060 0187 0246 0220 0455 0073 0074 0075 0076 0247 0114 0018 0648 0606 0117 0624 0492 0491 0007 0008 0465 0151 0332 0462 0496 0497 0494 0045 0493
KANGOO II	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0615 0729 0194 0152 0005 0301 0344 0088 0130 0069 0238 0204 0004 0091 0058 0313 0265 0156 0442 0438 0357 0221 0679 0222 0680 0046 0047 0300 0086 0681 0631 0312 0337 0147 0661 0611
KANGOO II	MULTIMED. CONNECTION	✓	✓	✓	✓	○	✓	✓	○	0567 0442 0438
KANGOO II	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	○	✓	0484 0552 0541 0442
KANGOO II	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442
KANGOO II	RADIO	✓	✓	✓	✓	✓	✓	○	✓	0510 0088 0442 0437 0631
KANGOO II	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0334 0627 0442 0572
KANGOO II	UPC	✓	✓	✓	✓	✓	✓	○	✓	0367 0442 0438 0623

[illegible]

KOLEOS/QM5	ADIVI	✓	✓	✓	✓	✓	✓	✓	○	
KOLEOS/QM5	AIRBAG / PRETENSIONERS	✓	✓	✓	○	○	○	○	○	
KOLEOS/QM5	AMPLIFIER	✓	✓	✓	✓	✓	✓	✓	✓	0610 0515 0442 0437
KOLEOS/QM5	AUTO FRONT LIGHTING	✓	✓	✓	✓	✓	✓	○	○	0327
KOLEOS/QM5	AUTOMATIC GEARBOX	✓	✓	✓	✓	○	✓	○	○	0299
KOLEOS/QM5	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	✓	○	※	0369 0442 0110 0567 0088 0537 0536 0438 0703 0132 0635 0519 0660
KOLEOS/QM5	DISCHARGE LAMP	✓	✓	✓	✓	○	✓	✓	○	
KOLEOS/QM5	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0006 0171 0170 0179 0176 0442 0274 0110 0455 0310 0439 0277 0045 0441 0151 0332 0187 0220 0366 0642 0604 0171 0170 0625
KOLEOS/QM5	INSTRUMENT PANEL	✓	✓	✓	✓	○	✓	○	✓	0195 0322 0085 0088 0066 0005 0576 0344 0347 0531 0532 0265 0194 0312 0548 0520
KOLEOS/QM5	MULTIMED. CONNECTION	✓	✓	✓	✓	○	✓	✓	○	0567 0242 0438
KOLEOS/QM5	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	✓	✓	0338 0570 0442 0726 0484 0670 0552
KOLEOS/QM5	PARKING BRAKE	✓	✓	✓	✓	✓	✓	✓	✓	0482 0309 0484 0442 0628 0446 0479
KOLEOS/QM5	PARKING PROX CAN	✓	✓	✓	✓	○	✓	✓	✓	0044 0342 0459 0460 0156 0481 0438 0442
KOLEOS/QM5	RADIO	✓	✓	※	✓	※	✓	○	※	0701 0519 0567 0529 0107 0442 0511 0088 0437
KOLEOS/QM5	TYRES	✓	✓	✓	✓	✓	✓	○	○	0278
KOLEOS/QM5	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0612 0509 0283 0078 0019 0285 0232 0077 0165 0312 0160 0164 0441
KOLEOS/QM5	UPC	✓	✓	✓	✓	✓	✓	○	○	
KOLEOS/QM5	TELEMATIC CTRL UNIT	✓	✓	✓	✓	✓	✓	✓	✓	0132
KOLEOS/QM5	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	○	
LAGUNA	A.B.S.	✓	✓	✓	✓	✓	※	○	○	0438 0056 0325 0286
LAGUNA	AIR CONDITIONING	✓	✓	✓	✓	○	✓	○	○	
LAGUNA	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	※	✓	○	○	0438 0205 0352 0413 0061 0426 0424 0396
LAGUNA	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	○	○	0015
LAGUNA	IMMOBILISER	✓	✓	✓	✓	✓	✓	○	○	0082 0080 0279 0280 0392 0401 0435 0408
LAGUNA	INJECTION	✓	✓	✓	✓	✓	✓	○	※	0381 0414 0173 0172 0340 0013 0267 0179 0079 0379 0412
LAGUNA	INSTRUMENT PANEL	✓	✓	✓	✓	○	✓	○	✓	0216 0194 0086 0118
LAGUNA	VARIABLE P.A.S.	✓	✓	✓	✓	✓	✓	○	○	0438 0601
LAGUNA	SEAT MANAGEMENT	✓	✓	✓	✓	✓	✓	✓	○	0437
LAGUNA	VOICE SYNTHESISER	✓	✓	✓	✓	○	✓	○	✓	0216
LAGUNA II	A.B.S.	✓	✓	✓	✓	✓	✓	✓	✓	0056 0367 0003 0156 0325 0442 0438 0499 0495 0329
LAGUNA II	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	✓	✓	0346 0129 0166 0062 0090 0442 0369
LAGUNA II	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	○	✓	0288 0064 0175 0318 0205 0352 0438 0442 0319
LAGUNA II	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	※	0458 0445 0442 0443 0451 0473 0017 0480 0344 0215 0055 0438 0440
LAGUNA II	DISCHARGE LAMP	✓	✓	✓	✓	✓	✓	✓	✓	0369 0514 0442
LAGUNA II	GAS INJ.	✓	✓	✓	✓	✓	✓	✓	✓	
LAGUNA II	HEATER	✓	✓	✓	✓	✓	✓	✓	○	0643 0644
LAGUNA II	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0277 0179 0079 0442 0340 0013 0441 0455 0310 0439 0112 0117 0274 0045 0151 0332
LAGUNA II	INSTRUMENT PANEL	✓	✓	✓	✓	※	✓	○	✓	0195 0369 0350 0156 0152 0005 0344 0348 0088 0238 0312 0204 0025 0349 0069 0068 0370 0245 0337 0298 0155 0357 0221 0222 0223 0224 0147 0442 0087 0240 0241 0358 0359 0235 0236 0085
LAGUNA II	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442

LAGUNA II	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0135 0512 0351 0049 0508 0275 0278 0156 0050 0051 0238 0077 0370 0282 0164 0346 0269 0160 0159 0021 0078 0115 0023 0027 0186 0314 0341 0107 0029 0355 0089 0211 0347 0204 0360 0053 0442 0122
LAGUNA III	4 WHEELS STEERING	✓	✓	✓	✓	✓	○	✓	○	
LAGUNA III	A.B.S.	✓	✓	✓	✓	✓	○	✓	✓	0056 0325 0442 0438 0328 0345 0043
LAGUNA III	AIR CONDITIONING	✓	✓	✓	✓	✓	○	✓	✓	0157 0442
LAGUNA III	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	○	✓	✓	0288 0318 0249 0442 0352 0205
LAGUNA III	AMPLIFIER	✓	✓	✓	✓	✓	○	✓	✓	0610
LAGUNA III	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	○	✓	✓	0456 0442 0132 0476 0700
LAGUNA III	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	○	○	※	0442 0132 0635 0519 0660
LAGUNA III	DRIVER'S DOOR	✓	✓	✓	✓	✓	○	✓	○	0650 0442
LAGUNA III	INJECTION	✓	✓	✓	✓	※	○	✓	※	0007 0008 0018 0045 0110 0112 0114 0117 0151 0187 0220 0247 0271 0274 0277 0310 0332 0366 0439 0441 0455 0455 0462 0464 0491 0492 0494 0496 0497 0605 0606 0607 0624 0625 0648 0663 0674 0675 0676 0677 0678 0688 0690 0691
LAGUNA III	INSTRUMENT PANEL	✓	✓	✓	✓	✓	○	○	✓	0085 0005 0088 0066 0349 0347 0681 0069 0442
LAGUNA III	LEFT-HAND DOOR	✓	○	○	✓	○	○	✓	○	0629
LAGUNA III	LIGHTING	✓	✓	✓	✓	✓	○	✓	✓	0711
LAGUNA III	MULTIMED. CONNECTION	✓	✓	✓	✓	✓	○	✓	○	0110
LAGUNA III	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	○	○	※	0338 0570 0442
LAGUNA III	PARKING BRAKE	✓	✓	✓	✓	✓	○	✓	✓	0309 0474 0658 0442 0444
LAGUNA III	PARKING PROX CAN	✓	✓	✓	✓	※	○	✓	✓	0044 0342 0459 0460 0442 0447
LAGUNA III	PASSENGER'S DOOR	✓	✓	✓	✓	✓	○	✓	○	0650 0442
LAGUNA III	RADIO	✓	✓	※	※	※	○	○	※	0635 0701 0510 0442 0437 0132 0660 0519
LAGUNA III	RIGHT-HAND DOOR	✓	○	○	✓	○	○	✓	○	0629
LAGUNA III	SEAT MANAGEMENT	✓	✓	✓	✓	○	○	✓	○	0442 0687
LAGUNA III	UCH	✓	✓	✓	✓	✓	○	✓	✓	0278 0509 0696 0441 0360 0724
LAGUNA III	UPC	✓	✓	✓	✓	✓	○	✓	※	0442 0516 0564 0617 0618 0619 0620 0623 0633 0634 0637 0673 0674 0675 0676 0677 0678 0702
LAGUNA III	TELEMATIC CTRL UNIT	✓	✓	✓	✓	✓	✓	✓	✓	0132
LAGUNA III	VARIABLE P.A.S.	✓	✓	✓	✓	○	○	✓	○	
LAGUNA PHASE 2	A.B.S.	✓	✓	✓	✓	✓	※	○	○	0438 0056 0325 0286
LAGUNA PHASE 2	AIR CONDITIONING	✓	✓	✓	✓	○	✓	○	○	
LAGUNA PHASE 2	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	※	✓	○	※	0205 0352 0413 0438 0061 0426 0424 0396 0320 0208 0354 0437
LAGUNA PHASE 2	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	○	○	0015 0437 0440 0217 0379 0412 0487 0488
LAGUNA PHASE 2	GAS INJ.	✓	✓	✓	✓	✓	✓	○	✓	
LAGUNA PHASE 2	IMMOBILISER	✓	✓	✓	✓	✓	✓	○	○	0082 0080 0279 0280 0392 0401 0435 0408
LAGUNA PHASE 2	INJECTION	✓	✓	✓	✓	✓	✓	○	※	0381 0414 0277 0340 0013 0267 0179 0079 0379 0412 0407 0434 0379 0412
LAGUNA PHASE 2	INSTRUMENT PANEL	✓	✓	✓	✓	○	✓	○	✓	0216 0194 0086 0118
LAGUNA PHASE 2	SEAT MANAGEMENT	✓	✓	✓	✓	✓	✓	○	○	0437
LAGUNA PHASE 2	VARIABLE P.A.S.	✓	✓	✓	✓	✓	✓	○	○	0438 0601
LAGUNA PHASE 2	VOICE SYNTHESISER	✓	✓	✓	✓	○	✓	○	✓	0216
LAGUNAII PH2	A.B.S.	✓	✓	✓	✓	✓	✓	✓	✓	0056 0156 0442 0325 0367 0438 0328 0345 0043 0273 0022 0054 0169
LAGUNAII PH2	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	✓	✓	0369 0062 0090 0346 0129 0166 0442
LAGUNAII PH2	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0064 0175 0318 0205 0352 0438 0442
LAGUNAII PH2	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0445 0443 0442 0215 0440

LAGUNAII PH2	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	✓	○	✓	0110 0635 0369 0442 0671 0061
LAGUNAII PH2	HANDS-FREE KIT	✓	✓	✓	✓	✓	✓	○	✓	0660 0438 0442 0706 0665 0613 0628
LAGUNAII PH2	HEATER	✓	✓	✓	✓	✓	✓	✓	○	0643 0644
LAGUNAII PH2	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0274 0441 0442 0353 0206 0112 0117 0310 0439 0455 0340 0013 0079 0179 0045 0277 0151 0332 0110 0187 0331
LAGUNAII PH2	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0195 0369 0350 0156 0152 0005 0344 0348 0088 0238 0312 0204 0025 0349 0069 0068 0370 0245 0337 0298 0155 0357 0221 0222 0223 0224 0679 0680 0147 0442
LAGUNAII PH2	LIGHTING	✓	✓	✓	✓	✓	✓	✓	✓	0369 0505 0521 0563 0442 0711
LAGUNAII PH2	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442 0447
LAGUNAII PH2	PARKING BRAKE	✓	✓	✓	✓	✓	✓	✓	✓	0483 0309 0436 0484 0442 0628
LAGUNAII PH2	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0135 0512 0162 0351 0012 0275 0278 0369 0365 0156 0107 0347 0346 0077 0283 0203 0204 0164 0314 0160 0159 0161 0078 0023 0021 0115 0316 0180 0335 0084 0165 0211 0442 0360 0122 0049 0508 0050 0051 0238 0370 0282 0269 0027 0186 0341 0029 0355 0089 0053 0384
LATITUDE/SM5	A.B.S.	✓	✓	✓	✓	✓	○	✓	✓	0056 0043 0328 0345 0325 0438 0329 0442
LATITUDE/SM6	ADIVI	✓	✓	✓	✓	✓	○	✓	✓	0442
LATITUDE/SM5	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	✓	✓	0157 0442
LATITUDE/SM5	AIRBAG / PRETENSIONERS	✓	✓	✓	○	○	○	✓	○	0318
LATITUDE/SM5	AMPLIFIER	✓	✓	✓	✓	○	○	✓	✓	
LATITUDE/SM5	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0132 0456 0476 0700 0442
LATITUDE/SM5	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	○	○	※	0442 0132 0635 0519 0660
LATITUDE/SM5	DRIVER'S DOOR	✓	✓	✓	○	✓	○	✓	○	0442
LATITUDE/SM5	INJECTION	✓	✓	✓	※	※	○	✓	※	0006 0007 0008 0018 0045 0110 0112 0114 0117 0151 0170 0171 0187 0220 0247 0271 0274 0277 0310 0332 0366 0439 0441 0455 0462 0464 0465 0491 0492 0494 0496 0497 0604 0605 0606 0607 0624 0625 0642 0648 0663 0674 0675 0676 0677 0678 0688 0690 0691 0738
LATITUDE/SM5	INSTRUMENT PANEL	✓	✓	✓	✓	✓	※	○	✓	0085 0005 0088 0066 0349 0347 0681 0069 0442 0156
LATITUDE/SM5	LEFT-HAND DOOR	✓	○	○	○	○	○	✓	○	
LATITUDE/SM5	LIGHTING	✓	✓	✓	✓	✓	○	✓	✓	
LATITUDE/SM5	MULTIMED. CONNECTION	✓	✓	✓	○	○	○	✓	○	0442
LATITUDE/SM5	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	○	✓	✓	0338 0570
LATITUDE/SM5	PARKING BRAKE	✓	✓	✓	✓	✓	✓	✓	✓	0309 0658 0444 0442 0474
LATITUDE/SM5	PARKING PROX CAN	✓	✓	✓	✓	※	○	✓	✓	0044 0342 0459 0460 0442 0447
LATITUDE/SM5	PASSENGER'S DOOR	✓	✓	✓	✓	✓	✓	✓	○	
LATITUDE/SM5	RADIO	✓	✓	✓	✓	※	○	✓	✓	0519 0529 0442 0660 0635 0701 0132
LATITUDE/SM5	RIGHT-HAND DOOR	✓	○	○	○	○	○	✓	○	
LATITUDE/SM5	SEAT MANAGEMENT	✓	✓	✓	✓	✓	○	✓	○	
LATITUDE/SM5	UCH	✓	✓	✓	✓	✓	○	✓	✓	0509 0278 0696 0441
LATITUDE/SM5	UPC	✓	✓	✓	✓	✓	○	✓	○	0442 0702 0516 0637 0678 0673 0623 0564 0674 0675 0676 0677 0634 0633 0617 0620 0619 0618 0646
LATITUDE/SM5	TELEMATIC CTRL UNIT	✓	✓	✓	✓	✓	○	✓	✓	0442
LATITUDE/SM5	VARIABLE P.A.S.	✓	✓	✓	✓	✓	✓	✓	○	0442
LOGAN	A.B.S.	✓	✓	✓	✓	✓	✓	✓	○	0056 0039 0367 0325 0442 0438
LOGAN	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	○	✓	0288 0096 0257 0145 0146 0097 0258 0099 0260 0249 0318 0177 0311 0312 0248 0102 0140 0143 0442 0205 0352 0064
LOGAN	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0445 0215 0440 0442 0438

LOGAN	GAS INJ.	✓	✓	✓	✓	✓	✓	✓	✓	0442
LOGAN	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0112 0271 0455 0441 0206 0073 0074 0075 0076 0277 0442 0492 0497 0496 0117 0187 0151 0247 0114 0220 0007 0008 0465 0060
LOGAN	RADIO	✓	✓	✓	✓	✓	✓	○	✓	0437 0519 0660
LOGAN	TRACKER	✓	✓	✓	✓	○	✓	○	✓	0571 0019 0441
LOGAN	UCH	✓	✓	✓	✓	✓	✓	○	※	0133 0442 0562
LOGAN	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	✓	0442 0514 0437
MAST.RWD.PH2	A.B.S.	✓	✓	✓	✓	✓	✓	○	○	0325
MAST.RWD.PH2	ADAPTATION UNIT	✓	✓	✓	✓	○	○	○	○	
MAST.RWD.PH2	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0064 0175 0288 0438 0205 0352 0442
MAST.RWD.PH2	CONNECTION UNIT	✓	✓	✓	✓	✓	✓	✓	✓	0085 0028 0557
MAST.RWD.PH2	DRIVING SCHOOL UNIT	✓	✓	✓	✓	○	○	✓	○	
MAST.RWD.PH2	IMMOBILISER	✓	✓	✓	✓	✓	✓	○	✓	0549 0539
MAST.RWD.PH2	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0119 0009 0454 0151 0323 0442 0179 0079
MAST.RWD.PH3	A.B.S.	✓	✓	✓	✓	✓	✓	✓	✓	0056 0040 0442 0367 0325 0438
MAST.RWD.PH3	ADAPTATION UNIT	✓	✓	✓	✓	○	✓	✓	○	
MAST.RWD.PH3	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0064 0175 0438 0205 0352 0442
MAST.RWD.PH3	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	✓	○	✓	0442 0061
MAST.RWD.PH3	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0274 0310 0439 0455 0277 0441 0151 0332
MAST.RWD.PH3	UCH	✓	✓	✓	✓	✓	✓	○	✓	0539 0549 0659 0442 0077
MASTER	A.B.S.	✓	✓	✓	✓	✓	○	○	○	
MASTER	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	※	✓	○	※	0438 0205 0352 0413 0061 0320 0208 0354 0437
MASTER	CONNECTION UNIT	✓	✓	✓	✓	✓	○	✓	○	0392 0401 0544 0435 0408 0554 0504
MASTER	IMMOBILISER	✓	✓	✓	✓	✓	✓	○	○	0082 0059 0279 0280
MASTER	INJECTION	✓	✓	✓	✓	✓	※	○	※	0340 0013 0267 0179 0079 0411 0378 0410 0380 0407 0385 0418 0379 0412 0406 0433 0434 0119 0114 0454 0428 0399 0382 0415 0442 0250 0362 0361 0486
MASTER	PILOTED SUSPENSION	✓	✓	✓	✓	○	✓	○	○	0437
MASTER III	A.B.S.	✓	✓	✓	✓	✓	○	✓	○	0039 0056 0325 0442 0438 0209 0329
MASTER III	ADAPTATION UNIT	✓	✓	✓	✓	○	○	○	○	
MASTER III	AIR CONDITIONING	✓	✓	✓	✓	✓	○	✓	※	0442 0450 0629
MASTER III	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	○	✓	✓	0288 0064 0318 0249 0442 0352 0205
MASTER III	AUTOMATIC GEARBOX	✓	✓	✓	○	✓	○	✓	○	0132 0274 0448 0476
MASTER III	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	○	○	※	0442
MASTER III	INJECTION	✓	✓	✓	✓	✓	○	✓	※	0114 0117 0247 0648 0606 0491 0492 0690 0187 0220 0455 0457 0324 0441 0151 0464 0452 0663 0688 0607 0045 0008
MASTER III	INSTRUMENT PANEL	✓	✓	✓	✓	✓	○	○	○	0615 0729 0265 0005 0088 0681 0313 0152 0442 0221 0679 0222 0680 0357 0300
MASTER III	LIGHTING	✓	✓	✓	✓	○	○	○	○	
MASTER III	MULTIMED. CONNECTION	✓	✓	✓	✓	✓	○	✓	○	0110
MASTER III	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	○	○	○	0442
MASTER III	PARKING ASSISTANCE	✓	✓	✓	✓	○	○	○	※	
MASTER III	RADIO	✓	※	※	✓	✓	○	○	✓	0442 0437 0524 0660 0529 0567 0519 0635 0701
MASTER III	SMART KEYLESS	✓	✓	✓	○	○	○	✓	○	0132 0442
MASTER III	TELEMATIC CTRL UNIT	✓	✓	✓	✓	✓	○	○	✓	0442

MASTER III	UCH	✓	✓	✓	✓	✓	○	✓	✓	0334 0627 0572 0441
MASTER III	TRACKER	✓	✓	✓	✓	○	✓	○	✓	0571 0019 0441
MASTER III	UPC	✓	✓	✓	✓	✓	○	○	※	0137 0442 0637 0678 0673 0623 0564 0702 0674 0675 0676 0677 0634 0633 0617 0620 0619 0618
MASTER III	TYRES	✓	✓	✓	✓	○	✓	✓	○	
MASTER PH 2	A.B.S.	✓	✓	✓	✓	✓	✓	✓	○	0325
MASTER PH 2	ADAPTATION UNIT	✓	✓	✓	✓	○	○	○	○	
MASTER PH 2	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0064 0175 0288 0438 0205 0352 0442
MASTER PH 2	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	○	○	0458 0476 0274 0448 0477 0475 0438 0442 0490
MASTER PH 2	CONNECTION UNIT	✓	✓	✓	✓	✓	✓	✓	✓	28
MASTER PH 2	DRIVING SCHOOL UNIT	✓	✓	✓	✓	○	○	✓	○	
MASTER PH 2	IMMOBILISER	✓	✓	✓	✓	✓	✓	○	✓	0549 0539
MASTER PH 2	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0119 0009 0454 0250 0151 0442 0114 0179 0079 0013 0362 0361 0486
MASTER PH 2	PARKING ASSISTANCE	✓	✓	✓	✓	○	○	○	✓	0485 0044 0342 0442
MASTER PH 2	PILOTED SUSPENSION	✓	✓	✓	✓	○	✓	○	○	0437
MASTER PH 2	PARKING PROX CAN	✓	✓	✓	✓	○	○	○	✓	0044 0342 0132 0485 0442
MASTER PH 3	A.B.S.	✓	✓	✓	✓	✓	✓	○	※	0438 0325 0040 0329 0367
MASTER PH 3	ADAPTATION UNIT	✓	✓	✓	✓	○	✓	✓	○	
MASTER PH 3	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0064 0175 0438 0205 0352 0442
MASTER PH 3	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	○	○	0448 0476 0274 0477 0475 0438 0490 0489 0442
MASTER PH 3	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	✓	○	✓	0442 0061
MASTER PH 3	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0274 0110 0455 0151 0332 0441 0045 0060 0187 0220 0117 0113 0310 0439 0013 0340 0042 0179 0079 0362 0361 0281
MASTER PH 3	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0044 0485 0342 0442
MASTER PH 3	PILOTED SUSPENSION	✓	✓	✓	✓	✓	✓	✓	○	0685
MASTER PH 3	TRACKER	✓	✓	✓	✓	○	✓	○	✓	0571 0019 0441
MASTER PH 3	UCH	✓	✓	✓	✓	✓	✓	○	✓	0539 0549 0659 0077 0442 0441
MASTER RWD	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	○	✓	0061 0208 0354 0437
MASTER RWD	CONNECTION UNIT	✓	✓	✓	✓	✓	○	✓	○	0392 0401 0544 0435 0408 0554 0504
MASTER RWD	IMMOBILISER	✓	✓	✓	✓	✓	✓	○	○	0082 0059 0279 0280
MASTER RWD	INJECTION	✓	✓	✓	✓	○	✓	✓	○	
MEGANE II	A.B.S.	✓	✓	✓	✓	✓	✓	✓	○	0056 0039 0325 0442 0438 0367 0273 0022 0125 0126 0363
MEGANE II	AIR CONDITIONING	✓	✓	✓	✓	○	✓	✓	✓	0369 0167 0442
MEGANE II	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0035 0036 0037 0153 0154 0100 0261 0251 0252 0092 0093 0071 0072 0145 0146 0295 0296 0136 0290 0103 0101 0262 0102 0249 0205 0352 0438 0442 0188 0189 0109 0108 0192 0190 0191 0095 0255 0263 0106 0256 0254 0318 0060 0360
MEGANE II	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0451 0445 0442 0438 0215 0440
MEGANE II	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	✓	○	✓	0442 0061
MEGANE II	DISCHARGE LAMP	✓	✓	✓	✓	○	✓	✓	✓	0513 0422
MEGANE II	GAS INJ.	✓	✓	✓	✓	✓	✓	✓	✓	0442
MEGANE II	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0274 0112 0455 0441 0206 0353 0271 0310 0439 0073 0074 0075 0076 0110 0277 0079 0179 0151 0123 0187 0045 0246 0332 0340 0331 0060

MEGANE II	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0194 0369 0156 0152 0066 0344 0348 0088 0069 0238 0298 0442 0221 0222 0041 0368 0337 0204 0052 0302 0058 0312 0245 0357 0223 0224 0147 0265
MEGANE II	LEFT COSLAD	✓	✓	✓	✓	✓	✓	○	✓	0513 0369 0514 0442
MEGANE II	LIGHTING	✓	✓	✓	✓	✓	✓	✓	✓	0369 0505 0563 0442 0711
MEGANE II	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442 0447
MEGANE II	RIGHT COSLAD	✓	✓	✓	✓	✓	✓	○	✓	0513 0369 0514 0442
MEGANE II	SUNROOF CONTROL UNIT	✓	✓	✓	✓	✓	✓	✓	✓	0560 0441
MEGANE II	TRACKER	✓	✓	✓	✓	○	✓	○	✓	0571 0019 0441
MEGANE II	UCH	✓	✓	✓	✓	✓	✓	○	✓	0509 0695 0278 0028 0314 0137 0164 0442 0122 0577 0057 0078 0156 0107 0120 0293 0131 0356 0672 0289
MEGANE II	UPC	✓	✓	✓	✓	✓	✓	○	✓	0020 0442 0367
MEGANE II	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	✓	0514 0437 0442 0330 0551
MEGANE/SCEN.	A.B.S.	✓	✓	✓	✓	✓	✓	○	○	0438 0325 0437 0367 0329 0286 0287
MEGANE/SCEN.	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	○	※	0391 0422 0384 0417 0386 0419 0402 0430 0397 0394 0389 0403 0038 0168 0321 0111 0065 0063 0438 0303 0201
MEGANE/SCEN.	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	※	✓	○	※	0438 0205 0352 0413 0061 0426 0424 0396 0320 0208 0354 0437 0064 0175 0319 0288
MEGANE/SCEN.	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	○	※	0015 0276 0437 0440 0217 0379 0412 0487 0488 0445 0451 0473 0017 0480 0344 0215 0055 0014 0470 0453 0442 0276 0438
MEGANE/SCEN.	GAS INJ.	✓	✓	✓	✓	✓	✓	✓	○	0442
MEGANE/SCEN.	INJECTION	✓	✓	✓	✓	✓	※	○	※	0381 0414 0277 0412 0375 0376 0398 0427 0407 0434 0385 0418 0179 0079 0124 0442 0366 0270 0333 0379 0156 0340 0013 0267 0379 0412 0268 0119 0114 0454 0428 0399 0387 0415
MEGANE/SCEN.	SEAT MANAGEMENT	✓	✓	✓	✓	✓	✓	✓	○	0437
MEGANE/SCEN.	SUNROOF CONTROL UNIT	✓	✓	✓	✓	✓	✓	✓	○	
MEGANE/SCEN.	IMMOBILISER	✓	✓	✓	✓	✓	○	○	✓	0528 0525 0501 0573 0574 0059 0082 0526 0527 0581 0591
MEGANE/SCEN.	CONNECTION UNIT	✓	✓	✓	✓	✓	○	✓	✓	
MEGANE/SCEN.	TYRES	✓	✓	✓	✓	✓	○	○	✓	0135 0275 0369 0122 0360 0053
MEGANEIII/SCENICI II	A.B.S.	✓	✓	✓	✓	✓	○	✓	✓	0056 0325 0442 0438 0328 0345 0043 0210 0438
MEGANEIII/SCENICI II	AIR CONDITIONING	✓	✓	✓	✓	✓	○	✓	※	0442
MEGANEIII/SCENICI II	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	○	✓	✓	0288 0318 0442 0352 0205
MEGANEIII/SCENICI II	AUTOMATIC GEARBOX	✓	✓	✓	○	✓	○	✓	○	0132 0456 0476 0700
MEGANEIII/SCENICI II	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	○	○	※	0442 0132 0635 0519 0660
MEGANEIII/SCENICI II	DRIVER'S DOOR	✓	✓	✓	✓	✓	○	✓	○	0442 0629
MEGANEIII/SCENICI II	FRONT CAMERA	✓	✓	✓	✓	○	○	○	○	0514
MEGANEIII/SCENICI II	INJECTION	✓	✓	✓	✓	※	○	✓	✓	0274 0366 0648 0310 0439 0187 0220 0455 0277 0441 0151 0332 0117 0271 0114 0018 0247 0606 0491 0497 0494 0462 0624 0496 0466 0467 0468 0469 0492 0465 0690 0464 0682 0710 0688 0607 0663 0652 0621 0662 0674 0676 0636 0677 0728 0907 0908 0945
MEGANEIII/SCENICI II	INSTRUMENT PANEL	✓	✓	✓	✓	✓	○	✓	✓	0085 0615 0729 0681 0156 0069 0516 0005 0088 0066 0349 0347 0442 0679 0357 0219 0639 0578
MEGANEIII/SCENICI II	LIGHTING	✓	✓	✓	✓	✓	○	✓	✓	
MEGANEIII/SCENICI II	MULTIMED. CONNECTION	✓	✓	✓	✓	✓	○	✓	○	0110
MEGANEIII/SCENICI II	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	○	○	○	0422

MEGANEIII/SCENICI II	PARKING BRAKE	✓	✓	✓	✓	✓	○	○	✓	
MEGANEIII/SCENICI II	PARKING PROX CAN	✓	✓	✓	✓	※	○	✓	✓	0044 0342 0459 0460 0442 0447
MEGANEIII/SCENICI II	PASSENGER'S DOOR	✓	✓	✓	✓	○	○	✓	○	0422
MEGANEIII/SCENICI II	RADIO	✓	※	※	✓	✓	○	✓	※	0524 0529 0567 0660 0519
MEGANEIII/SCENICI II	SEAT MANAGEMENT	✓	✓	✓	○	○	○	✓	○	
MEGANEIII/SCENICI II	SUNROOF CONTROL UNIT	✓	✓	✓	※	○	○	✓	○	0630
MEGANEIII/SCENICI II	TELEMATIC CTRL UNIT	✓	✓	✓	✓	✓	○	✓	✓	0422 0132
MEGANEIII/SCENICI II	UCH	✓	✓	✓	✓	✓	○	✓	✓	0278 0509 0724 0441
MEGANEIII/SCENICI II	UPC	✓	✓	✓	✓	✓	○	✓	○	0442 0564 0617 0618 0619 0620 0623 0633 0634 0637 0673 0674 0675 0676 0677 0678 0702
MEGANEIII/SCENICI II	VARIABLE P.A.S.	✓	✓	✓	✓	✓	○	✓	○	0442 0330
MODUS	A.B.S.	✓	✓	✓	✓	✓	✓	✓	○	0056 0039 0325 0442 0438 0126 0367 0273 0022 0125 0363
MODUS	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	○	✓	0369 0167 0157 0442
MODUS	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0387 0371 0432 0094 0253 0251 0252 0092 0093 0071 0072 0145 0146 0144 0290 0103 0101 0262 0102 0263 0254 0249 0205 0352 0438 0442 0064 0318
MODUS	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0445 0215 0440 0438 0442 0458 0274 0448 0476 0477 0475 0489 0490
MODUS	HANDS-FREE KIT	✓	✓	✓	✓	✓	✓	○	✓	0660 0442 0706 0665 0613 0438 0628
MODUS	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0274 0441 0206 0353 0442 0112 0271 0310 0439 0455 0073 0074 0075 0076 0277 0123 0187 0246 0060 0247 0114 0220 0007 0008 0465 0462 0117 0496 0497 0492 0494 0491 0151
MODUS	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	✓	✓	0369 0088 0005 0156 0152 0344 0348 0069 0238 0204 0245 0442 0357 0221 0679 0222 0680 0150 0149 0265 0667 0668
MODUS	LIGHTING	✓	✓	✓	✓	✓	✓	✓	✓	0369 0505 0521 0563 0518 0442 0711
MODUS	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442 0447
MODUS	TYRES	✓	✓	✓	✓	○	✓	✓	✓	0278 0275 0369 0442 0122 0315
MODUS	UCH	✓	✓	✓	✓	✓	✓	○	✓	0627 0372 0165 0164 0107 0078 0336 0001 0057 0316 0577 0672 0442
MODUS	UPC	✓	✓	✓	✓	✓	✓	○	✓	0442 0367
MODUS VARIABLE P.A.S.	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	✓	0442 0330 0437 0514
NEW SM3/FLUENCE/ME GANE	A.B.S.	✓	✓	✓	✓	※	○	✓	※	0056 0325 0442 0438 0328 0345 0043 0210
NEW SM3/FLUENCE/ME GANE	AIR CONDITIONING	✓	✓	✓	✓	✓	○	✓	✓	0442 0450 0629
NEW SM3/FLUENCE/ME GANE	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	○	✓	✓	0288 0318 0442 0352 0205
NEW SM3/FLUENCE/ME GANE	AMPLIFIER	✓	✓	✓	✓	✓	○	✓	✓	0610
NEW SM3/FLUENCE/ME GANE	AUTOMATIC GEARBOX	✓	✓	✓	※	※	○	✓	○	0445 0215 0440 0442 0438 0132 0476 0456 0700
NEW SM3/FLUENCE/ME GANE	BCB	✓	✓	✓	○	✓	○	✓	○	

NEW SM3/FLUENCE/ME GANE	COMMUNICATIONS UNIT	✓	✓	✓	※	✓	○	○	※	0442 0110 0132 0635 0519 0660
NEW SM3/FLUENCE/ME GANE	DRIVER'S DOOR	✓	✓	✓	✓	✓	○	✓	○	
NEW SM3/FLUENCE/ME GANE	EVC	✓	✓	✓	✓	✓	○	✓	✓	
NEW SM3/FLUENCE/ME GANE	INJECTION	✓	✓	✓	✓	※	○	✓	✓	0187 0220 0441 0462 0466 0467 0468 0469 0455 0465 0464 0007 0008 0045
NEW SM3/FLUENCE/ME GANE	INSTRUMENT PANEL	✓	✓	✓	✓	✓	○	✓	✓	0085 0195 0005 0088 0066 0349 0347 0681 0156 0069 0085 0615 0679 0219 0344 0516
NEW SM3/FLUENCE/ME GANE	LBC	✓	✓	✓	✓	○	○	✓	○	
NEW SM3/FLUENCE/ME GANE	LBC2	✓	✓	✓	○	○	○	○	○	
NEW SM3/FLUENCE/ME GANE	LIGHTING	✓	✓	✓	✓	✓	○	✓	✓	
NEW SM3/FLUENCE/ME GANE	MULTIMED. CONNECTION	✓	✓	✓	✓	✓	✓	✓	○	0110
NEW SM3/FLUENCE/ME GANE	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	○	○	○	0442
NEW SM3/FLUENCE/ME GANE	PARKING BRAKE	✓	✓	✓	✓	✓	○	○	✓	
NEW SM3/FLUENCE/ME GANE	PARKING PROX CAN	✓	✓	✓	✓	✓	○	✓	✓	0044 0342 0459 0460 0442 0447
NEW SM3/FLUENCE/ME GANE	PEB	✓	✓	✓	○	○	○	✓	○	
NEW SM3/FLUENCE/ME GANE	RADIO	✓	※	※	✓	✓	○	✓	✓	0442 0437 0524 0660 0529 0567 0519 0635 0701 0502 0670 0558 0565 0506 0132
NEW SM3/FLUENCE/ME GANE	SUNROOF CONTROL UNIT	✓	✓	✓	✓	✓	○	✓	○	
NEW SM3/FLUENCE/ME GANE	TELEMATIC CTRL UNIT	✓	✓	✓	✓	✓	○	○	✓	0442
NEW SM3/FLUENCE/ME GANE	TRACKER	✓	✓	✓	✓	○	✓	○	✓	0571 0019 0441
NEW SM3/FLUENCE/ME GANE	UCH	✓	✓	✓	✓	✓	○	✓	✓	0278 0509 0627
NEW SM3/FLUENCE/ME GANE	UPC	✓	✓	✓	✓	✓	○	✓	○	0442 0702 0564
NEW SM3/FLUENCE/ME GANE	VARIABLE P.A.S.	✓	✓	✓	✓	✓	○	✓	○	0442 0330
SANDERO	A.B.S.	✓	✓	✓	✓	✓	✓	✓	○	0056 0039 0367 0325 0442 0438
SANDERO	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	○	✓	0288 0096 0257 0145 0146 0097 0258 0099 0260 0249 0318 0177 0311 0312 0248 0102 0140 0143 0442 0205 0352 0064

SANDERO	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0445 0215 0440 0442 0438
SANDERO	GAS INJ.	✓	✓	✓	✓	✓	✓	✓	✓	0442
SANDERO	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0112 0271 0455 0441 0206 0073 0074 0075 0076 0277 0442 0492 0497 0496 0117 0187 0151 0247 0114 0220 0007 0008 0465 0060
SANDERO	RADIO	✓	✓	✓	✓	✓	✓	○	✓	0437 0519 0660
SANDERO	TRACKER	✓	✓	✓	✓	○	✓	○	✓	0571 0019 0441
SANDERO	UCH	✓	✓	✓	✓	✓	✓	○	※	0133 0442 0562
SANDERO	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	✓	0442 0514 0437
SCENIC II	A.B.S.	✓	✓	✓	✓	✓	✓	✓	○	0056 0039 0325 0442 0438 0367 0273 0022 0125 0126 0363
SCENIC II	AIR CONDITIONING	✓	✓	✓	✓	○	✓	✓	✓	0369 0167 0442
SCENIC II	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0035 0036 0037 0153 0154 0188 0189 0109 0108 0192 0190 0191 0249 0100 0261 0251 0252 0092 0093 0095 0255 0071 0072 0145 0146 0295 0296 0136 0290 0103 0102 0263 0106 0256 0254 0318 0205 0352 0438 0442 0064 0369
SCENIC II	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0451 0445 0442 0438 0215 0440
SCENIC II	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	✓	○	✓	0442 0061 0110 0635 0369 0671
SCENIC II	DISCHARGE LAMP	✓	✓	✓	✓	✓	✓	✓	✓	0369 0514 0442
SCENIC II	GAS INJ.	✓	✓	✓	✓	✓	✓	✓	✓	0442
SCENIC II	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0274 0112 0455 0441 0206 0353 0271 0310 0439 0073 0074 0075 0076 0110 0277 0079 0179 0151 0123 0187 0045 0246 0332 0340 0331 0060
SCENIC II	INSTRUMENT PANEL	✓	✓	✓	✓	※	✓	○	✓	0194 0025 0369 0156 0152 0066 0344 0348 0088 0069 0238 0442 0221 0222 0245 0357 0223 0224 0265
SCENIC II	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	○	✓	0110 0369 0442 0484
SCENIC II	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442 0447
SCENIC II	PARKING BRAKE	✓	✓	✓	✓	✓	✓	○	✓	0483 0309 0436 0484 0442 0628
SCENIC II	PARKING PROX CAN	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0459 0460 0442 0447 0438
SCENIC II	RADIO	✓	✓	✓	✓	✓	✓	✓	✓	0510 0088 0442 0437
SCENIC II	UCH	✓	✓	✓	✓	✓	✓	○	✓	0509 0695 0278 0028 0314 0137 0164 0122 0442 0057 0078 0131 0156 0107 0120 0293 0356 0289 0672
SCENIC II	UPC	✓	✓	✓	✓	✓	✓	○	✓	0020 0442 0367
SCENIC II	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	※	0514 0437 0442 0330 0551
SM7 - L47	A.B.S.	✓	✓	✓	※	✓	✓	✓	※	0043 0328 0345 0056 0325 0438 0329 0442
SM7 - L47	ADIVI	✓	✓	✓	✓	✓	✓	✓	○	0442
SM7 - L47	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	✓	✓	0157 0442
SM7 - L47	AIRBAG / PRETENSIONERS	✓	✓	✓	○	○	✓	✓	✓	0318
SM7 - L47	AMPLIFIER	✓	✓	✓	✓	○	○	✓	✓	
SM7 - L47	AUTOMATIC GEARBOX	✓	✓	✓	○	✓	○	✓	○	0132 0456 0476 0700 0442
SM7 - L47	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	○	○	※	0442
SM7 - L47	DRIVER'S DOOR	✓	✓	✓	○	✓	○	✓	○	0422
SM7 - L47	INJECTION	✓	✓	✓	※	✓	※	✓	※	0366 0110 0642 0151 0332 0441 0170 0171
SM7 - L47	INSTRUMENT PANEL	✓	✓	✓	✓	✓	○	✓	✓	0085 0442 0347 0156 0349 0005
SM7 - L47	LEFT-HAND DOOR	✓	○	○	○	○	○	✓	○	
SM7 - L47	LIGHTING	✓	✓	✓	✓	✓	✓	✓	✓	
SM7 - L47	MULTIMED. CONNECTION	✓	✓	✓	○	○	○	✓	○	0442
SM7 - L47	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	○	✓	✓	0338 0570
SM7 - L47	PARKING BRAKE	✓	✓	✓	✓	✓	✓	✓	✓	0309 0658 0444 0442 0474

SM7 - L47	PARKING PROX CAN	V	V	V	V	o	o	V	V	0044 0342 0459 0460 0442 0447
SM7 - L47	PASSENGER'S DOOR	V	V	V	V	V	V	V	o	
SM7 - L47	RADIO	V	V	V	V	※	o	V	V	0635 0701 0519 0660 0442 0132
SM7 - L47	RIGHT-HAND DOOR	V	o	o	o	o	o	V	o	
SM7 - L47	SEAT MANAGEMENT	V	V	V	o	o	V	V	o	
SM7 - L47	UCH	V	V	V	V	V	V	V	V	0509 0278 0696 0441
SM7 - L47	UPC	V	V	V	V	V	V	V	V	
THALIA/SYMB.2	A.B.S.	V	V	V	V	V	V	V	o	0039 0056 0325 0442 0438 0367
THALIA/SYMB.2	AIR CONDITIONING	V	V	V	V	V	V	o	o	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	V	V	V	V	o	V	o	V	0288 0064 0352 0205 0318 0423 0311 0312 0258 0260 0257 0249 0248 0177 0096 0097 0099 0102 0145 0146 0442
THALIA/SYMB.2	AUTOMATIC GEARBOX	V	V	V	V	V	V	V	※	0445 0215 0440 0442 0438 0276
THALIA/SYMB.2	INJECTION	V	V	V	V	V	V	V	※	0112 0271 0455 0441 0206 0073 0074 0075 0076 0277 0442 0132 0119 0366 0439 0268 0156 0013 0543 0181 0272 0492 0497 0496 0117 0187 0151
THALIA/SYMB.2	TRACKER	V	V	V	V	o	V	o	V	0571 0019 0441
THALIA/SYMB.2	UCH	V	V	V	V	V	V	o	※	0133 0442 0549 0562
THALIA/SYMB.2	VARIABLE P.A.S.	V	V	V	V	o	o	V	o	0442 0437
THALIA/SYMBL	A.B.S.	V	V	V	V	V	※	o	※	0438 0325 0039 0367 0442
THALIA/SYMBL	AIR CONDITIONING	V	V	V	V	V	※	o	o	0391 0422 0384 0417 0386 0419 0402 0430 0397 0394 0389 0403 0038 0168 0321 0111 0065 0063 0438
THALIA/SYMBL	AIRBAG / PRETENSIONERS	V	V	V	V	※	V	o	V	0208 0354 0064 0438 0288 0318 0248 0249 0257 0258 0096 0097 0177 0442 0205 0352
THALIA/SYMBL	AUTOMATIC GEARBOX	V	V	V	V	V	V	o	※	0437 0440 0217 0379 0412 0487 0488 0445 0451 0473 0017 0480 0344 0215 0055 0014 0470 0453 0442 0276 0438
THALIA/SYMBL	CONNECTION UNIT	V	V	V	V	V	※	V	※	0554 0504 0600 0590 0595 0585 0597 0587 0392 0401 0583 0593 0544 0435 0408 0594 0584 0133 0028 0555 0538 0437 0395 0425
THALIA/SYMBL	IMMOBILISER	V	V	V	V	V	※	o	※	0082 0059 0279 0280 0549 0539 0588 0598 0028
THALIA/SYMBL	INJECTION	V	V	V	V	V	V	V	※	0277 0442 0179 0079 0112 0119 0366 0493 0498 0156 0013 0268 0340 0070 0272 0181 0182 0183 0184 0185
TRAFIC II	A.B.S.	V	V	V	V	※	※	o	※	0325 0367 0329
TRAFIC II	ADAPTATION UNIT	V	V	V	V	o	o	o	o	
TRAFIC II	AIRBAG / PRETENSIONERS	V	V	V	V	o	V	V	V	0175 0319 0288 0174 0205 0352 0438 0442 0318 0064
TRAFIC II	AUTOMATIC GEARBOX	V	V	V	V	V	V	o	o	0458 0476 0274 0448 0477 0475 0438 0442 0490
TRAFIC II	CONNECTION UNIT	V	V	V	V	V	V	V	V	0028
TRAFIC II	DRIVING SCHOOL UNIT	V	V	V	V	o	o	o	o	
TRAFIC II	HEATER	V	V	V	V	V	V	o	o	
TRAFIC II	IMMOBILISER	V	V	V	V	V	V	o	V	0549 0539
TRAFIC II	INJECTION	V	V	V	V	V	V	V	V	0277 0179 0079 0442 0407 0434 0379 0412 0119 0114 0454 0428 0399 0382 0415 0013 0362 0361 0009 0151
TRAFICII P2/3	A.B.S.	V	V	V	V	V	V	o	※	0040 0438 0325 0329 0367 0039 0056 0442 0363 0126 0209 0125
TRAFICII P2/3	ADAPTATION UNIT	V	V	V	V	o	V	V	o	
TRAFICII P2/3	AIR CONDITIONING	V	V	V	V	V	V	o	V	0369 0449 0442
TRAFICII P2/3	AIRBAG / PRETENSIONERS	V	V	V	V	o	V	V	V	0288 0064 0175 0174 0318 0205 0352 0438 0442
TRAFICII P2/3	AUTOMATIC GEARBOX	V	V	V	V	V	V	o	o	0448 0476 0274 0477 0475 0438 0490 0489 0442
TRAFICII P2/3	COMMUNICATIONS UNIT	V	V	V	V	V	V	o	※	0442 0061 0

TRAFICII P2/3	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0274 0441 0206 0353 0110 0045 0455 0277 0310 0439 0151 0332 0187 0112 0117 0406 0013 0340 0079 0179 0220 0060 0281 0247 0114 0461 0648 0606 0491 0492 0690 0007 0008 0457 0374
TRAFICII P2/3	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	✓	✓	0615 0729 0265 0088 0516 0156 0152 0568 0344 0069 0312 0004 0058 0442 0230 0147
TRAFICII P2/3	MULTIMED. CONNECTION	✓	✓	✓	✓	○	✓	✓	○	0567
TRAFICII P2/3	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	○	✓	0726 0484 0552 0670 0541 0442
TRAFICII P2/3	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442
TRAFICII P2/3	RADIO	✓	✓	✓	✓	✓	✓	○	✓	0442 0437 0631
TRAFICII P2/3	UCH	✓	✓	✓	✓	✓	✓	○	✓	0539 0549 0659 0077 0442 0238 0027 0078 0441 0669 0557
TWINGO II	A.B.S.	✓	✓	✓	✓	✓	✓	✓	※	0056 0156 0367 0325 0442 0438 0317 0039 0329 0273 0022
TWINGO II	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	○	✓	0369 0167 0157 0442
TWINGO II	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0096 0257 0145 0146 0071 0072 0097 0258 0099 0260 0102 0249 0318 0205 0352 0442
TWINGO II	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0274 0448 0476 0477 0438 0489 0490 0442
TWINGO II	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0274 0187 0206 0353 0441 0112 0271 0310 0439 0455 0073 0074 0075 0076 0060 0247 0114 0220 0007 0008 0465
TWINGO II	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0156 0152 0344 0088 0069 0238 0312 0302 0130 0116 0265 0442 0148 0230 0004 0058
TWINGO II	MULTIMED. CONNECTION	✓	✓	✓	✓	○	✓	✓	○	0567 0438
TWINGO II	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	○	✓	0484 0552 0541 0369
TWINGO II	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442
TWINGO II	RADIO	✓	✓	✓	✓	✓	✓	○	✓	0442 0437 0701 0132 0635 0567
TWINGO II	REV COUNTER/SYMBOL	✓	✓	※	✓	✓	✓	○	✓	0559 0344 0547 0442 0531 0532
TWINGO II	UCH	✓	✓	✓	✓	✓	✓	○	✓	0048 0016 0120 0338 0131 0233 0314 0137 0077 0026 0030 0283 0373 0164 0027 0078 0234 0193 0019
TWINGO II	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	✓	0542
TWINGO PHASE 2	A.B.S.	✓	✓	✓	✓	✓	※	○	※	0438 0039 0367 0325 0442
TWINGO PHASE 2	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	※	✓	○	※	0438 0205 0352 0413 0061 0426 0424 0396 0320 0208 0354 0437 0064 0175 0319 0288
TWINGO PHASE 2	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	○	※	0458 0476 0274 0156 0477 0438 0442 0448 0490 0489
TWINGO PHASE 2	CONNECTION UNIT	✓	✓	✓	✓	✓	※	○	※	0392 0401 0544 0435 0408 0554 0504 0028 0133
TWINGO PHASE 2	GAS INJ.	✓	✓	✓	✓	✓	✓	○	※	0442
TWINGO PHASE 2	IMMOBILISER	✓	✓	✓	✓	✓	※	○	※	0082 0059 0279 0280 0549 0539 0588 0598 0133 0028 0575
TWINGO PHASE 2	INJECTION	✓	✓	✓	✓	✓	※	○	✓	0381 0414 0398 0427 0179 0079 0277 0212 0393 0442
VEL SATIS	A.B.S.	✓	✓	✓	✓	✓	✓	✓	✓	0056 0367 0003 0156 0297 0325 0442 0438 0499 0495 0329
VEL SATIS	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	✓	✓	0369 0346 0129 0166 0062 0090 0442
VEL SATIS	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	○	✓	0288 0064 0175 0318 0205 0352 0438 0442 0319
VEL SATIS	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0445 0443 0442
VEL SATIS	DISCHARGE LAMP	✓	✓	✓	✓	✓	✓	✓	✓	0369 0514 0442
VEL SATIS	DISTANCE REGULATOR	✓	✓	✓	✓	○	✓	✓	✓	0326 0645 0438 0442
VEL SATIS	HEATER	✓	✓	✓	✓	✓	✓	✓	○	0643 0644
VEL SATIS	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0274 0455 0310 0439 0045 0277 0151 0332 0441 0179 0079 0442 0340 0013 0018 0353 0206 0112 0117
VEL SATIS	HANDS-FREE KIT	✓	✓	✓	✓	✓	✓	○	✓	0660 0438 0442 0706 0665 0613 0628

VEL SATIS	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0369 0087 0349 0240 0241 0358 0359 0235 0236 0442 0085 0312 0121 0350 0156 0152 0005 0344 0348 0088 0238 0204 0025 0069 0068 0229 0231 0228 0244 0370 0245 0337 0298 0357 0271 0272 0679 0680 0147
VEL SATIS	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442
VEL SATIS	PARKING BRAKE	✓	✓	✓	✓	✓	✓	○	✓	0483 0309 0436 0484 0442
VEL SATIS	TYRES	✓	✓	✓	✓	✓	✓	○	✓	0275 0278 0369 0315 0053 0122
VEL SATIS	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0512 0351 0049 0508 0156 0050 0051 0237 0077 0370 0282 0204 0314 0164 0346 0269 0160 0159 0021 0078 0115 0023 0027 0186 0341 0107 0029 0355 0089 0211 0347 0207 0238 0442
VELSATIS PH2	A.B.S.	✓	✓	✓	✓	✓	✓	✓	✓	0056 0367 0003 0156 0297 0325 0442 0438 0499 0495 0329 0328 0345 0043 0273 0022 0054 0169
VELSATIS PH2	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	✓	✓	0369 0062 0090 0346 0129 0166 0442
VELSATIS PH2	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0064 0175 0318 0205 0352 0438 0442
VELSATIS PH2	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0445 0443 0442 0438 0472 0458 0456
VELSATIS PH2	COMMUNICATIONS UNIT	✓	✓	✓	✓	✓	✓	○	✓	0110 0635 0369 0442 0671
VELSATIS PH2	HANDS-FREE KIT	✓	✓	✓	✓	✓	✓	○	✓	0660 0438 0442 0706 0665 0613 0628
VELSATIS PH2	HEATER	✓	✓	✓	✓	✓	✓	✓	○	0643 0644
VELSATIS PH2	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0274 0455 0310 0439 0045 0277 0151 0332 0441 0179 0079 0442 0018 0353 0206 0112 0117 0340 0013 0331 0272 0110 0187
VELSATIS PH2	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0195 0369 0350 0156 0152 0005 0344 0348 0088 0238 0312 0204 0025 0349 0069 0068 0229 0231 0228 0244 0370 0245 0337 0298 0357 0221 0222 0223 0224 0679 0680 0442 0147
VELSATIS PH2	LIGHTING	✓	✓	✓	✓	✓	✓	✓	✓	0369 0505 0521 0563 0442 0711
VELSATIS PH2	PARKING ASSISTANCE	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0442 0447
VELSATIS PH2	PARKING BRAKE	✓	✓	✓	✓	✓	✓	✓	✓	0483 0309 0436 0484 0442 0628
VELSATIS PH2	PARKING PROX CAN	✓	✓	✓	✓	○	✓	✓	✓	0485 0044 0342 0459 0460 0442 0447 0438
VELSATIS PH2	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0135 0512 0162 0012 0351 0275 0278 0369 0156 0107 0347 0346 0370 0077 0283 0203 0204 0164 0314 0160 0159 0161 0078 0023 0021 0115 0316 0180 0335 0084 0165 0211 0360 0442 0122 0284 0034
WIND	A.B.S.	✓	✓	✓	✓	✓	✓	✓	※	0056 0156 0325 0442 0438 0367 0317 0039 0329 0022 0273
WIND	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	○	✓	0157 0369 0167 0442
WIND	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0288 0318 0259 0260 0257 0249 0096 0099 0102 0145 0146 0098 0442 0352 0205
WIND	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0274 0310 0439 0187 0206 0353 0441
WIND	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	✓	✓	0195 0005 0088 0091 0069 0344 0204
WIND	MULTIMED. CONNECTION	✓	✓	✓	✓	○	✓	✓	○	0567 0442 0438
WIND	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	○	✓	0484 0552 0541 0442
WIND	RADIO	✓	✓	✓	✓	✓	✓	○	✓	0442 0061
WIND	SUNROOF CONTROL UNIT	✓	✓	✓	✓	○	✓	✓	○	0441
WIND	UCH	✓	✓	✓	✓	✓	✓	○	✓	0627 0048 0016 0120 0338 0131 0314 0137 0077 0026 0030 0283 0373 0164 0027 0078 0234 0193 0534 0019 0442
WIND	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	✓	0542
LODGY	A.B.S.	✓	✓	✓	✓	✓	✓	○	※	0345 0043 0328 0056 0442 0438 0325 0329
LODGY	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	✓	✓	0288 0442 0352 0205
LODGY	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	○	0437
LODGY	RADIO	✓	✓	✓	✓	※	※	○	✓	0519 0660

LODGY	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0441 0316
LODGY	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0156 0088 0066 0005 0516 0681 0130 0616 0357
LODGY	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0492 0497 0496 0117 0491 0187 0441 0151 0494 0464 0624 0728 0247 0465 0691 0271 0114 0651 0466 0467 0468 0469 0457 0455 0324 0606 0688 0605 0663 0682 0662 0678 0652 0018 0112 0113 0690 0274 0648 0452 0274 0648
DOKKER	A.B.S.	✓	✓	✓	✓	✓	✓	○	※	0345 0043 0328 0056 0442 0438 0325 0329
DOKKER	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	✓	✓	0288 0442 0352 0205
DOKKER	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	○	0437
DOKKER	RADIO	✓	✓	✓	✓	※	※	○	✓	0519 0660
DOKKER	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0441 0316
DOKKER	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0156 0088 0066 0005 0516 0681 0130 0616 0357
DOKKER	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0492 0497 0496 0117 0491 0187 0441 0151 0494 0464 0624 0728 0247 0465 0114 0606 0688 0605 0663 0682 0662 0678 0652 0018 0112 0691 0113 0690 0274 0324 0571 0019 0441
LOGAN II/SANDERO II	TRACKER	✓	✓	✓	✓	○	✓	○	✓	0571 0019 0441
LOGAN II/SANDERO II	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	✓	✓	0288 0442 0352 0205
LOGAN II/SANDERO II	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	○	0437
LOGAN II/SANDERO II	RADIO	✓	✓	✓	✓	※	※	○	✓	0519 0660
LOGAN II/SANDERO II	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0441 0164 0705 0019 0316
LOGAN II/SANDERO II	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0156 0088 0066 0005 0516 0681 0130 0616 0357 0069
LOGAN II/SANDERO II	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0492 0497 0496 0117 0491 0187 0441 0151 0691 0271 0114 0651 0624 0466 0467 0468 0469 0465 0457 0455 0324 0606 0688 0605 0663 0682 0662 0678 0464 0652 0018 0112 0247 0113 0690 0274 0728
LOGAN II/SANDERO II	A.B.S.	✓	✓	✓	✓	✓	✓	✓	※	0345 0328 0043 0700 0056 0442 0438 0325 0329
LOGAN II/SANDERO II	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	✓	✓	
LOGAN II/SANDERO II	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	○	○	0338 0570 0110 0132
TWIZY	UCH	✓	✓	✓	✓	○	✓	○	✓	0133 0442
TWIZY	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	0096 0257 0145 0146 0097 0258 0099 0260 0102 0249 0318 0248 0177 0140 0143 0311 0312 0442 0352 0205
TWIZY	INSTRUMENT PANEL	✓	○	○	✓	○	✓	○	✓	0088 0369 0638 0614 0653 0357
TWIZY	LBC	✓	✓	✓	✓	○	✓	✓	○	0709
TWIZY	ADAPTATION UNIT	✓	✓	✓	✓	○	✓	○	○	
TWIZY	BCB	✓	○	○	○	○	○	✓	○	
ZOE	VARIABLE P.A.S.	✓	✓	✓	✓	✓	○	✓	○	0442 0330
ZOE	TELEMATIC CTRL UNIT	✓	✓	✓	✓	✓	○	✓	✓	0442
ZOE	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	✓	✓	0288 0442 0352 0205
ZOE	RADIO	✓	✓	✓	✓	✓	○	✓	✓	0519 0660 0701 0635 0502 0670 0558 0565 0506
ZOE	A.B.S.	✓	✓	✓	✓	✓	✓	✓	✓	0345 0328 0043 0700 0056 0442 0438 0325 0329
ZOE	UNCOUPLED PEDAL	✓	✓	✓	✓	✓	✓	✓	○	0132 0683 0664 0684 0700
ZOE	PARKING PROX CAN	✓	✓	✓	✓	○	○	✓	✓	0044 0442 0447
ZOE	AIR CONDITIONING	✓	✓	✓	✓	✓	✓	✓	✓	
ZOE	COMMUNICATIONS UNIT	✓	✓	✓	○	✓	○	✓	○	0110 0132
ZOE	LBC	✓	✓	✓	✓	○	✓	✓	○	

ZOE	BCB	✓	✓	✓	✓	✓	✓	✓	○	
ZOE	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	✓	✓	0194 0088 0681 0069 0349
ZOE	EVC	✓	✓	✓	✓	✓	○	✓	✓	
ZOE	PEB	✓	✓	✓	✓	✓	✓	✓	○	
ZOE	UPC	✓	✓	✓	✓	✓	✓	✓	✓	0637 0623 0516
ZOE	UCH	✓	✓	✓	✓	✓	✓	✓	✓	
ZOE	LBC2	✓	○	○	○	○	○	○	○	
ZOE	ADAPTATION UNIT	✓	✓	✓	✓	○	✓	○	○	
CUJO IV	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	✓	✓	0288 0442 0352 0205
CUJO IV	RADIO	✓	✓	✓	✓	※	※	○	✓	0519 0660 0701 0635 0502 0670 0558 0565 0506
CUJO IV	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0441 0316
CUJO IV	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0492 0497 0496 0117 0491 0187 0441 0151 0494 0464 0624 0728 0247 0465 0691 0271 0114 0651 0466 0467 0468 0469 0457 0455 0324 0606 0688 0605 0663 0682 0667 0678 0657 0018 0117 0113 0690 0274
CUJO IV	A.B.S.	✓	✓	✓	✓	✓	✓	✓	※	0345 0328 0043 0700 0056 0442 0438 0325 0329
CUJO IV	PARKING PROX CAN	✓	✓	✓	✓	✓	○	✓	✓	0044 0442 0447
CUJO IV	AIR CONDITIONING	✓	✓	✓	※	✓	※	○	※	0442 0629
CUJO IV	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0516 0005 0088 0066 0357
CUJO IV	HANDS-FREE MODULE	✓	✓	✓	✓	✓	✓	✓	✓	0509 0699
CUJO IV	COMMUNICATIONS UNIT	✓	✓	✓	○	✓	○	✓	○	0110 0132
CUJO IV	VARIABLE P.A.S.	✓	✓	✓	✓	✓	✓	✓	○	0442
CUJO IV	UPC	✓	✓	✓	✓	✓	✓	✓	✓	0637 0678 0367 0442 0702 0516
CUJO IV	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	○	○	0338 0570 0656
CUJO IV	TELEMATIC CTRL UNIT	✓	✓	✓	✓	✓	✓	✓	✓	0132 0442
CUJO IV	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0132 0476 0456 0700 0442
CUJOIIP6	INJECTION	✓	✓	✓	✓	✓	✓	✓	※	0277 0442 0492 0497 0496 0117 0187 0441 0151
CUJOIIP6	TRACKER	✓	✓	✓	✓	✓	✓	○	✓	0571 0019 0441
CUJOIIP6	UCH	✓	✓	✓	✓	✓	○	✓	✓	0133 0562 0442
CUJOIIP6	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	
CAPTUR/QM3	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0151 0187 0441 0492 0497 0496 0117 0132 0491 0494 0271 0114 0466 0467 0468 0469 0455 0465 0457
CAPTUR/QM3	A.B.S.	✓	✓	✓	✓	✓	✓	○	※	
CAPTUR/QM3	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	0195 0005 0088 0066 0132 0357
CAPTUR/QM3	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0441 0132 0316
CAPTUR/QM3	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	✓	✓	0205 0442 0132 0288 0352
CAPTUR/QM3	AIR CONDITIONING	✓	✓	✓	※	✓	※	✓	※	0442 0132
CAPTUR/QM3	AUTOMATIC GEARBOX	✓	✓	✓	✓	✓	✓	✓	○	0456 0132 0476 0442
CAPTUR/QM3	VARIABLE P.A.S.	✓	✓	✓	✓	✓	✓	✓	○	0442 0132
CAPTUR/QM3	UPC	✓	✓	✓	✓	✓	✓	✓	✓	0564 0441 0442 0367
CAPTUR/QM3	PARKING PROX CAN	✓	✓	✓	✓	✓	✓	✓	✓	0044 0442 0447
CAPTUR/QM3	TELEMATIC CTRL UNIT	✓	✓	✓	✓	✓	※	✓	✓	0442 0132
CAPTUR/QM3	HANDS-FREE MODULE	✓	✓	✓	✓	✓	✓	✓	✓	0509 0132
CAPTUR/QM3	COMMUNICATIONS UNIT	✓	✓	✓	○	✓	○	✓	○	0110
CAPTUR/QM3	RADIO	✓	✓	✓	✓	✓	※	○	✓	0519 0502 0558 0565 0506 0132
CAPTUR/QM3	MULTIMEDIA INTERFACE	✓	✓	✓	✓	✓	✓	○	○	0338 0570 0110 0132

DUSTER PH2	INJECTION	✓	✓	✓	✓	✓	✓	✓	✓	0151 0187 0441 0271 0114 0132 0117 0492 0491 0466 0467 0468 0469 0455 0465 0457 0324 0018 0220 0247 0452 0497 0496 0045
DUSTER PH2	A.B.S.	✓	✓	✓	✓	✓	✓	○	※	
DUSTER PH2	INSTRUMENT PANEL	✓	✓	✓	✓	✓	✓	○	✓	
DUSTER PH2	UCH	✓	✓	✓	✓	✓	✓	✓	✓	0441 0132 0316
DUSTER PH2	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	✓	✓	✓	✓	
DUSTER PH2	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	○	0437 0132
DUSTER PH2	4 WHEELS DRIVE	✓	✓	✓	✓	✓	✓	○	○	
DUSTER PH2	RADIO	✓	✓	✓	✓	✓	※	○	✓	0519 0132
TWINGO III	INJECTION	✓	✓	✓	✓	※	✓	✓	✓	
TWINGO III	A.B.S.	✓	✓	✓	✓	○	✓	✓	✓	
TWINGO III	INSTRUMENT PANEL	✓	✓	✓	✓	○	✓	✓	✓	
TWINGO III	UCH	✓	✓	✓	✓	○	✓	✓	✓	
TWINGO III	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	✓	
TWINGO III	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	✓	○	
TWINGO III	AIR CONDITIONING	✓	✓	✓	✓	○	✓	○	○	
TWINGO III	COMMUNICATIONS UNIT	✓	✓	○	○	○	○	✓	○	
TWINGO III	FRONT CAMERA	✓	✓	✓	✓	○	○	○	○	
TWINGO III	RADIO	✓	✓	✓	✓	○	✓	○	○	
TWINGO III	GEARBOX ELEC CONTROL	✓	✓	✓	○	○	○	✓	○	
TWINGO III	MULTIMEDIA INTERFACE	✓	✓	✓	✓	○	✓	○	○	
TWINGO III	TELEMATIC CTRL UNIT	✓	✓	✓	✓	○	✓	○	✓	
TWINGO III	UPC	✓	✓	✓	✓	○	✓	✓	✓	
KANGOO VLL	INJECTION	✓	✓	✓	✓	※	✓	✓	○	
KANGOO VLL	A.B.S.	✓	✓	✓	✓	✓	✓	✓	✓	
KANGOO VLL	UCH	✓	✓	✓	✓	○	✓	○	✓	
KANGOO VLL	VARIABLE P.A.S.	✓	✓	✓	✓	○	○	✓	○	
KANGOO VLL	TRACKER	✓	✓	✓	✓	○	✓	✓	○	
TRAFIC III	INJECTION	✓	✓	✓	✓	○	✓	✓	○	
TRAFIC III	A.B.S.	✓	✓	✓	✓	○	✓	✓	○	
TRAFIC III	INSTRUMENT PANEL	✓	✓	✓	✓	○	✓	○	○	
TRAFIC III	UCH	✓	✓	✓	✓	○	✓	✓	○	
TRAFIC III	AIRBAG / PRETENSIONERS	✓	✓	✓	✓	○	✓	✓	○	
TRAFIC III	AIR CONDITIONING	✓	✓	✓	✓	○	✓	○	○	
TRAFIC III	VARIABLE P.A.S.	✓	✓	✓	✓	○	✓	○	○	
TRAFIC III	UPC	✓	✓	✓	✓	○	✓	✓	○	
TRAFIC III	ADAPTATION UNIT	✓	✓	✓	✓	○	✓	○	○	
TRAFIC III	PARKING PROX CAN	✓	✓	✓	✓	○	✓	✓	○	
TRAFIC III	RADIO	✓	✓	✓	✓	○	✓	✓	○	
TRAFIC III	TELEMATIC CTRL UNIT	✓	✓	✓	✓	○	✓	○	○	
TRAFIC III	HANDS-FREE MODULE	✓	✓	✓	✓	○	✓	✓	○	
TRAFIC III	COMMUNICATIONS UNIT	✓	✓	✓	✓	○	✓	✓	○	
TRAFIC III	MULTIMEDIA INTERFACE	✓	✓	✓	✓	○	✓	○	○	
TRAFIC III	HEATER	✓	✓	✓	✓	○	✓	○	○	



Special Function

Index	Special Function	Index	Special Function
0001	3-button key	0002	Abs type
0003	Abs/esp calibration	0004	Adac configuration
0005	Adac display type	0006	Adaptive value - a/f ratio
0007	Adaptives after regenerating particle filter	0008	Adaptives after replacing cabin filter
0009	Adaptives on egr valve fault	0010	Additional heating
0011	Adjust oil change counter	0012	Aerial test
0013	Air conditioning	0014	Air conditioning connection fault finding
0015	Air conditioning programming	0016	Air conditioning type
0017	Air conditioning with wire connection	0018	Air path programming
0019	Alarm	0020	Alternator type
0021	Auto locking warning sound	0022	Auto stop lights illumination authorisation
0023	Automatic closing of windows (by card)	0024	Automatic folding of door mirrors
0025	Automatic handbrake	0026	Automatic lighting function
0027	Automatic locking when driving	0028	Automatic relocking
0029	Automatic seat recall	0030	Automatic wiping function
0031	Avantime (f4r): with heated windscreen	0032	Avantime (f4r): without heated windscreen
0033	Avantime(except f4r):with heated windscr.	0034	Avantime(expt f4r):without heated windscr.
0035	B/c with fr/rr thorax + head airbags	0036	B/c with front thorax + head airbags
0037	B/c without side airbags	0038	Behr probe configuration
0039	Bleed hydraulic unit and braking circuits	0040	Bleeding the braking system
0041	Bodywork type	0042	Boiler
0043	Brake pressure offset sensor	0044	Buzzer volume
0045	Cabin filter regeneration	0046	Calibr. entry lev. instr. panel fuel gauge
0047	Calibr. mid/top range instr. panel fuel gauge	0048	Calibration
0049	Card battery charge tester	0050	Card locking
0051	Card reminder warning	0052	Card/key
0053	Change in triggering limit	0054	Chassis wear programming
0055	Check motor torque by abs	0056	Check target teeth
0057	Childproof lock	0058	Clock
0059	Coded diesel solenoid valve engine immobiliser	0060	Commercial vehicle idle speed modification
0061	Comp configuration	0062	Compressor type
0063	Config. without recycling flap auto-setting	0064	Configuration of system components
0065	Configuration with recycling flap autosetting	0066	Consumption measurement units
0067	Control panel type	0068	Cruise contr./sp. limit. speed diff.
0069	Cruise ctrl/spd limiter	0070	Cruise ctrl/speed limiter
0071	Curtain side air bag, driver's side	0072	Curtain side air bag, passenger side
0073	Cylinder 1 injector code	0074	Cylinder 2 injector code
0075	Cylinder 3 injector code	0076	Cylinder 4 injector code
0077	Daytime running lights	0078	Deadlocking
0079	Decrement idle speed	0080	Diesel engine immobiliser
0081	Diesel injection	0082	Diesel/petrol eng immob without coded sol valve
0083	Directional headlights	0084	Discharge lamp
0085	Distance before next oil change	0086	Distance before next oil change configuration
0087	Distance regulator	0088	Distance units
0089	Door unlocking mode	0090	Drive ratio
0091	Drive type configuration	0092	Driver front air bag circuit 1
0093	Driver front air bag circuit 2	0094	Driver lap strap pretensioner
0095	Driver' side rear frontal airbag	0096	Driver's front airbag
0097	Driver's front buckle pretensioner	0098	Driver's front inertia reel
0099	Driver's front side impact sensor	0100	Driver's lap strap/seat airbag
0101	Driver's lateral sensor	0102	Driver's seat buckle sensor
0103	Driver's seat position sensor	0104	Driver's seat sensor

0105	Driver's side rear inertia reel	0106	Driver's side rear strap sensor
0107	Driving type	0108	E with side airbags
0109	E without side airbags	0110	Ecu memory
0111	Eeprom probe configuration	0112	Egr adaptives
0113	Egr programming	0114	Egr valve programming
0115	Electric child safety	0116	Electric power assisted steering
0117	Engine adaptives	0118	Engine immobiliser 2
0119	Engine parameter adaptives	0120	Engine type
0121	Engine/gearbox type	0122	Enter recommended pressures
0123	Enter vin code	0124	Erase obd fault memory
0125	Esp automatic reconnection threshold	0126	Esp sensor programming
0127	Espace: with evaporator sensor	0128	Espace: without evaporator sensor
0129	Evaporator temperature sensor	0130	External temperature
0131	External temperature sensor	0132	Fault memory
0133	Flashing buzzer	0134	Flywheel angle offset reading
0135	Following tyre change	0136	Front buckle pretensioners
0137	Front fog lights	0138	Front left-hand buckle pretensioner
0139	Front left-hand chest-level side airbag	0140	Front left-hand inertia wheel
0141	Front right-hand buckle pretensioner	0142	Front right-hand chest-level side airbag
0143	Front right-hand inertia wheel	0144	Front seat belt retractors
0145	Front thorax side air bag, driver side	0146	Front thorax side air bag, passenger side
0147	Fuel gauge calibration	0148	Fuel level display update
0149	Fuel sender calibration (doi).	0150	Fuel sender calibration (europe)
0151	Fuel supply prevention	0152	Fuel type
0153	G/s with head airbags	0154	G/s without head airbag
0155	Gas reserv. capac.	0156	Gearbox type
0157	Geographical zone	0158	Hands free
0159	Hands free locking	0160	Hands-free function
0161	Hands-free start-up	0162	Hands-free system test
0163	Hazard lamps recall on trf	0164	Hazard warning lights illumination by abs
0165	Headlight washers	0166	Heated windscreen
0167	Heating resistor type	0168	Hokuriku probe configuration
0169	Hydraulic brake compensation	0170	Idle air volume learning - factory mode
0171	Idle air volume learning - service mode	0172	Idle speed setting decrementation
0173	Idle speed setting incrementation	0174	Igniters in series configuration
0175	Ignition module configuration	0176	Ignition timing adjustment
0177	Impact information connection	0178	Increase fuel warning threshold
0179	Increment of idle speed	0180	Inhibition of selective door opening
0181	Injection prohibition	0182	Injector cylinder 1
0183	Injector cylinder 2	0184	Injector cylinder 3
0185	Injector cylinder 4	0186	Interior lighting
0187	Interval of oil change (ocs) oxidation	0188	J without side airbags
0189	J with side ab w/o rear chest ab	0190	K/I with f chest + curt airbags
0191	K/I with f/r chest + curt airbags	0192	K/I without side airbags
0193	Key type	0194	Language configuration
0195	Language version.	0196	Left hand drive
0197	Left hand drive / 4 cylinder configuration	0198	Left hand drive / 6 cylinder configuration
0199	Left hand drive / diesel configuration	0200	Left-hand curtain airbag
0201	Left-hand drive	0202	Left-hand side impact sensor
0203	Light sensor sensitivity	0204	Lights automatic illumination
0205	Lock computer	0206	Lock injector control
0207	Lock latch locking	0208	Lock passenger's front air bag
0209	Longitudinal acceleration sensor	0210	Longitudinal acceleration sensor offset
0211	Memorising driver's seat position	0212	Memory saved
0213	Navigation system	0214	No abs
0215	Note oil wear counter	0216	Number of cylinders configuration
0217	Oil change counter offset	0218	Oil change counter reset

0219	Oil change frequency	0220	Oil change interval (ocs): dilution
0221	Oil change interval in km	0222	Oil change interval in months
0223	Oil change range: current value in km	0224	Oil change range: current value in months
0225	Oil level displayed 20 sec when adac pressed	0226	Oil level displayed 20sec
0227	Oil measurement	0228	Oil measurement timer
0229	Oil pressure warning threshold	0230	Oil service and odometry miles - km
0231	Oil temperature measurement threshold	0232	One-touch electric window(s)
0233	One-touch electric window(s) / sunroof	0234	Opening elements central locking
0235	Other at	0236	Other manual
0237	Overspeed alarm for arabia	0238	Overspeed function - arabia
0239	Oxygen sensor test	0240	P9x at
0241	P9x manual	0242	Parametrage prive 1
0243	Parking aid	0244	Parking proximity sensor function
0245	Particle filter	0246	Particle filter adaptives
0247	Particle filter relative pressure sensor	0248	Pass airbag deactivation warning light
0249	Passenger air bag locking mode	0250	Passenger compartment heating resistor
0251	Passenger front air bag circuit 1	0252	Passenger front air bag circuit 2
0253	Passenger lap strap pretensioner	0254	Passenger presence detection sensor
0255	Passenger side rear frontal airbag	0256	Passenger side rear strap sensor
0257	Passenger's front airbag	0258	Passenger's front buckle pretensioner
0259	Passenger's front inertia reel	0260	Passenger's front side impact sensor
0261	Passenger's lap strap/seat airbag	0262	Passenger's lateral sensor
0263	Passenger's seat buckle sensor	0264	Passenger's side rear inertia reel
0265	Personalised oil change frequency	0266	Petrol injection
0267	Power assisted steering	0268	Power steering electric pump unit
0269	Power-assisted steering program	0270	Preheating prevention
0271	Pressure regulation adaptives	0272	Prevention of electrical consumers
0273	Prevention of stop light auto illumination	0274	Programmed values
0275	Programming a valve code	0276	Programming of no load and full load positions
0277	Programming reinitialization	0278	Programming the codes of the four valves
0279	Programming with 1 key	0280	Programming with 2
0281	Pump pressure regulator type	0282	Rain sensor
0283	Rain/light sensor	0284	Rain/luminosity sensor type
0285	Raising of elect. window(with anti-pinch)	0286	Read speedo index
0287	Read vehicle parameters	0288	Reading impact contexts
0289	Rear access aerals	0290	Rear inertia reels
0291	Rear left-hand inertia wheel	0292	Rear right-hand inertia reel
0293	Rear screen wiper	0294	Rear shelves
0295	Rear thorax side air bag, driver side	0296	Rear thorax side air bag, passenger side
0297	Remote control cruise control	0298	Reserve capacity
0299	Reset oil change counter	0300	Restart the computer
0301	Rev counter	0302	Rheostat presence
0303	Right hand drive	0304	Right hand drive / 4 cylinder configuration
0305	Right hand drive / 6 cylinder configuration	0306	Right hand drive / diesel configuration
0307	Right-hand curtain airbag	0308	Right-hand side impact sensor
0309	Save clutch pedal programming	0310	Save computer data
0311	Seat belt light	0312	Seat belt reminder buzzer
0313	Seat belt warning module	0314	See-me-home lighting
0315	Selection of valve set	0316	Selective opening of doors
0317	Sensor offsets	0318	Side on which steering wheel fitted
0319	Side sensor configuration	0320	Side sensors programming
0321	Siemens probe configuration	0322	Slope sensor adjustment
0323	Special notes on commercial vehicles	0324	Speed limiter
0325	Speedo index	0326	Steering angle offset
0327	Steering angle sensor initialization	0328	Steering wheel angle offset sensor
0329	Steering wheel angle sensor	0330	Steering wheel angle sensor programming
0331	Stop electrical consumer prevention	0332	Stop fuel supply prevention

0333	Stop preheating prevention	0334	Stored energy management data
0335	Sunroof	0336	Tailgate flap
0337	Tank capacity	0338	Temperature display
0339	Temperature units	0340	Thermoplungers
0341	Timer courtesy light	0342	Tone adjustment
0343	Toxicity sensor	0344	Trajectory control
0345	Transverse acceleration offset sensor	0346	Type of power steering
0347	Tyre pressure monitor function	0348	Tyre pressure monitoring
0349	Tyre pressure units	0350	Uch
0351	Uch connections test -> card reader	0352	Unlock computer
0353	Unlock injector control	0354	Unlock passenger's front air bag
0355	Unlocking mode. doors hands free	0356	Upc comp. type
0357	Update odometer	0358	V4y automatic gearbox
0359	V4y manual	0360	Valve set selection
0361	Van fast idle speed decrease	0362	Van fast idle speed increase
0363	Veh. speed at initialization	0364	Vehicle engine type
0365	Vehicle family	0366	Vehicle function programming
0367	Vehicle parameters	0368	Vehicle speed signal transmitter
0369	Vehicle type	0370	Voice synthesiser
0371	W fr chest airbags w/out head-lvl airbags	0372	Windscreen type
0373	Wiper intermittent speed ring	0374	With abs
0375	With ac (fixed capacity compressor)	0376	With ac (variable capacity compressor)
0377	With air bag	0378	With air con / without heated windscreen
0379	With air conditioning	0380	With air conditioning / with heated windscreen
0381	With automatic transmission	0382	With boiler
0383	With catalytic converter	0384	With coolant sensor
0385	With cruise control	0386	With evaporator temperature sensor
0387	With fr chest airbags+head-level airbags	0388	With fuel pump cut-out
0389	With harrison type compressor	0390	With hazard lamps recall on trf
0391	With heated rear screen	0392	With infra-red remote control
0393	With manual gearbox	0394	With one-touch type control
0395	With passenger's airbag	0396	With passenger's airbags
0397	With permanent type control	0398	With power assisted steering
0399	With power steering electric pump unit	0400	With radio display
0401	With radio frequency remote control	0402	With recycling motor timer
0403	With sanden type compressor	0404	With self levelling suspension
0405	With side airbags	0406	With swirl flap
0407	With thermoplungers	0408	With timed courtesy light
0409	Without air bag	0410	Without air con / with heated windscreen
0411	Without air con. / without heated windscreen	0412	Without air conditioning
0413	Without airbags (pretensioners only)	0414	Without automatic transmission
0415	Without boiler	0416	Without catalytic converter
0417	Without coolant sensor	0418	Without cruise control
0419	Without evaporator temperature sensor	0420	Without fuel pump cut-out
0421	Without hazard lamps recall on trf	0422	Without heated rear screen
0423	Without inhibition switch	0424	Without passenger seat
0425	Without passenger's airbag	0426	Without passenger's frontal airbag
0427	Without power assisted steering	0428	Without power steering electric pump unit
0429	Without radio display	0430	Without recycling motor timer
0431	Without self levelling suspension	0432	Without side airbags
0433	Without swirl flap	0434	Without thermoplungers
0435	Without timed courtesy light	0436	Write clutch pedal programming
0437	Write date of after sales operation	0438	Write date of last after sales operation
0439	Write saved data	0440	Write transmission oil change date
0441	Write v.i.n.	0442	Write vin
0443	Actuators sequential control	0444	Assisted engagement when stationary
0445	Auto-adaptives	0446	Brake lining friction learning

0447	Caravan towing distance	0448	Clutch initial closed position
0449	Compressor feedback	0450	Computer reinitialization
0451	Converter lock up adaptive	0452	Egr bypass programming
0453	Engine torque control function	0454	Enter injector calibration data
0455	Enter injector codes	0456	Erase auto-adaptive values
0457	Fast idle speed modification	0458	Fault/s memorised
0459	Front buzzer volume	0460	Front tone setting
0461	Idle speed reference	0462	Ignition coil adaptive
0463	Initialization after automatic configuration	0464	Injection pump adaptatives
0465	Injector adaptives	0466	Injector adaptives no. 1
0467	Injector adaptives no. 2	0468	Injector adaptives no. 3
0469	Injector adaptives no. 4	0470	Lever locking connection fault finding
0471	Memorization of nl and fl positions (engine stopped)	0472	Neutral position programming
0473	Obd memory	0474	Preparation before automatic configuration
0475	Program clutch open position	0476	Programme slip point
0477	Programming selection/engaging zones	0478	Rear brake unit initialization
0479	Rear brake unit repositioning	0480	Selector lever locking
0481	Sensor type	0482	Shoe lining energy counter
0483	Slope initialization	0484	Vehicle configuration
0485	Vehicle identification	0486	Vehicle speed limitation function
0487	With obd	0488	Without obd
0489	Write clutch initial closed position	0490	Write date new clutch fitted
0491	Cruise control/speed limiter programming	0492	Flywheel target programming
0493	High pressure circuit leak test	0494	Pinking sensor programming
0495	Pressure sensor	0496	Programming throttle limits
0497	Richness regulation programming	0498	Static/autoconfiguration test
0499	Transverse acceleration sensor	0500	100 ah traction battery
0501	Abandon Key Reallocation	0502	Amplifier
0503	Angle of assembly	0504	Auto locking when driving function prevention
0505	Automatic fold-down headlights	0506	Auxiliary input
0507	Bii type	0508	Card accumulator charge tester
0509	Card testing	0510	Cd changer and auxiliary input
0511	Cd changer	0512	Check cards
0513	Computer address	0514	Computer calibration
0515	Computer configuration	0516	Computer initialisation
0517	Constructor/manufacturer	0518	Cornering lights
0519	Country model	0520	Daytime backlights
0521	Dipped headlights raise	0522	Dongle
0523	Ec5 air bag	0524	Emergency call number
0525	End Of Key Reallocation Validation	0526	Engine Immobiliser Authorisation
0527	Engine Immobiliser Prohibition	0528	Enter Access Code
0529	External components	0530	Fixed rear screen
0531	Free shift	0532	Free shift display
0533	Front buzzer volume	0534	Gradual switching on and off of courtesy light
0535	Gsm antenna	0536	Gsm antenna circuit
0537	Gsm connectivity	0538	Illuminate hazard lamps upon impact
0539	Key programming	0540	Light sensor signal
0541	Lighting	0542	Mode number
0543	Number of heating elements	0544	One-touch central door locking button
0545	Opening elements central locking	0546	Opening rear screen
0547	Overspeed light	0548	Pointer animation
0549	Program body computer	0550	Programming or reallocation of keys
0551	Pulling correction program	0552	Radio
0553	Radiofrequency type	0554	Raid function authorisation
0555	Raid function authorisation by diag	0556	Range extender
0557	Rear screen demister	0558	Removable roof
0559	Rheostat lighting	0560	Roll bars

0561	Sdm air bag	0562	Sdo
0563	Signature	0564	Stop&start function configuration
0565	Subwoofer	0566	Sunroof control unit
0567	System configuration	0568	Tachograph
0569	Tank capacity	0570	Time format
0571	Timed + batt	0572	Timed lighting supply
0573	Type 1 Unit	0574	Type 2
0575	Type n4	0576	Type of parking brake
0577	Uch type	0578	Unit of volume
0579	Vehicle type: jeoe or jeep	0580	Vehicle type: all types except jeep/jeoe
0581	With Alarm	0582	With adac
0583	With automatic re-locking	0584	With hazard lights upon impact
0585	With overspeed warning	0586	With range extension
0587	With running lights	0588	With sdo
0589	With tailgate module	0590	With variable w'screen wiper intermittent
0591	Without Alarm	0592	Without adac
0593	Without automatic re-locking	0594	Without hazard lights upon impact
0595	Without overspeed warning	0596	Without range extension
0597	Without running lights	0598	Without sdo
0599	Without tailgate module	0600	Without variable intermittent wipe
0601	Writing conformity	0602	Abandon programming
0603	Access/starter type	0604	Adaptive value - tps
0605	Adaptives on air inake flap fault	0606	Air damper valve programming
0607	Air flowmeter programming	0608	Alcohol level prog
0609	Alternator setpoint voltage	0610	Amplifier reset
0611	Analogic display fuel gauge calibration	0612	Anti-theft alarm trigger s/w
0613	Audio links test	0614	Autonomy battery
0615	Backup of instrument panel data for injection	0616	Battery charge warning information
0617	Battery corrosion counter	0618	Battery cycle counter
0619	Battery cycle counter estimated	0620	Battery cycle counter memorised
0621	Boost pressure sensor programming	0622	Brake pedal position 1
0623	Calculate battery wear counters	0624	Camshaft sensor programming
0625	Catalytic converter test	0626	Charge water pump
0627	Checking a key	0628	Computer calibration and operation
0629	Computer reinitialization	0630	Computer reset
0631	Configuring the multimedia computer	0632	Confirm programming
0633	Corrosion battery counter estimated	0634	Corrosion battery counter memorised
0635	Customer settings and details	0636	Driving water pump
0637	Dtc reset	0638	Econometer
0639	Eeprom memory write procedure	0640	End of cruise control/speed limiter programming
0641	Erase computer memory	0642	Erase idle regulation adaptives
0643	Erase incorrect cranking counter	0644	Erase overheating counter
0645	Erase stored misalignment	0646	Esm configuration
0647	Exhaust air flap programming	0648	Exhaust injector circuit
0649	Fan assembly	0650	Frost management mode
0651	Fuel flow regulator	0652	Fuel pump programming
0653	Gear positions memorization	0654	Electric pump unit
0655	Hfm programming routine	0656	Hour setting
0657	Idle air volume learning-service mode	0658	Initialization after automatic configuration
0659	Instrument panel type	0660	Language
0661	Lcd display fuel gauge calibration	0662	Low pressure egr valve programming
0663	Manifold pressure sensor programming	0664	Master cylinder pressure sensor offset
0665	Microphone test	0666	Modification of parameters after initialization
0667	Modus fuel sender calibration (europe)	0668	Modus long fuel sender calibration (europe)
0669	Multiplexed network configuration	0670	Navigation
0671	Netherlands legislation	0672	New vehicle storage mode deactivation
0673	Number of starting	0674	Number of starting 1

0675	Number of starting 2	0676	Number of starting 3
0677	Number of starting 4	0678	Number of starting cycles
0679	Oil change range:current value in km	0680	Oil change range:current value in months
0681	Overspeed alarm	0682	Particle filter pressure diff. sensor
0683	Piston pressure sensor offset	0684	Piston pressure sensor status offset
0685	Programme pneumatic suspension	0686	Programming mode 2
0687	Programming of seat stops	0688	Turbocharger programming
0689	Programming routine	0690	Proportional richness sensor programming
0691	Rail pressure sensor adaptives	0692	Rain/luminosity sensor sensitivity
0693	Read card 2 signal	0694	Read card signal
0695	Read valve set and memorised codes	0696	Reading the valve set and valve codes
0697	Rear camera	0698	Rear loud speaker
0699	Remote locking buzzer	0700	Reset
0701	Reset radio	0702	Resetting internal protection
0703	Reversing camera calibration	0704	Scandinavian runnings lights
0705	Second fitting alarm	0706	Serial link test
0707	Speaker	0708	Special screen
0709	Starting authorization by lbc	0710	Swirl flap programming
0711	System initialization	0712	Test parameters
0713	Testing card persented	0714	Traction battery lock
0715	Type n2	0716	Type n2(specific to venezuela colombia)
0717	Type n2 mercosur	0718	Type n4(specific to venezuela colombia)
0719	Type n4 mercosur	0720	Type of protection
0721	UCH programming routine	0722	Vacuum pump ageing counter
0723	Valet card programming procedure	0724	Valve code reading
0725	Vehicle equipment level	0726	Vehicle identifier
0727	VIN entry in card	0728	Waste gate regulation
0729	Writing of instrument panel data for injection		