



Function List

Brand Peugeot

NOTES:

- ✓ This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	System	Eng Type	ECU Name	Ecu Info	Read Codes	Erase Codes	Live Data	Active Test	Special Function
106 REMODELAGE	Engine management ECU		HDY BOSCH MA3.1	○	✓	✓	○	✓	0001
106 REMODELAGE	Engine management ECU		HDY MAGNETI MARELLI MA3.1	○	✓	✓	○	○	0001
106 REMODELAGE	Engine management ECU		KFX BOSCH MP7.3	✓	✓	✓	✓	✓	0001
106 REMODELAGE	Engine management ECU		HFX BOSCH M7.4.4	✓	✓	✓	✓	✓	0002
106 REMODELAGE	Engine management ECU		KFW SAGEM S2000	✓	✓	✓	✓	✓	0002
106 REMODELAGE	Engine management ECU		NFZ BOSCH MP5.2	✓	✓	✓	✓	✓	0001
106 REMODELAGE	Additional heating			✓	✓	✓	✓	○	
107	Driving assistance / Comfort	Power steering	Power steeringDAE	✓	✓	✓	✓	○	
107	Engine / Gearbox	Gearbox ECU	Controlled manual gearbox (MMT)	○	✓	✓	✓	✓	
107	Engine / Gearbox	ME795	CFA BOSCH ME7.9.5	○	✓	✓	✓	✓	
107	Engine / Gearbox	HDI_SID805	8HT SIEMENS SID805	✓	✓	✓	✓	✓	
107	Vehicle protection / Management of accesses		Engine immobiliser / Hands-free control unit	○	✓	✓	✓	○	
107	Active and passive safety	ABS or ESP ECU	ABS BOSCH 8.0 C1	○	✓	✓	✓	✓	
107	Active and passive safety	ABS or ESP ECU	ESP BOSCH 8.0 C1	○	✓	✓	✓	✓	
107	Active and passive safety	ABS or ESP ECU	ABS90_T	✓	✓	✓	✓	○	
107	Active and passive safety		Air bags and pre-tensioners control unit	✓	✓	✓	✓	○	
108	Engine management ECU		V46	✓	✓	✓	✓	✓	

108	Engine management ECU (Engine 1KR)			✓	✓	✓	✓	✓	
108	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓	0003 0004
108	Air conditioning			✓	✓	✓	✓	✓	
108	power steering			✓	✓	✓	✓	✓	
108	automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	✓	
108	Stop and Start ECU			✓	✓	✓	✓	✓	
108	Hands-free unit (Entry and start) : starting monitoring			○	✓	✓	✓	✓	
108	Hands-free unit (Entry and start) : starting authorised			○	✓	✓	✓	✓	
108	instrument panel			✓	✓	✓	✓	✓	
108	multifunction screen			○	✓	✓	✓	○	
108	Hands-free unit (Entry and start) : Access and starting			✓	✓	✓	✓	✓	
108	air bags and pre-tensioners control unit			✓	✓	✓	✓	○	
108	Multifunction video camera and remote detection by laser			○	✓	✓	✓	✓	
206	Built-in systems interface			✓	✓	✓	✓	✓	
206	Driver information/communicati		Service module	✓	✓	✓	✓	✓	0005 0006
206	Air bags and pre-tensioners control unit		Air bag and seat belt	○	✓	✓	○	○	
206	Air bags and pre-tensioners control unit		Side airbag(right side)	○	✓	✓	○	○	
206	Air bags and pre-tensioners control unit		Side airbag(left side)	○	✓	✓	○	○	
206	Control the openings		Sun roof	✓	✓	✓	✓	✓	0007 0008
206	Air conditioning			○	✓	✓	○	○	0009
206	Active safety		Anti-lock brakes TEVES	✓	✓	✓	✓	✓	0010
206	Active safety		Anti-lock brakes MK70	✓	✓	✓	✓	✓	0009 0010

206	Engines/ automatic gearbox	MM5NP	7LZ MM5NP	✓	✓	✓	✓	✓	0002
206	Engines/ automatic gearbox	MM48P	HFX MM4. 8P	✓	✓	✓	✓	✓	0002 0011
206	Engines/ automatic gearbox	MM1AP	HFY MM1AP	○	✓	✓	○	✓	
206	Engines/ automatic gearbox	S2000P	KFW SAGEM S2000	✓	✓	✓	✓	✓	0002 0009
206	Engines/ automatic gearbox	MP7.3	KFX BOSCH MP7.3	✓	✓	✓	✓	✓	0001
206	Engines/ automatic gearbox	ME744	N6A BOSCH ME7. 4. 4	✓	✓	✓	✓	✓	0002 0012
206	Engines/ automatic gearbox	MP7.2	NFZ BOSCH MP7.2	✓	✓	✓	✓	✓	0001
206	Engines/ automatic gearbox	DCN2	WJY LUCAS DCN2	✓	✓	✓	✓	✓	0009
206	Engines/ automatic gearbox	EDC15C2	RHY BOSCH EDC15C2	✓	✓	✓	✓	✓	0009 0013 0014 0015 0016
206	Engines/ automatic gearbox		AL4 automatic gearbox	○	✓	✓	✓	✓	0002 0009 0017
206	Built-in systems interface			✓	✓	✓	✓	✓	0018 0019 0020 0021
206	Anti-theft alarm			✓	✓	✓	○	✓	0022
206	Driver information/communication	Display / Telematics	AMF	✓	✓	✓	✓	✓	
206	Driver information/communication	Display / Telematics	RT3	✓	✓	✓	✓	✓	0023 0024 0025 0026 0027 0028 0029 0030
206	Driver information/communication	Radio	Radio	✓	✓	✓	✓	✓	0005 0031 0032
206	Driver information/communication	Radio	RDE filament	✓	✓	✓	✓	✓	
206	Driver information/communication		CD player	✓	✓	✓	✓	✓	0033
206	Driver information/communication		Instrument panel	✓	✓	✓	✓	✓	0009
206	Driver information/communication		Switching module below steering wheel (COM 2000)	✓	✓	✓	✓	○	
206	Driver information/communication		On-board navigation system	✓	✓	✓	✓	○	
206	Visibility /lighting		Driving school	✓	○	○	✓	✓	
206	Visibility /lighting		Rain/sunlight sensor	✓	✓	✓	○	○	

206	Air bags and pre-tensioners control unit			✓	✓	✓	○	○	0009 0034 0035
206	Control the openings		Electric retractable roof	✓	✓	✓	✓	○	0007 0008
206	Air conditioning			✓	✓	✓	✓	✓	0009
206	Active safety		Anti-lock brakes TEVES	✓	✓	✓	✓	✓	0010
206	Active safety		ABS MK70	✓	✓	✓	✓	✓	0009 0010
206	Active safety		ESP MK60	✓	✓	✓	✓	✓	0009 0010 0036 0037
206	Engines/ automatic gearbox	MM5NP	7LZ MM5NP	✓	✓	✓	✓	✓	0038
206	Engines/ automatic gearbox	S2000P	KFW SAGEM S2000	✓	✓	✓	✓	✓	0002 0009
206	Engines/ automatic gearbox	ME744	N6A BOSCH ME7. 4. 4	✓	✓	✓	✓	✓	0002 0012
206	Engines/ automatic gearbox	ME745	N6A BOSCH ME7. 4. 5	✓	✓	✓	✓	✓	0002 0009 0038
206	Engines/ automatic gearbox	MM48P	RFN MM4. 8P	✓	✓	✓	✓	✓	0001 0002
206	Engines/ automatic gearbox	MM6LP	KFU MM6LP	✓	✓	✓	✓	✓	
206	Engines/ automatic gearbox	MM6LP	RFN MM6LP	✓	✓	✓	✓	✓	
206	Engines/ automatic gearbox	J34P	KFW J34P	✓	✓	✓	✓	✓	0002 0009
206	Engines/ automatic gearbox	ME749	NFU or N6A or N6B ME749 BIO FLEX	✓	✓	✓	✓	✓	0002 0009 0038
206	Engines/ automatic gearbox	J35	NFU J35	✓	✓	✓	✓	✓	0009 0038
206	Engines/ automatic gearbox	EDC16C3	8HX/8HZ BOSCH EDC16C3 EUR03	✓	✓	✓	✓	✓	
206	Engines/ automatic gearbox	EDC16C3	9HZ BOSCH EDC16C3	✓	✓	✓	✓	✓	
206	Engines/ automatic gearbox	EDC15C2	RHY BOSCH EDC15C2	✓	✓	✓	✓	✓	
206	Engines/ automatic gearbox	DCN2	WJY LUCAS DCN2	✓	✓	✓	✓	✓	0009
206	Engines/ automatic gearbox		Diesel fuel additive control unit	✓	✓	✓	✓	✓	0039 0040 0041
206	Engines/ automatic gearbox		AL4 automatic gearbox	✓	✓	✓	✓	✓	0002 0009 0017
206	Electric pump unit(power steering)			✓	✓	✓	✓	○	

206 MUX	Built-in systems interface			✓	✓	✓	✓	✓	
206 MUX	Driver information/communicati		Service module	✓	✓	✓	✓	✓	0005 0006
206 MUX	Air bags and pre-tensioners control unit		Air bag and seat belt	○	✓	✓	○	○	
206 MUX	Air bags and pre-tensioners control unit		Side airbag(right side)	○	✓	✓	○	○	
206 MUX	Air bags and pre-tensioners control unit		Side airbag(left side)	○	✓	✓	○	○	
206 MUX	Control the openings		Electric retractable roof	✓	✓	✓	✓	✓	0007 0008
206 MUX	Air conditioning			○	✓	✓	○	○	0009
206 MUX	Active safety		Anti-lock brakes TEVES	✓	✓	✓	✓	✓	0010
206 MUX	Active safety		Anti-lock brakes MK70	✓	✓	✓	✓	✓	0009 0010
206 MUX	Engines/ automatic gearbox	MM5NP	7LZ MM5NP	✓	✓	✓	✓	✓	0002
206 MUX	Engines/ automatic gearbox	MM48P	HFX MM4. 8P	✓	✓	✓	✓	✓	0002 0011
206 MUX	Engines/ automatic gearbox	MM1AP	HFY MM1AP	○	✓	✓	○	✓	
206 MUX	Engines/ automatic gearbox	S2000P	KFW SAGEM S2000	✓	✓	✓	✓	✓	0002 0009
206 MUX	Engines/ automatic gearbox	MP7. 3	KFX BOSCH MP7. 3	✓	✓	✓	✓	✓	0001
206 MUX	Engines/ automatic gearbox	ME744	N6A BOSCH ME7. 4. 4	✓	✓	✓	✓	✓	0002 0012
206 MUX	Engines/ automatic gearbox	MP7. 2	NFZ BOSCH MP7. 2	✓	✓	✓	✓	✓	0001
206 MUX	Engines/ automatic gearbox	DCN2	WJY LUCAS DCN2	✓	✓	✓	✓	✓	0009
206 MUX	Engines/ automatic gearbox	EDC15C2	RHY BOSCH EDC15C2	✓	✓	✓	✓	✓	0009 0013 0014 0015 0016
206 MUX	Engines/ automatic gearbox	EDC15C2	RHY BOSCH EDC15C2	✓	✓	✓	✓	✓	
206 MUX	Engines/ automatic gearbox		AL4 automatic gearbox	○	✓	✓	✓	✓	0002 0009 0017
206 MUX	Built-in systems interface			✓	✓	✓	✓	✓	0018 0019 0020 0021
206 MUX	Anti-theft alarm			✓	✓	✓	○	✓	0022
206 MUX	Driver information/communicati	Display / Telematics	AMF	✓	✓	✓	✓	✓	

206 MUX	Driver information/communication	Display / Telematics	RT3	✓	✓	✓	✓	✓	0023 0024 0025 0026 0027 0028 0029 0030
206 MUX	Driver information/communication		Radio	✓	✓	✓	✓	✓	0005 0031 0032
206 MUX	Driver information/communication	Radio	RDE filament	✓	✓	✓	✓	✓	
206 MUX	Driver information/communication		CD player	✓	✓	✓	✓	✓	0033
206 MUX	Driver information/communication		Instrument panel	✓	✓	✓	✓	✓	0009
206 MUX	Driver information/communication		Switching module below steering wheel (COM 2000)	✓	✓	✓	✓	○	
206 MUX	Driver information/communication		On-board navigation system	✓	✓	✓	✓	○	
206 MUX	Visibility /lighting		Driving school	✓	○	○	✓	✓	
206 MUX	Visibility /lighting		Rain/sunlight sensor	✓	✓	✓	○	○	
206 MUX	Air bags and pre-tensioners control unit			✓	✓	✓	○	○	0009 0034 0035
206 MUX	Control the openings		Electric retractable roof	✓	✓	✓	✓	○	0007 0008
206 MUX	Air conditioning			✓	✓	✓	✓	✓	0009
206 MUX	Active safety		Anti-lock brakes TEVES	✓	✓	✓	✓	✓	0010
206 MUX	Active safety		ABS MK70	✓	✓	✓	✓	✓	0009 0010
206 MUX	Active safety		ESP MK60	✓	✓	✓	✓	✓	0009 0010 0036 0037
206 MUX	Engines/ automatic gearbox	MM5NP	7LZ MM5NP	✓	✓	✓	✓	✓	0038
206 MUX	Engines/ automatic gearbox	S2000P	KFW SAGEM S2000	✓	✓	✓	✓	✓	0002 0009
206 MUX	Engines/ automatic gearbox	ME744	N6A BOSCH ME7. 4. 4	✓	✓	✓	✓	✓	0002 0012
206 MUX	Engines/ automatic gearbox	ME745	N6A BOSCH ME7. 4. 5	✓	✓	✓	✓	✓	0002 0009 0038
206 MUX	Engines/ automatic gearbox	MM48P	RFN MM4. 8P	✓	✓	✓	✓	✓	0001 0002
206 MUX	Engines/ automatic gearbox	MM6LP	KFU MM6LP	✓	✓	✓	✓	✓	
206 MUX	Engines/ automatic gearbox	MM6LP	RFN MM6LP	✓	✓	✓	✓	✓	
206 MUX	Engines/ automatic gearbox	J34P	KFW J34P	✓	✓	✓	✓	✓	0002 0009

206 MUX	Engines/ automatic gearbox	ME749	NFU or N6A or N6B ME749 BIO FLEX	✓	✓	✓	✓	✓	0002 0009 0038
206 MUX	Engines/ automatic gearbox	J35	NFU J35	✓	✓	✓	✓	✓	0009 0038
206 MUX	Engines/ automatic gearbox	EDC16C3	8HX/8HZ BOSCH EDC16C3 EURO3	✓	✓	✓	✓	✓	
206 MUX	Engines/ automatic gearbox	EDC16C3	9HZ BOSCH EDC16C3	✓	✓	✓	✓	✓	
206 MUX	Engines/ automatic gearbox	EDC15C2	RHY BOSCH EDC15C2	✓	✓	✓	✓	✓	
206 MUX	Engines/ automatic gearbox	DCN2	WJY LUCAS DCN2	✓	✓	✓	✓	✓	0009
206 MUX	Engines/ automatic gearbox		Diesel fuel additive control unit	✓	✓	✓	✓	✓	0039 0040 0041
206 MUX	Engines/ automatic gearbox		AL4 automatic gearbox	✓	✓	✓	✓	✓	0002 0009 0017
206 MUX	Electric pump unit(power steering)			✓	✓	✓	✓	○	
206 +	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	0042
206 +	Built-in systems interface			✓	✓	✓	✓	✓	0018 0019 0021 0043 0044
206 +	Inform the driver / Audio / Communication	Display / Telematics	RT3	✓	✓	✓	✓	✓	0023 0024 0026 0027 0028 0029 0030
206 +	Inform the driver / Audio / Communication	Display / Telematics	AMF	✓	✓	✓	✓	✓	0045 0046 0047
206 +	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	○	
206 +	Inform the driver / Audio / Communication	Radio	Radio	✓	✓	✓	✓	✓	0005 0031 0048
206 +	Inform the driver / Audio / Communication	Radio	Radio RDE filament	✓	✓	✓	✓	✓	
206 +	Inform the driver / Audio / Communication		CD changer	✓	✓	✓	✓	✓	0009
206 +	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0009
206 +	Inform the driver / Audio / Communication		Service module / Independent telematic	✓	✓	✓	✓	✓	
206 +	Vehicle protection / Management of accesses	Anti-theft alarm	ALARME_TEXTON	✓	✓	✓	○	✓	0009
206 +	Vehicle protection / Management of accesses	Anti-theft alarm	ALARME	✓	✓	✓	✓	✓	

206 +	Engine / Gearbox	ME749	NFU or N6A ME749	✓	✓	✓	✓	✓	0002 0009 0038 0049 0050 0051
206 +	Engine / Gearbox	J34P	KFW J34P	✓	✓	✓	✓	✓	0002 0009 0014 0052 0053 0054 0055 0056 0057
206 +	Engine / Gearbox	ME745	TU5JP4 ME745	✓	✓	✓	✓	✓	0002 0009 0050 0051 0058
206 +	Engine / Gearbox	V34.3	HFV V34.3	✓	✓	✓	✓	✓	0059
206 +	Engine / Gearbox	DCN2	WJY DCN2	✓	✓	✓	✓	✓	0009 0060
206 +	Engine / Gearbox	EDC15C2	RHY EDC15C2	✓	✓	✓	✓	✓	0009 0014 0015 0060 0061
206 +	Engine / Gearbox	EDC16C3	8HZ BOSCH EDC16C3 EURO4	✓	✓	✓	✓	✓	0060 0062 0063 0064 0065
206 +	Engine / Gearbox	EDC17C10_BR2	8HR EDC17C10 BR2	✓	✓	✓	✓	✓	0066 0067 0068 0069
206 +	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AL4 automatic gearbox	✓	✓	✓	✓	✓	0002 0009 0017 0070
206 +	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
206 +	Active and passive safety	ABS or ESP ECU	ABS MK70	✓	✓	✓	✓	✓	0009 0010
206 +	Active and passive safety	ABS or ESP ECU	ESP MK60	✓	✓	✓	✓	✓	0003 0009 0010
206 +	Active and passive safety	ABS or ESP ECU	ABSMK70_1	✓	✓	✓	✓	✓	
206 +	Active and passive safety	ABS or ESP ECU	ESPMK60_0	✓	✓	✓	✓	✓	
206 +	Active and passive safety	Air bags and pre-tensioners control unit	SAC_CENT_AUTOLIV_2	✓	✓	✓	○	○	0009 0034 0035
206 +	Active and passive safety	Air bags and pre-tensioners control unit	SAC_AUTOLIV	✓	✓	✓	○	○	
206 +	Visibility / Lighting / Signalling		Rain/sunlight sensor	✓	✓	✓	○	○	
206 +	Power steering			✓	✓	✓	✓	○	
206 +	Service module / Independent telematic			✓	✓	✓	✓	✓	
207 VAN	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	0042
207 VAN	Built-in systems interface			✓	✓	✓	✓	✓	0018 0019 0021 0043 0044
207 VAN	Inform the driver / Audio / Communication	Display / Telematics	RT3	✓	✓	✓	✓	✓	0023 0024 0026 0027 0028 0029 0030
207 VAN	Inform the driver / Audio / Communication	Display / Telematics	AMF	✓	✓	✓	✓	✓	0045 0046 0047

207 VAN	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	○	
207 VAN	Inform the driver / Audio / Communication	Radio	Radio	✓	✓	✓	✓	✓	0005 0031 0048
207 VAN	Inform the driver / Audio / Communication	Radio	Radio RDE filament	✓	✓	✓	✓	✓	
207 VAN	Inform the driver / Audio / Communication		CD changer	✓	✓	✓	✓	✓	0009
207 VAN	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0009
207 VAN	Inform the driver / Audio / Communication		Service module / Independent telematic	✓	✓	✓	✓	✓	
207 VAN	Vehicle protection / Management of accesses	Anti-theft alarm	ALARME_TEXTON	✓	✓	✓	○	✓	0009
207 VAN	Vehicle protection / Management of accesses	Anti-theft alarm	ALARME	✓	✓	✓	✓	✓	
207 VAN	Engine / Gearbox	ME749	NFU or N6A ME749	✓	✓	✓	✓	✓	0002 0009 0038 0049 0050 0051
207 VAN	Engine / Gearbox	J34P	KFW J34P	✓	✓	✓	✓	✓	0002 0009 0014 0052 0053 0054 0055 0056 0057
207 VAN	Engine / Gearbox	ME745	TU5JP4 ME745	✓	✓	✓	✓	✓	0002 0009 0050 0051 0058
207 VAN	Engine / Gearbox	V34.3	HFV V34.3	✓	✓	✓	✓	✓	0059
207 VAN	Engine / Gearbox	DCN2	WJY DCN2	✓	✓	✓	✓	✓	0009 0060
207 VAN	Engine / Gearbox	EDC15C2	RHY EDC15C2	✓	✓	✓	✓	✓	0009 0014 0015 0060 0061
207 VAN	Engine / Gearbox	EDC16C3	8HZ BOSCH EDC16C3 EURO4	✓	✓	✓	✓	✓	0060 0062 0063 0064 0065
207 VAN	Engine / Gearbox	EDC17C10_BR2	8HR EDC17C10 BR2	✓	✓	✓	✓	✓	0066 0067 0068 0069
207 VAN	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AL4 automatic gearbox	✓	✓	✓	✓	✓	0002 0009 0017 0070
207 VAN	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
207 VAN	Active and passive safety	ABS or ESP ECU	ABS MK70	✓	✓	✓	✓	✓	0009 0010
207 VAN	Active and passive safety	ABS or ESP ECU	ESP MK60	✓	✓	✓	✓	✓	0003 0009 0010
207 VAN	Active and passive safety	ABS or ESP ECU	ABSMK70_1	✓	✓	✓	✓	✓	
207 VAN	Active and passive safety	ABS or ESP ECU	ESPMK60_0	✓	✓	✓	✓	✓	
207 VAN	Active and passive safety	Air bags and pre- tensioners control unit	SAC_CENT_AUTOLIV_2	✓	✓	✓	○	○	0009 0034 0035

207 VAN	Active and passive safety	Air bags and pre-tensioners control unit	SAC_AUTOLIV	✓	✓	✓	○	○	
207 VAN	Visibility / Lighting / Signalling		Rain/sunlight sensor	✓	✓	✓	○	○	
207 VAN	Power steering			✓	✓	✓	✓	○	
207 VAN	Service module / Independent telematic			✓	✓	✓	✓	✓	
207 CAN	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	0009 0071
207 CAN	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	
207 CAN	Driving assistance / Comfort	Under-inflation detection	DSG	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088 0089 0090
207 CAN	Driving assistance / Comfort	Under-inflation detection	DSG_UDS	✓	✓	✓	✓	○	
207 CAN	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	○	
207 CAN	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0092 0093 0094
207 CAN	Inform the driver / Audio / Communication	Multifunction screen	EMF_A	✓	✓	✓	✓	✓	0095 0096 0097
207 CAN	Inform the driver / Audio / Communication	Multifunction screen	EMF_C	✓	✓	✓	✓	✓	
207 CAN	Inform the driver / Audio / Communication	Radio	AUTORADIO	✓	✓	✓	✓	✓	0005 0031 0098
207 CAN	Inform the driver / Audio / Communication	Radio	RD45	✓	✓	✓	✓	✓	
207 CAN	Inform the driver / Audio / Communication		CD player	✓	✓	✓	○	✓	
207 CAN	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0009 0099
207 CAN	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	
207 CAN	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	0100 0101
207 CAN	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	
207 CAN	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓	✓	✓	0005 0097 0102 0103 0104
207 CAN	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓	0005 0097 0102 0103 0105 0106 0107 0108 0109 0110 0111 0112

207 CAN	Inform the driver / Audio / Communication		seat belt not fastened warning lights unit	✓	○	○	○	✓	
207 CAN	Inform the driver / Audio / Communication		High frequency receiver	✓	✓	✓	✓	○	
207 CAN	Inform the driver / Audio / Communication	Battery charge status unit	BECB	✓	✓	✓	✓	○	0042
207 CAN	Inform the driver / Audio / Communication	Battery charge status unit	BECB_GEN2	✓	✓	✓	✓	○	
207 CAN	Inform the driver / Audio / Communication	Service module / Independent telematic	BTA	✓	✓	✓	✓	✓	
207 CAN	Engine / Gearbox	Gearbox ECU	Controlled manual gearbox (BVMP)	✓	✓	✓	✓	✓	0113 0114 0115 0116 0117 0118 0119 0120 0121 0122
207 CAN	Engine / Gearbox	Gearbox ECU	AL4 automatic gearbox	✓	✓	✓	✓	✓	0002 0017
207 CAN	Engine / Gearbox	ME745	N6A BOSCH ME7.4.5	✓	✓	✓	✓	✓	0002 0038 0050 0051
207 CAN	Engine / Gearbox	MED17.4	5FX MED17.4	✓	✓	✓	✓	✓	0002 0014 0042 0054 0055 0060 0123 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133
207 CAN	Engine / Gearbox	MM6LPC	KFU MM6LPC	✓	✓	✓	✓	✓	0002 0009 0014 0038 0053 0054 0055 0134
207 CAN	Engine / Gearbox	J34P	KFV J34P	✓	✓	✓	✓	✓	0002 0009 0014 0052 0053 0054 0055 0056 0057
207 CAN	Engine / Gearbox	MEV17.4	5FW MEV17.4	✓	✓	✓	✓	✓	0002 0014 0042 0054 0055 0060 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133 0135
207 CAN	Engine / Gearbox	Petrol	MEV17.4EVO	✓	✓	✓	✓	✓	0002 0009 0014 0054 0055 0060 0123 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133
207 CAN	Engine / Gearbox	MEV17.4.2	EP3C 8FP MEV17.4.2	✓	✓	✓	✓	✓	0002
207 CAN	Engine / Gearbox	V34.1	KFT V34.1	✓	✓	✓	✓	✓	
207 CAN	Engine / Gearbox	EDC16C3	8HZ BOSCH EDC16C3 EURO4	✓	✓	✓	✓	✓	
207 CAN	Engine / Gearbox	HDI_SID807	9HL HDI SID807	✓	✓	✓	✓	✓	0066 0067 0068
207 CAN	Engine / Gearbox	EDC17C10	9HP BOSCH EDC17C10	✓	✓	✓	✓	✓	0066 0067 0068
207 CAN	Engine / Gearbox	EDC17C10_BR2	9HP EDC17C10 BR2	✓	✓	✓	✓	✓	0066 0067 0068 0069
207 CAN	Engine / Gearbox	Diesel	EDC16C3DV4	✓	✓	✓	✓	✓	
207 CAN	Engine / Gearbox	HDI_SID807_BR2	HDI_SID807_BR2 9HR	✓	✓	✓	✓	✓	0066 0136
207 CAN	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	0096 0137 0138

207 CAN	Vehicle protection / Management of accesses		Folding roof	✓	✓	✓	✓	✓	0139 0140
207 CAN	Active and passive safety	ABS or ESP ECU	ABS MK70.1	✓	✓	✓	✓	✓	0009 0010
207 CAN	Active and passive safety	ABS or ESP ECU	ESP MK60-0	✓	✓	✓	✓	✓	0010 0036 0037 0141
207 CAN	Active and passive safety		Air bags and pre- tensioners control unit	✓	✓	✓	✓	○	0009 0034 0035
207 CAN	Visibility / Lighting / Signalling	Rain/sunlight sensor	Rain and brightness sensor (CDPL)	✓	✓	✓	○	○	
207 CAN	Visibility / Lighting / Signalling	Rain/sunlight sensor	PLUITE_LUMINOSITE_UDS	✓	✓	✓	○	○	
207 CAN	Visibility / Lighting / Signalling	Dynamic headlamp height adjuster	Static AFS	✓	✓	✓	✓	✓	0009
207 CAN	Visibility / Lighting / Signalling		Driving school mode	✓	✓	✓	○	✓	
207 CAN	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓	
207 CAN	Engine relay unit			✓	✓	✓	✓	✓	
207 CAN	Trailer relay unit			✓	✓	✓	✓	✓	
207I	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	0042
207I	Built-in systems interface			✓	✓	✓	✓	✓	0018 0019 0021 0043 0044
207I	Inform the driver / Audio / Communication	Display / Telematics	RT3	✓	✓	✓	✓	✓	0023 0024 0026 0027 0028 0029 0030
207I	Inform the driver / Audio / Communication	Display / Telematics	Display	✓	✓	✓	✓	✓	0045 0046 0047
207I	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	○	
207I	Inform the driver / Audio / Communication	Radio	Radio	✓	✓	✓	✓	✓	0005 0031 0048
207I	Inform the driver / Audio / Communication	Radio	Radio RDE filament	✓	✓	✓	✓	✓	
207I	Inform the driver / Audio / Communication		CD changer	✓	✓	✓	✓	✓	0009
207I	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0009
207I	Inform the driver / Audio / Communication		Service module / Independent telematic	✓	✓	✓	✓	✓	
207I	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	○	✓	0009
207I	Vehicle protection / Management of accesses	Anti-theft alarm	ALARME	✓	✓	✓	✓	✓	

207I	Engine / Gearbox	ME749	NFU or N6A ME749	✓	✓	✓	✓	✓	0002 0009 0038 0049 0050 0051
207I	Engine / Gearbox	J34P	KFW J34P	✓	✓	✓	✓	✓	0002 0009 0014 0052 0053 0054 0055 0056 0057
207I	Engine / Gearbox	ME745	TU5JP4 ME745	✓	✓	✓	✓	✓	0002 0009 0050 0051 0058
207I	Engine / Gearbox	V34.3	HFV V34.3	✓	✓	✓	✓	✓	0059
207I	Engine / Gearbox	DCN2	WJY DCN2	✓	✓	✓	✓	✓	0009 0060
207I	Engine / Gearbox	EDC15C2	RHY EDC15C2	✓	✓	✓	✓	✓	0009 0014 0015 0060 0061
207I	Engine / Gearbox	EDC16C3	8HZ BOSCH EDC16C3 EURO4	✓	✓	✓	✓	✓	0060 0062 0063 0064 0065
207I	Engine / Gearbox	EDC17C10_BR2	8HR EDC17C10 BR2	✓	✓	✓	✓	✓	0066 0067 0068 0069
207I	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AL4 automatic gearbox	✓	✓	✓	✓	✓	0002 0009 0017 0070
207I	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
207I	Active and passive safety	ABS or ESP ECU	ABS MK70	✓	✓	✓	✓	✓	0009 0010
207I	Active and passive safety	ABS or ESP ECU	ESP MK60	✓	✓	✓	✓	✓	0003 0009 0010
207I	Active and passive safety	ABS or ESP ECU	ABSMK70_1	✓	✓	✓	✓	✓	
207I	Active and passive safety	ABS or ESP ECU	ESPMK60_0	✓	✓	✓	✓	✓	
207I	Active and passive safety	Air bags and pre-tensioners control unit	SAC_CENT_AUTOLIV_2	✓	✓	✓	○	○	0009 0034 0035
207I	Active and passive safety	Air bags and pre-tensioners control unit	SAC_AUTOLIV	✓	✓	✓	○	○	
207I	Visibility / Lighting / Signalling		Rain/sunlight sensor	✓	✓	✓	○	○	
207I	Power steering			✓	✓	✓	✓	○	
207I	Service module / Independent telematic			✓	✓	✓	✓	✓	
207+	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0092 0093 0094
207+	Engine management ECU	J34P	J34P KFW	✓	✓	✓	✓	✓	0002 0009 0014 0052 0053 0054 0055 0056 0057
207+	Engine management ECU	MEV17_4_2 EP6C	5FS MEV17.4.2 Euro 5	✓	✓	✓	✓	✓	0002
207+	Engine management ECU	EDC16C3	9HX-DV6ATED4-90CV	✓	✓	✓	✓	✓	
207+	Engine management ECU	ME745	N6A ME745	✓	✓	✓	✓	✓	0002 0038 0050 0051

207+	Engine management ECU	MED17_4_EURO4	MED17_4_EURO4 5FX	✓	✓	✓	✓	✓	0002 0014 0042 0054 0055 0060 0123 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133
207+	Engine management ECU	MEV17_4_EURO4	MEV17_4_EURO4 5FW	✓	✓	✓	✓	✓	0002 0014 0042 0054 0055 0060 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133 0135
207+	Engine management ECU	MEV17_4_EURO5	MEV17_4_EURO5 8FS	✓	✓	✓	✓	✓	0002 0009 0014 0054 0055 0060 0123 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133
207+	Engine management ECU	HDI_SID807	9HL HDI SID807	✓	✓	✓	✓	✓	0066 0067 0068
207+	Engine management ECU	V34.1	KFT V34.1	✓	✓	✓	✓	✓	
207+	Engine management ECU	EDC17C10	9HP EDC17C10	✓	✓	✓	✓	✓	0066 0067 0068
207+	Engine management ECU	EDC17C10_BR2	9HP-DV6DTED	✓	✓	✓	✓	✓	0066 0067 0068 0069
207+	Engine management ECU		EDC16C3DV4	✓	✓	✓	✓	✓	
207+	Engine management ECU		MM6LPC	✓	✓	✓	✓	✓	
207+	Engine management ECU	HDI_SID807_BR2	HDI_SID807_BR2 9HR	✓	✓	✓	✓	✓	0066 0136
207+	ABS or ESP ECU		ABS MK70.1	✓	✓	✓	✓	✓	0009 0010
207+	ABS or ESP ECU		ESP MK60-0	✓	✓	✓	✓	✓	0010 0036 0037 0141
207+	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	○	○	○	✓	
207+	Automatic gearbox or controlled manual gearbox		BVMP	✓	○	○	✓	✓	
207+	Power steering		DAE	✓	✓	✓	✓	○	
207+	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓	
207+	Under-inflation detection		DSG	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088 0089 0090
207+	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○	
207+	Battery charge status unit		BECB	✓	✓	✓	✓	○	
207+	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○	
207+	Automatic headlamp height adjustment warning light		Static AFS	✓	✓	✓	✓	✓	0009
207+	Engine relay unit			✓	✓	✓	✓	✓	

207+	Trailer relay unit			✓	✓	✓	✓	✓	
207+	Air bags and pre-tensioners control unit		SAC_AUTOLIV	✓	✓	✓	✓	○	0009 0034 0035
207+	Air conditioning			✓	✓	✓	✓	✓	
207+	Controls under the steering wheel			✓	✓	✓	✓	✓	
207+	Instrument panel			✓	✓	✓	✓	✓	0009 0099
207+	Multifunction screen		EMF_A	✓	✓	✓	✓	✓	0095 0096 0097
207+	Multifunction screen		EMF_C	✓	✓	✓	✓	✓	
207+	Parking assistance			✓	✓	✓	✓	○	0009 0071
207+	Radio		RD4	✓	✓	✓	✓	✓	
207+	Radio		RD45	✓	✓	✓	✓	✓	
207+	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG	✓	✓	✓	✓	✓	
207+	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	○	✓	✓	✓	✓	
207+	CD changer			✓	✓	✓	○	✓	
207+	Hands-free Kit / Portable Unit		BOITIER_NOMADE	✓	✓	✓	✓	✓	0100 0101
207+	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓	
207+	Anti-theft alarm			✓	✓	✓	✓	✓	0096 0137 0138
207+	Folding roof			✓	✓	✓	✓	✓	0139 0140
207+	Driving school mode			✓	✓	✓	○	✓	
207+	High frequency receiver			✓	✓	✓	✓	○	
207+	seat belt not fastened warning lights unit			✓	○	○	○	✓	
207+	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓	
207+	Rain and light sensor		PLUIE_LUMINOSITE_UDS	✓	✓	✓	○	○	
207+	Rain and light sensor		Rain and brightness sensor (CDPL)	✓	✓	✓	○	○	
208	Built-in systems interface			✓	✓	✓	✓	✓	0018 0091
208	Engine management ECU	EDC17C10_BR2	9HP-DV6DTEd-90CV	✓	✓	✓	✓	✓	0068 0069 0142 0143 0144 0145 0146 0147 0148 0149 0150
208	Engine management ECU	MEV17_4_2 EP6C	5FS MEV17.4.2 EURO 5	✓	✓	✓	✓	✓	0002

208	Engine management ECU	HDI_SID807_BR2	HDI_SID807_BR2 9HL	✓	✓	✓	✓	✓	0066 0068 0069 0143 0144 0145 0146 0147 0151
208	Engine management ECU		V46	✓	✓	✓	✓	✓	0002
208	Engine management ECU		MED17_4_2	✓	✓	✓	✓	✓	
208	Engine management ECU		MEVD17_4_2	✓	✓	✓	✓	✓	
208	Engine management ECU		V344	✓	✓	✓	✓	✓	
208	Engine management ECU		V345	✓	✓	✓	✓	✓	
208	Engine management ECU		ME745_EC5	✓	✓	✓	✓	✓	
208	Engine management ECU		VD46	✓	✓	✓	✓	○	
208	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	0152
208	Engine management ECU		MEVD17_4_4	✓	✓	✓	✓	○	
208	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
208	ABS or ESP ECU		ABSMK100	✓	✓	✓	✓	✓	0010 0153
208	ABS or ESP ECU		ESPMK100	✓	✓	✓	✓	✓	0003 0010 0141 0154
208	Automatic gearbox or controlled manual gearbox		BVMP	✓	✓	✓	✓	✓	
208	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	✓	✓	✓	✓	
208	Automatic gearbox or controlled manual gearbox		MAPS_UDS	✓	✓	✓	✓	✓	
208	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓	
208	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓	0155
208	Electric power steering			✓	✓	✓	✓	○	
208	Trailer relay unit			✓	✓	✓	✓	✓	
208	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○	
208	Parking assistance			✓	✓	✓	✓	○	
208	Air conditioning		TDC CH MUX	✓	✓	✓	✓	✓	
208	Air conditioning		TDC RF MUX	✓	✓	✓	✓	✓	
208	Air conditioning		TDC RFTA MUX	✓	✓	✓	✓	✓	
208	Radio		AUTORADIO	✓	✓	✓	✓	✓	

208	Radio		RDE	✓	✓	✓	✓	✓	
208	Rain and light sensor			✓	✓	✓	✓	○	
208	Service module / Independent telematic			✓	✓	✓	✓	✓	
208	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	✓	
208	Audio amplifier			✓	✓	✓	○	✓	
208	Control panel dot matrix display		Colour matrix screen	✓	✓	✓	○	✓	
208	Control panel dot matrix display		Monochrome matrix screen	✓	✓	✓	○	✓	
208	Multiplexed control panel		Telematics unit SEMG	✓	✓	✓	✓	✓	
208	CD player			✓	✓	✓	✓	✓	
208	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	✓	
208	Voltage retaining device		DMTC	✓	○	○	○	○	
208	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○	
208	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○	
208	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	✓	
208	Intrusion alarm siren			✓	✓	✓	✓	✓	
208	Anti-theft alarm			✓	✓	✓	✓	✓	
208	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓	0156
208	Diesel additive pump		PADDGO_TI_E6	✓	✓	✓	✓	○	
208	Controls under the steering wheel			✓	✓	✓	✓	✓	
208	Driving school module			✓	✓	✓	○	✓	
208	Lighting relay unit			✓	✓	✓	✓	✓	
208	Vehicle Distance Assistance			✓	✓	✓	✓	○	
208(Ai91)	Built-in Systems Interface		BSI2010	✓	✓	✓	✓	✓	0018 0091 0157
208(Ai91)	Engine management ECU		ME749_EC5	✓	✓	✓	✓	✓	
208(Ai91)	Engine management ECU		V34. 4	✓	✓	✓	✓	✓	
208(Ai91)	Engine management ECU		V34. 5	✓	✓	✓	✓	✓	

208(Ai91)	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	✓	0066 0136
208(Ai91)	Engine management ECU		MEV17_4_2	✓	✓	✓	✓	✓	
208(Ai91)	Engine management ECU		HDI_SID807_BR2	✓	✓	✓	✓	✓	0066 0136
208(Ai91)	Engine management ECU		V46	✓	✓	✓	✓	✓	
208(Ai91)	Engine management ECU		MED17_4_2	✓	✓	✓	✓	✓	
208(Ai91)	Engine management ECU		MEVD17_4_2	✓	✓	✓	✓	✓	
208(Ai91)	Engine management ECU		V344	✓	✓	✓	✓	✓	
208(Ai91)	Engine management ECU		V345	✓	✓	✓	✓	✓	
208(Ai91)	Engine management ECU		ME745_EC5	✓	✓	✓	✓	✓	
208(Ai91)	Engine management ECU		VD46	✓	✓	✓	✓	○	
208(Ai91)	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	0152
208(Ai91)	Engine management ECU		MEVD17_4_4	✓	✓	✓	✓	○	
208(Ai91)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
208(Ai91)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK100	✓	✓	✓	✓	✓	
208(Ai91)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK100	✓	✓	✓	✓	✓	0003 0141
208(Ai91)	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	✓	✓	✓	✓	
208(Ai91)	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓	
208(Ai91)	Automatic gearbox or controlled manual gearbox		MAPS_UDS	✓	✓	✓	✓	✓	
208(Ai91)	Automatic gearbox or controlled manual gearbox		BVMP	✓	✓	✓	✓	✓	
208(Ai91)	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓	0155
208(Ai91)	Parking assistance		AAS_UDS	✓	✓	✓	✓	○	
208(Ai91)	CD player		CDE	✓	✓	✓	✓	✓	
208(Ai91)	Telematic unit (RTx) or audio-navigation		SMEG	✓	✓	✓	✓	✓	
208(Ai91)	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓	

208(Ai91)	Air conditioning		TDC_RFTA_MUX	✓	✓	✓	✓	✓	
208(Ai91)	Radio		RDE	✓	✓	✓	✓	✓	
208(Ai91)	Rain and light sensor		PLUUE_LUMINOSITE_UDS	✓	✓	✓	✓	○	
208(Ai91)	Air bags and pre-tensioners control unit		RBG_UDS	✓	✓	✓	✓	○	
208(Ai91)	Multiplexed control panel		FMUX	✓	✓	✓	○	✓	
208(Ai91)	Electric power steering		DAE	✓	✓	✓	✓	✓	
208(Ai91)	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	○	
208(Ai91)	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	✓	
208(Ai91)	Intrusion alarm siren		SIR	✓	✓	✓	✓	✓	
208(Ai91)	Anti-theft alarm		MUS	✓	✓	✓	✓	✓	
208(Ai91)	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓	
208(P21)	Built-in systems interface			✓	✓	✓	✓	○	
208(P21)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	✓	
208(P21)	Engine management ECU		V46_21	✓	✓	✓	✓	✓	
208(P21)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	○	0158 0159 0160 0161 0162 0163 0164 0165 0166 0167 0168 0169
208(P21)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	✓	
208(P21)	Sequential gear lever			✓	✓	✓	✓	✓	
208(P21)	Power steering			✓	✓	✓	✓	○	
208(P21)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK100_UDS	✓	✓	✓	✓	✓	
208(P21)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK100_UDS	✓	✓	✓	✓	✓	
208(P21)	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓	
208(P21)	Trailer relay unit			✓	✓	✓	✓	✓	
208(P21)	Battery charge status control unit			✓	✓	✓	✓	○	
208(P21)	Electric steering lock			✓	✓	✓	✓	✓	

208 (P21)	Hands-free unit			✓	✓	✓	✓	✓	
208 (P21)	Instrument panel			✓	✓	✓	✓	✓	
208 (P21)	Controls under the steering wheel			✓	✓	✓	✓	✓	
208 (P21)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
208 (P21)	Multifunction control panel			✓	✓	✓	✓	✓	
208 (P21)	Airbags and pretensioners ECU			✓	✓	✓	✓	○	
208 (P21)	Seat belt not fastened warning lights unit			✓	○	○	○	✓	
208 (P21)	Rain and brightness sensor			✓	✓	✓	✓	○	
208 (P21)	Multifunction video camera (CMF)			✓	✓	✓	✓	✓	
208 (P21)	Vehicle Distance Assistance			✓	✓	✓	✓	✓	
208 (P21)	Parking assistance			✓	✓	✓	✓	✓	
208 (P21)	Touch screen		EMF_DGT_UDS_GP	✓	✓	✓	✓	✓	
208 (P21)	Touch screen		EMF_DGT_LVDS_BD	✓	✓	✓	✓	✓	
208 (P21)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓	
208 (P21)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	✓	
208 (P21)	Telematic unit (RTx) or audio-navigation		RCE	✓	✓	✓	✓	○	
208 (P21)	Telematic unit (RTx) or audio-navigation		AIO	✓	✓	✓	✓	○	
208 (P21)	Service module / Independent telematic		BTA_3R	✓	✓	✓	✓	○	
208 (P21)	Service module / Independent telematic		BTA_3S	✓	✓	✓	✓	✓	
208 (P21)	Anti-theft alarm			✓	✓	✓	✓	○	
208 (P21)	Air conditioning			✓	✓	✓	✓	✓	
208 (P21)	Intrusion alarm siren			✓	✓	✓	✓	✓	
208 (P21)	Driver's door module			✓	✓	✓	✓	✓	
208 (P21)	Front left seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	✓	

208(P21)	Front right seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	✓	
208(P21)	Passenger compartment LEDs management ECU			✓	✓	✓	○	✓	
301	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓	0018 0091 0157
301	Engine management ECU	EDC17C10_BR2	9HP-DV6DTED	✓	✓	✓	✓	✓	0066 0136 0170 0171 0172 0173 0174
301	Engine management ECU		V46_21	✓	✓	✓	✓	✓	0014 0054 0175 0176 0177 0178 0179 0180 0181
301	Engine management ECU		V46	✓	✓	✓	✓	✓	0002 0181 0182 0183 0184 0185 0186 0187
301	Engine management ECU		ME745_EC5	✓	✓	✓	✓	✓	0002 0014 0042 0054 0179 0188 0189
301	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	0152
301	Engine management ECU		CMM_V56	✓	✓	✓	✓	○	
301	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○	
301	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK100	✓	✓	✓	✓	✓	0042 0190 0191
301	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK100	✓	✓	✓	✓	✓	0003 0042 0141 0190 0192
301	Multifunction screen		EMF_A	✓	✓	✓	○	✓	
301	Multifunction screen		EMF_C	✓	✓	✓	○	✓	
301	Controls under the steering wheel		HDC	✓	✓	✓	✓	✓	
301	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓	
301	Gearbox ECU		BVA_AL4	✓	✓	✓	✓	✓	0002 0017 0070
301	Gearbox ECU		MAPS_UDS	✓	✓	✓	✓	✓	0116 0117 0118 0193 0194 0195 0196 0197 0198 0199 0200 0201 0202 0203
301	Gearbox ECU		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓	0155
301	Gearbox ECU		MAPS	✓	✓	✓	✓	○	
301	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○	
301	Electric power steering		DAE	✓	✓	✓	✓	○	

301	Electric power steering		DAE_A515	✓	✓	✓	✓	✓	
301	Electric power steering		DAE_UDS	✓	✓	✓	✓	○	
301	Radio		RDE	✓	✓	✓	✓	✓	0098 0204 0205 0206 0207
301	Radio		RD45	✓	✓	✓	✓	✓	0098 0204
301	Parking assistance			✓	✓	✓	✓	✓	0071 0208
301	Intrusion alarm siren			✓	✓	✓	✓	✓	
301	Instrument panel			✓	✓	✓	✓	✓	
301	Trailer relay unit			✓	✓	✓	✓	✓	
301	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓	
301	Diesel additive pump		PADDGO_TI_E6	✓	✓	✓	✓	○	
301	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○	
306	Air bag and seat belt			○	✓	✓	○	○	
306	Active safety		Anti-lock brakes BOSCH ABS5	✓	✓	✓	✓	✓	
306	Engines/ automatic gearbox	All models	HDY BOSCH MA3.1	○	✓	✓	○	✓	0001
306	Engines/ automatic gearbox	All models	HDY MAGNETI MARELLI MA3.1	○	✓	✓	○	○	0001
306	Engines/ automatic gearbox	All models	NFZ BOSCH MP5.2	✓	✓	✓	✓	✓	0001
306	Engines/ automatic gearbox	All models	NFL BOSCH MP5.2	✓	✓	✓	✓	○	0001
306 R	Protect the vehicle		Transponder PEUGEOT	○	○	✓	○	○	
306 R	Protect the vehicle		Passenger compartment protection control unit	✓	○	○	✓	○	
306 R	Air bags and pre-tensioners control unit		Air bag and seat belt	✓	✓	✓	○	○	
306 R	Air bags and pre-tensioners control unit		Side airbag(right side)	✓	✓	✓	○	○	
306 R	Air bags and pre-tensioners control unit		Side airbag(left side)	✓	✓	✓	○	○	
306 R	Active safety		ABS BOSCH 5.3	✓	✓	✓	✓	✓	0010
306 R	Engines/ automatic gearbox	S2000P	KFW SAGEM S2000	✓	✓	✓	✓	✓	0002
306 R	Engines/ automatic gearbox	MP7.3	KFX BOSCH MP7.3	✓	✓	✓	✓	✓	0001

306 R	Engines/ automatic gearbox	MM1AP	KFX MM1AP	✓	✓	✓	✓	✓	
306 R	Engines/ automatic gearbox	SL96	KFX SAGEM SL 96	✓	✓	✓	✓	✓	
306 R	Engines/ automatic gearbox	M744	NFT BOSCH M7. 4. 4	✓	✓	✓	✓	✓	0002
306 R	Engines/ automatic gearbox	MP5. 2	NFZ BOSCH MP5. 2	✓	✓	✓	✓	✓	0001
306 R	Engines/ automatic gearbox	MP7. 2	NFZ BOSCH MP7. 2	✓	✓	✓	✓	✓	0001
306 R	Engines/ automatic gearbox	VP20	DHV BOSCH VP20	✓	✓	✓	✓	○	
306 R	Engines/ automatic gearbox	EDC15C2	RHY BOSCH EDC15C2	○	✓	✓	✓	✓	0013
306 R	Engines/ automatic gearbox	DCN2	WJY LUCAS DCN2	✓	✓	✓	✓	✓	
306 R	Engines/ automatic gearbox		AL4 gearbox	○	✓	✓	✓	✓	0002
307 VAN	Built-in systems interface			✓	✓	✓	✓	✓	0018 0019 0021 0091
307 VAN	Anti-theft alarm			✓	✓	✓	○	✓	0022
307 VAN	Driver information/communication	Display / Telematics	AMF	✓	✓	✓	✓	✓	0046 0209 0210
307 VAN	Driver information/communication	Display / Telematics	RT3	✓	✓	✓	✓	✓	0023 0024 0025 0026 0027 0028 0029 0030
307 VAN	Driver information/communication		Parking assistance	✓	✓	✓	✓	✓	
307 VAN	Driver information/communication		Radio	✓	✓	✓	✓	✓	0005 0031 0032
307 VAN	Driver information/communication		CD player	✓	✓	✓	✓	✓	0033
307 VAN	Driver information/communication		Instrument panel	✓	✓	✓	✓	✓	0211
307 VAN	Driver information/communication		Switching module below steering wheel (COM 2000)	✓	✓	✓	✓	○	
307 VAN	Visibility /lighting		Driving school	✓	○	○	✓	✓	
307 VAN	Air bags and pre-tensioners control unit			✓	✓	✓	○	○	0009
307 VAN	Roll-over ECU			✓	✓	✓	✓	○	0034 0035
307 VAN	Control the openings		Driver's door module	✓	✓	✓	✓	○	
307 VAN	Control the openings		Passenger door module	✓	✓	✓	✓	○	

307 VAN	Control the openings		Folding roof	✓	✓	✓	✓	✓	0009
307 VAN	Control the openings		Sun roof	✓	✓	✓	✓	✓	0042
307 VAN	Air conditioning			✓	✓	✓	✓	✓	
307 VAN	Engines/ automatic gearbox	ME744	N6A BOSCH ME7. 4. 4	✓	✓	✓	✓	✓	0002 0012
307 VAN	Engines/ automatic gearbox	ME745	N6A BOSCH ME7. 4. 5	✓	✓	✓	✓	✓	0002 0009 0038
307 VAN	Engines/ automatic gearbox	S2000P	KFW SAGEM S2000	✓	✓	✓	✓	✓	0002 0009
307 VAN	Engines/ automatic gearbox	MM48P	RFN MM48P (mechanical throttle housing)	✓	✓	✓	✓	✓	0002 0011
307 VAN	Engines/ automatic gearbox	MM4MP2	RFN MM4MP2 (motorised butterfly)	✓	✓	✓	✓	✓	0212
307 VAN	Engines/ automatic gearbox	MM6LP	KFU MM6LP	✓	✓	✓	✓	✓	0009 0212
307 VAN	Engines/ automatic gearbox	EDC16C3	8HZ BOSCH EDC16C3	✓	✓	✓	✓	✓	0009 0062 0063 0066 0067 0213
307 VAN	Engines/ automatic gearbox	EDC16C3	9HT BOSCH EDC16C3	✓	✓	✓	✓	✓	0009 0062 0063 0066 0067 0213
307 VAN	Engines/ automatic gearbox	EDC15C2	RHS BOSCH EDC15C2	✓	✓	✓	✓	✓	0009 0014 0015 0016
307 VAN	Engines/ automatic gearbox	HDI_SID801	RHY SIEMENS SID 801	✓	✓	✓	✓	✓	
307 VAN	Engines/ automatic gearbox	HDI_SID803	RHL SIEMENS SID 803	✓	✓	✓	✓	✓	0066 0067 0214
307 VAN	Engines/ automatic gearbox		Diesel fuel additive control unit	✓	✓	✓	✓	✓	0039 0040 0041
307 VAN	Engines/ automatic gearbox		AL4 gearbox	✓	✓	✓	✓	✓	0002 0017 0215
307 VAN	Active safety		ABS BOSCH 5.3	✓	✓	✓	✓	✓	
307 VAN	Active safety		ABS BOSCH 8	✓	✓	✓	✓	✓	0009 0010
307 VAN	Active safety		ESP BOSCH 5.7	✓	✓	✓	✓	✓	0009 0010 0036 0037
307 VAN	Active safety		ESP BOSCH 8	✓	✓	✓	✓	✓	0009 0010 0036 0037
307 VAN	Electric pump unit(power steering)			✓	✓	✓	✓	○	
307 CAN	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	✓	0009
307 CAN	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	0042

307 CAN	Driving assistance / Comfort		Under inflation detection	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0089 0090 0216
307 CAN	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	✓	
307 CAN	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0217 0218
307 CAN	Inform the driver / Audio / Communication	Multifunction screen	EMF_A	✓	✓	✓	✓	✓	0095 0096 0097
307 CAN	Inform the driver / Audio / Communication	Multifunction screen	EMF_C	✓	✓	✓	✓	✓	0095 0096 0097
307 CAN	Inform the driver / Audio / Communication		Radio	✓	✓	✓	✓	✓	0005 0031 0098
307 CAN	Inform the driver / Audio / Communication		CD changer / external CD player	✓	✓	✓	○	✓	
307 CAN	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0099 0219
307 CAN	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	0003
307 CAN	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	0101 0205
307 CAN	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	○	
307 CAN	Inform the driver / Audio / Communication		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓	0005 0030 0097 0102 0103 0105 0106 0107 0108 0109 0110 0111 0112 0220
307 CAN	Inform the driver / Audio / Communication		Service module / Independent telematic	✓	✓	✓	✓	✓	0005 0006
307 CAN	Engine / Gearbox	Gearbox ECU	AM6 automatic gearbox	✓	✓	✓	✓	✓	0042 0155 0221 0222 0223 0224 0225 0226 0227
307 CAN	Engine / Gearbox	Gearbox ECU	AL4 automatic gearbox	✓	✓	✓	✓	✓	0002 0009 0017 0070
307 CAN	Engine / Gearbox	ME745	N6A BOSCH ME7.4.5	✓	✓	✓	✓	✓	0002 0009 0050 0051 0058
307 CAN	Engine / Gearbox	MM6LP	KFU MM6LP	✓	✓	✓	✓	✓	0009 0014 0053 0054 0055 0060 0134 0212
307 CAN	Engine / Gearbox	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓	0014 0038 0053 0054 0055 0125 0178 0212 0228
307 CAN	Engine / Gearbox	MM6LPC	KFU MM6LPC	✓	✓	✓	✓	✓	0002 0014 0038 0042 0053 0054 0055 0134
307 CAN	Engine / Gearbox	ME749	NFU or N6A or N6B ME749	✓	✓	✓	✓	✓	0002
307 CAN	Engine / Gearbox	MM6KP	RFJ M6KP Bio Flex (EW10A FF)	✓	✓	✓	✓	✓	0002 0014 0042 0053 0054 0055 0060 0125 0178 0229 0230 0231 0232

307 CAN	Engine / Gearbox	Petrol	ME745_EC5	✓	✓	✓	✓	○	
307 CAN	Engine / Gearbox	EDC15C2	RHY BOSCH EDC15C2	✓	✓	✓	✓	✓	
307 CAN	Engine / Gearbox	EDC16C3	9HV BOSCH EDC16C3	✓	✓	✓	✓	✓	0009 0060 0062 0063 0136 0233 0234 0235 0236 0237 0238 0239 0240
307 CAN	Engine / Gearbox	HDI_SID803	RHR SIEMENS SID 803	✓	✓	✓	✓	✓	0066 0067 0214
307 CAN	Engine / Gearbox	HDI_SID803A	RHL SIEMENS SID 803A	✓	✓	✓	✓	✓	0042 0061 0064 0066 0067 0136 0148 0241 0242 0243 0244 0245 0246 0247 0248 0249
307 CAN	Engine / Gearbox	DCM3.4	RHL DCM3.4	✓	✓	✓	✓	✓	0061 0066 0067 0134 0136 0147 0151 0170 0171 0172 0173 0174 0243 0250 0251 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0262 0263 0264 0265 0266 0267 0268 0269 0270
307 CAN	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	0096 0137 0138
307 CAN	Vehicle protection / Management of accesses		Driver's door module	✓	✓	✓	✓	✓	0009 0271
307 CAN	Vehicle protection / Management of accesses		Passenger door module	✓	✓	✓	✓	✓	0009 0271
307 CAN	Vehicle protection / Management of accesses		Folding roof	✓	✓	✓	✓	✓	0272 0273
307 CAN	Vehicle protection / Management of accesses		Sun roof	✓	✓	✓	✓	✓	0274
307 CAN	Active and passive safety	ABS or ESP ECU	ABS8_BOSCH	✓	✓	✓	✓	✓	0009 0010
307 CAN	Active and passive safety	ABS or ESP ECU	ESP_BOSCH8	✓	✓	✓	✓	✓	0003 0009 0010
307 CAN	Active and passive safety	ABS or ESP ECU	ABS8.1	✓	✓	✓	✓	✓	0009 0010
307 CAN	Active and passive safety	ABS or ESP ECU	ESP8.1	✓	✓	✓	✓	✓	0003 0009 0010 0275
307 CAN	Active and passive safety		Air bags and pre- tensioners control unit	✓	✓	✓	✓	○	0034 0035 0276 0277 0278 0279
307 CAN	Visibility / Lighting / Signalling		Rain/sunlight sensor	✓	✓	✓	○	○	
307 CAN	Visibility / Lighting / Signalling		Right headlamp beam corrector	✓	✓	✓	✓	○	0009 0280
307 CAN	Visibility / Lighting / Signalling		Left headlamp beam level corrector	✓	✓	✓	✓	✓	0009 0280

307 CAN	Visibility / Lighting / Signalling		Driving school mode	✓	✓	✓	○	✓	
307 CAN	Engine relay unit			✓	✓	✓	✓	✓	
307 CAN	Trailer relay unit			✓	✓	✓	✓	✓	
307 CAN	High frequency receiver			✓	✓	✓	✓	○	
307 CAN	Diesel additive function		ADDG02	✓	✓	✓	✓	✓	0039 0281 0282 0283 0284
307 CAN	Diesel additive function		ADDG03	✓	✓	✓	✓	○	0281
307 CAN	Multiplexed additive adding pump ECU			✓	✓	✓	✓	✓	
308	Driving assistance / Comfort		Lane departure warning system	✓	✓	✓	✓	✓	
308	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	0042
308	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	✓	
308	Driving assistance / Comfort		Seat driver position memory module.	✓	✓	✓	✓	✓	0285 0286 0287 0288 0289 0290
308	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	0009 0071
308	Driving assistance / Comfort	Under inflation detection	DSG	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088
308	Driving assistance / Comfort	Under inflation detection	DSG_UDS	✓	✓	✓	✓	○	
308	Driving assistance / Comfort		Passenger seat memorisation module	✓	✓	✓	✓	✓	
308	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0092 0093 0291
308	Inform the driver / Audio / Communication	Multifunction screen	EMF_A	✓	✓	✓	✓	✓	0095 0096 0097
308	Inform the driver / Audio / Communication	Multifunction screen	EMF_C	✓	✓	✓	✓	✓	0095 0096 0097
308	Inform the driver / Audio / Communication	Radio	RD4	✓	✓	✓	✓	✓	0005 0031 0048 0098 0292
308	Inform the driver / Audio / Communication	Radio	RD45	✓	✓	✓	✓	✓	
308	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0009 0099

308	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	0100 0101 0293
308	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	0100 0101
308	Inform the driver / Audio / Communication		seat belt not fastened warning lights unit	✓	○	○	○	✓	
308	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓	0005 0030 0097 0102 0103 0105 0106 0107 0108 0109 0110 0111 0112 0220
308	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓	✓	✓	0005 0102 0105 0106 0107 0108 0294 0295 0296
308	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_NG4	✓	✓	✓	✓	✓	0005 0102 0105 0106 0107 0108 0294 0295 0296
308	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG_C	✓	✓	✓	✓	✓	0005 0097 0102 0105 0106 0107 0108 0295 0296
308	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG_ECO	✓	✓	✓	✓	✓	
308	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓	✓	✓	
308	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	0003
308	Inform the driver / Audio / Communication		CD changer	✓	✓	✓	○	✓	0048 0292 0297
308	Inform the driver / Audio / Communication		Audio amplifier	✓	✓	✓	○	✓	0009
308	Inform the driver / Audio / Communication	Service module / Independent telematic	MD_SERV	✓	✓	✓	✓	✓	0005 0298 0299
308	Inform the driver / Audio / Communication	Service module / Independent telematic	BTA	✓	✓	✓	✓	✓	0005 0300
308	Inform the driver / Audio / Communication		Control panel dot matrix display	✓	✓	✓	✓	✓	0301 0302 0303
308	Inform the driver / Audio / Communication	Battery charge status unit	BECB	✓	✓	✓	✓	○	
308	Inform the driver / Audio / Communication	Battery charge status unit	BECB_GEN2	✓	✓	✓	✓	○	
308	Inform the driver / Audio / Communication	Folding roof	BTE(1)	✓	✓	✓	✓	✓	0140 0304
308	Inform the driver / Audio / Communication	Folding roof	BTE(2)	✓	✓	✓	✓	✓	
308	Engine / Gearbox	ME745	N6A ME745	✓	✓	✓	✓	✓	0002 0009 0051 0058
308	Engine / Gearbox	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓	0002 0009 0014 0038 0053 0054 0055 0134 0178 0179

308	Engine / Gearbox	MM6LPB	MM6LPB	✓	✓	✓	✓	○	
308	Engine / Gearbox	MEV17.4	5FW MEV17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0123 0124 0125 0126 0132 0133 0305 0306 0307 0308 0309
308	Engine / Gearbox	MEV174	5FS MEV17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133 0135
308	Engine / Gearbox	MED174	5FV MED17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0123 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133
308	Engine / Gearbox	MED17.4	5FT MED17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0123 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133
308	Engine / Gearbox	MEVD17_4_2	5FU MEVD17.4.2	✓	✓	✓	✓	✓	0002 0009 0014 0054 0060 0123 0124 0126 0127 0128 0129 0131 0132 0179 0181 0270 0305 0308 0310 0311 0312
308	Engine / Gearbox	Petrol	MM6KP	✓	✓	✓	✓	✓	0002 0009 0014 0053 0054 0055 0060 0125 0178 0229 0230 0231 0232
308	Engine / Gearbox	ME749	NFU ME749 Bio Flex	✓	✓	✓	✓	✓	0002 0049 0058
308	Engine / Gearbox	MEV17_4_2	EP6C 5FS MEV17.4.2	✓	✓	✓	✓	✓	0002 0009 0014 0054 0060 0124 0126 0132 0135 0179 0181 0305 0308 0309 0311 0312 0313 0314
308	Engine / Gearbox	Petrol	MED17_4_EURO4	✓	✓	✓	✓	✓	
308	Engine / Gearbox	Petrol	MEV17_4_EURO4	✓	✓	✓	✓	✓	
308	Engine / Gearbox	Petrol	ME749_EC5	✓	✓	✓	✓	✓	
308	Engine / Gearbox	Petrol	ME745_EC5	✓	✓	✓	✓	✓	
308	Engine / Gearbox	Petrol	MEV17_4_EURO5	✓	✓	✓	✓	✓	
308	Engine / Gearbox	Petrol	MED17_4_EURO5	✓	✓	✓	✓	✓	
308	Engine / Gearbox	Petrol	MED17_4_4	✓	✓	✓	✓	✓	
308	Engine / Gearbox	EDC16C3	9HV EDC16C3	✓	✓	✓	✓	✓	0009 0060 0062 0063 0066 0067 0136 0235 0236 0237 0238 0239 0240

308	Engine / Gearbox	DCM3.4	RHR DCM3.4	✓	✓	✓	✓	✓	0061 0066 0067 0134 0136 0147 0151 0170 0171 0172 0173 0174 0243 0250 0251 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0262 0263 0264 0265 0266 0267 0268 0269 0270
308	Engine / Gearbox	HDI_SID807	9HL HDI SID807	✓	✓	✓	✓	✓	0042 0064 0066 0067 0068 0134 0136 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0253 0254 0255 0256 0258 0315 0316 0317 0318 0319 0320
308	Engine / Gearbox	HDI_SID807_BR2	9HR HDI_SID807_BR2	✓	✓	✓	✓	✓	0060 0064 0066 0067 0068 0069 0134 0136 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0181 0250 0253 0254 0255 0256 0258 0316 0318 0319 0320 0321 0322 0323 0324 0325 0326 0327 0328
308	Engine / Gearbox	DCM3.5	RHH DCM3.5	✓	✓	✓	✓	✓	0042 0066 0067 0068 0134 0136 0142 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0243 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0262 0316 0320 0329
308	Engine / Gearbox	EDC17C10	9HP EDC17C10	✓	✓	✓	✓	✓	0038 0068 0134 0142 0143 0144 0145 0146 0149 0170 0171 0172 0173 0174 0233 0240 0250 0252 0258 0316 0318 0319 0325 0330 0331 0332 0333 0334 0335 0336
308	Engine / Gearbox	EDC17C10_BR2	9HP EDC17C10_BR2	✓	✓	✓	✓	✓	0060 0066 0067 0068 0069 0134 0142 0143 0144 0145 0146 0149 0170 0171 0172 0173 0174 0181 0240 0250 0258 0316 0318 0319 0324 0325 0326 0327 0328 0330 0331 0332 0333 0334 0335 0336 0337 0338
308	Engine / Gearbox	Diesel	DCM35_BR2	✓	✓	✓	✓	✓	0136 0150
308	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AM6	✓	✓	✓	✓	✓	0155 0221 0222 0223 0224 0225 0226 0227 0339 0340
308	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AM6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0009 0155 0222 0223 0224 0225 0226 0227

308	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AT6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0009 0155 0222 0223 0224 0225 0226 0227
308	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	CFC300P gearbox	✓	✓	✓	✓	✓	0198 0341 0342 0343 0344 0345 0346 0347 0348 0349 0350 0351 0352 0353 0354
308	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AL4 gearbox	✓	✓	✓	✓	✓	0002 0009 0017
308	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	
308	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
308	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	○	○	0155
308	Vehicle protection / Management of accesses	Anti-theft alarm	ALARME	✓	✓	✓	✓	✓	0096 0137 0138
308	Vehicle protection / Management of accesses	Anti-theft alarm	ALARME_LIN	✓	✓	✓	✓	○	
308	Vehicle protection / Management of accesses		Driver's door module	✓	✓	✓	✓	✓	
308	Vehicle protection / Management of accesses		Sun roof	✓	✓	✓	✓	✓	0274
308	Active and passive safety	ABS or ESP ECU	ABS 8.1	✓	✓	✓	✓	✓	0009 0010
308	Active and passive safety	ABS or ESP ECU	ESP 8.1	✓	✓	✓	✓	✓	0003 0010 0275
308	Active and passive safety		Air bags and pre-tensioners control unit	✓	✓	✓	✓	○	0034 0035 0276 0277 0278 0279
308	Visibility / Lighting / Signalling		Rain and light sensor	✓	✓	✓	○	○	
308	Visibility / Lighting / Signalling		Dynamic headlamp height adjuster	✓	✓	✓	✓	✓	
308	Visibility / Lighting / Signalling		Driving school module	✓	✓	✓	○	✓	
308	Diesel additive pump		Pompe mux MGI	✓	✓	✓	✓	✓	0009 0156 0355
308	Diesel additive pump		Pompe mux TI	✓	✓	✓	✓	✓	0009
308	Diesel additive pump		PADDGO_E5	✓	✓	✓	✓	✓	
308	Windscreen wiper			✓	○	○	○	✓	
308	Moving panel deflector			✓	✓	✓	✓	✓	0356

308	Engine relay unit			✓	✓	✓	✓	✓	
308	Trailer relay unit			✓	✓	✓	✓	○	
308	high frequency receiver			✓	✓	✓	✓	○	
308	Voltage retaining device		DMTR	✓	✓	✓	○	○	
308 4 portes	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0092 0093 0291
308 4 portes	Injection/ignition	DCM3.4	RHR DCM3.4	✓	✓	✓	✓	✓	0061 0066 0067 0134 0136 0147 0151 0170 0171 0172 0173 0174 0243 0250 0251 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0262 0263 0264 0265 0266 0267 0268 0269 0270
308 4 portes	Injection/ignition	DCM3.5	RHE DCM3.5	✓	✓	✓	✓	✓	0042 0066 0067 0068 0134 0136 0142 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0243 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0262 0316 0320 0329
308 4 portes	Injection/ignition	DCM35.BR2	RHH-DW1OCTED4-163CV	✓	✓	✓	✓	✓	0150
308 4 portes	Injection/ignition	EDC16C3	9HY EDC16C3	✓	✓	✓	✓	✓	0009 0060 0062 0063 0066 0067 0136 0235 0236 0237 0238 0239 0240
308 4 portes	Injection/ignition	MED17_4_EURO4	MED17_4_EURO4 5FX	✓	✓	✓	✓	✓	
308 4 portes	Injection/ignition	MEV17_4_EURO4	MEV17_4_EURO4 5FW	✓	✓	✓	✓	✓	
308 4 portes	Injection/ignition	MEVD17_4_2	5FU MEVD17.4.2	✓	✓	✓	✓	✓	0002 0009 0014 0054 0060 0123 0124 0126 0127 0128 0129 0131 0132 0179 0181 0270 0305 0308 0310 0311 0312
308 4 portes	Injection/ignition	MED17_4_2	5FV MED17.4.2 EURO 5	✓	✓	✓	✓	✓	
308 4 portes	Injection/ignition	MEV17_4_2	MEV17_4_2 EP6C	✓	✓	✓	✓	✓	0002 0009 0014 0054 0060 0124 0126 0132 0135 0179 0181 0305 0308 0309 0311 0312 0313 0314
308 4 portes	Injection/ignition	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓	0002 0009 0014 0038 0053 0054 0055 0134 0178 0179
308 4 portes	Injection/ignition	ME745	N6B ME745	✓	✓	✓	✓	✓	0002 0009 0051 0058
308 4 portes	Injection/ignition	ME749	ME749 N6A	✓	✓	✓	✓	✓	0002 0049 0058
308 4 portes	Injection/ignition	ME749_EC5	ME749_EC5 NFP	✓	✓	✓	✓	✓	

308 4 portes	Injection/ignition	MM6KP	MM6KP RFJ	✓	✓	✓	✓	✓	0002 0009 0014 0053 0054 0055 0060 0125 0178 0229 0230 0231 0232
308 4 portes	Injection/ignition	MEV17_4_EURO5	MEV17_4_EURO5 8FS	✓	✓	✓	✓	✓	
308 4 portes	Injection/ignition	MED17_4_EURO5	MED17_4_EURO5 5FV	✓	✓	✓	✓	✓	
308 4 portes	Injection/ignition	HDI_SID807	9HR HDI SID807	✓	✓	✓	✓	✓	0042 0064 0066 0067 0068 0134 0136 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0253 0254 0255 0256 0258 0315 0316 0317 0318 0319 0320
308 4 portes	Injection/ignition	EDC17C10_BR2	9HP-DV6DTED-90V	✓	✓	✓	✓	✓	0060 0066 0067 0068 0069 0134 0142 0143 0144 0145 0146 0149 0170 0171 0172 0173 0174 0181 0240 0250 0258 0316 0318 0319 0324 0325 0326 0327 0328 0330 0331 0332 0333 0334 0335 0336 0337 0338
308 4 portes	Injection/ignition	EDC17C10	9HP EDC17C10	✓	✓	✓	✓	✓	0038 0068 0134 0142 0143 0144 0145 0146 0149 0170 0171 0172 0173 0174 0233 0240 0250 0252 0258 0316 0318 0319 0325 0330 0331 0332 0333 0334 0335 0336
308 4 portes	Injection/ignition	HDI_SID807_BR2	9HL HDI_SID807_BR2	✓	✓	✓	✓	✓	0060 0064 0066 0067 0068 0069 0134 0136 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0181 0250 0253 0254 0255 0256 0258 0316 0318 0319 0320 0321 0322 0323 0324 0325 0326 0327 0328
308 4 portes	Injection/ignition		ME745_EC5	✓	✓	✓	✓	✓	
308 4 portes	Injection/ignition		MED17_4_4	✓	✓	✓	✓	✓	
308 4 portes	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS 8.1	✓	✓	✓	✓	✓	0009 0010
308 4 portes	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP 8.1	✓	✓	✓	✓	✓	0003 0010 0275
308 4 portes	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	0009 0155 0222 0223 0224 0225 0226 0227
308 4 portes	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	✓	✓	✓	✓	0002 0009 0017

308 4 portes	Automatic gearbox or controlled manual gearbox		BVA_AM6	✓	✓	✓	✓	✓	0155 0221 0222 0223 0224 0225 0226 0227 0339 0340
308 4 portes	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓	0198 0341 0342 0343 0344 0345 0346 0347 0348 0349 0350 0351 0352 0353 0354
308 4 portes	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○	0155
308 4 portes	Power steering			✓	✓	✓	✓	✓	
308 4 portes	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓	0009 0156 0355
308 4 portes	Diesel additive pump		Pompe mux TI	✓	✓	✓	✓	✓	0009
308 4 portes	Under inflation detection			✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088
308 4 portes	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓	
308 4 portes	Battery charge status unit		BECB	✓	✓	✓	✓	○	
308 4 portes	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○	
308 4 portes	Lane departure warning system			✓	✓	✓	✓	✓	
308 4 portes	Engine relay unit			✓	✓	✓	✓	✓	
308 4 portes	Air bags and pre-tensioners control unit		SAC_AUTOLIV	✓	✓	✓	✓	○	0034 0035 0276 0277 0278 0279
308 4 portes	Multifunction screen		Type 'A' (segments) AVEC buttons	✓	✓	✓	✓	✓	
308 4 portes	Multifunction screen		Type 'C' (dot matrix)	✓	✓	✓	✓	✓	
308 4 portes	Windscreen wiper			✓	○	○	○	✓	
308 4 portes	Parking assistance			✓	✓	✓	✓	○	0009 0071
308 4 portes	Air conditioning			✓	✓	✓	✓	✓	0042
308 4 portes	Controls under the steering wheel			✓	✓	✓	✓	✓	0003
308 4 portes	Instrument panel			✓	✓	✓	✓	✓	0009 0099
308 4 portes	CD changer / external CD player			✓	✓	✓	○	✓	0048 0292 0297
308 4 portes	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG	✓	✓	✓	✓	✓	0005 0102 0105 0106 0107 0108 0294 0295 0296

308 4 portes	Telematic unit (RTx) or audio-navigation		RADIONAV_NG4	✓	✓	✓	✓	✓	0005 0102 0105 0106 0107 0108 0294 0295 0296
308 4 portes	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓	0005 0030 0097 0102 0103 0105 0106 0107 0108 0109 0110 0111 0112 0220
308 4 portes	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEGC	✓	✓	✓	✓	✓	0005 0097 0102 0105 0106 0107 0108 0295 0296
308 4 portes	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG_ECO	✓	✓	✓	✓	✓	
308 4 portes	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓	
308 4 portes	Audio amplifier			✓	✓	✓	○	✓	0009
308 4 portes	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓	0100 0101
308 4 portes	Hands-free Kit / Portable Unit		BOITIER_NOMADE	✓	✓	✓	✓	✓	0100 0101 0293
308 4 portes	Seat driver position memory module.			✓	✓	✓	✓	✓	0285 0286 0287 0288 0289 0290
308 4 portes	Anti-theft alarm		ALARME	✓	✓	✓	✓	✓	0096 0137 0138
308 4 portes	Anti-theft alarm		ALARME_LIN	✓	✓	✓	✓	✓	
308 4 portes	Passenger seat memorisation module			✓	✓	✓	✓	✓	
308 4 portes	Driver's door module			✓	✓	✓	✓	✓	
308 4 portes	Sun roof			✓	✓	✓	✓	✓	0274
308 4 portes	Moving panel deflector			✓	✓	✓	✓	✓	0356
308 4 portes	Folding roof			✓	✓	✓	✓	✓	0140 0304
308 4 portes	Service module / Independent telematic		MD_SERV	✓	✓	✓	✓	✓	0005 0298 0299
308 4 portes	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓	0005 0300
308 4 portes	Service module / Independent telematic		BLVV	✓	✓	✓	✓	✓	
308 4 portes	Driving school module			✓	✓	✓	○	✓	
308 4 portes	Rain and brightness sensor			✓	✓	✓	○	○	
308 4 portes	Pedestrian impact detection unit			✓	✓	✓	✓	○	
308 4 portes	seat belt not fastened warning lights unit			✓	○	○	○	✓	
308 4 portes	Control panel dot matrix display			✓	✓	✓	✓	✓	0301 0302 0303

308 4 portes	Voltage retaining device			✓	○	○	○	○	
308 (T9)	Built-in Systems Interface			✓	✓	✓	○	○	0157
308 (T9)	Engine management ECU		HDI_SID807_BR2	✓	✓	✓	✓	○	0066 0136
308 (T9)	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	○	0066 0136
308 (T9)	Engine management ECU	MED17_4_2	5FV MED 17.4.2 Euro 5	✓	✓	✓	✓	○	
308 (T9)	Engine management ECU		V46	✓	✓	✓	✓	○	
308 (T9)	Engine management ECU		V46_21	✓	✓	✓	✓	○	
308 (T9)	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	0152
308 (T9)	Engine management ECU		VD46	✓	✓	✓	✓	○	
308 (T9)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
308 (T9)	Engine management ECU		MEVD17_4_4	✓	✓	✓	✓	○	
308 (T9)	Engine management ECU		DCM62	✓	✓	✓	✓	○	0152
308 (T9)	Engine management ECU		CMM_DCM71	✓	✓	✓	✓	○	
308 (T9)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○	
308 (T9)	Engine management ECU		CMM_VD56	✓	✓	✓	✓	○	
308 (T9)	Engine management ECU		CMM_MG1CS042	✓	✓	✓	✓	○	
308 (T9)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90	✓	✓	✓	✓	○	0003 0275 0357 0358
308 (T9)	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○	0155
308 (T9)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	○	
308 (T9)	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○	
308 (T9)	Trailer relay unit			✓	✓	✓	✓	○	
308 (T9)	Engine relay unit			✓	✓	✓	✓	○	
308 (T9)	Multifunction screen		EMF_A_UDS	✓	✓	✓	○	○	
308 (T9)	Multifunction screen		EMF_C_UDS	✓	✓	✓	✓	○	
308 (T9)	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	○	
308 (T9)	Dynamic headlamp height adjuster			✓	✓	✓	✓	○	
308 (T9)	External CD player			✓	✓	✓	✓	○	

308(T9)	Supply protection and management unit			✓	✓	✓	✓	○	
308(T9)	Anti-theft alarm			✓	✓	✓	✓	○	
308(T9)	Driver's door module			✓	✓	✓	○	○	
308(T9)	power steering			✓	✓	✓	✓	○	
308(T9)	Electronic key reader			✓	✓	✓	✓	○	
308(T9)	Electric steering lock			✓	✓	✓	✓	○	
308(T9)	Diesel additive pump			✓	✓	✓	✓	○	
308(T9)	Vehicle Distance Assistance			✓	✓	✓	✓	○	
308(T9)	Air conditioning			✓	✓	✓	✓	○	
308(T9)	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	○	
308(T9)	Touch screen		EMF_DGT_UDS	✓	✓	✓	✓	○	
308(T9)	Rain and light sensor			✓	✓	✓	✓	○	
308(T9)	Seat driver position memory module.			✓	✓	✓	✓	○	
308(T9)	Battery charge status unit			✓	✓	✓	✓	○	
308(T9)	Radio amplifier			✓	✓	✓	○	○	
308(T9)	Hands-free control unit			✓	✓	✓	✓	○	
308(T9)	Service module / Independent telematic		BTA	✓	✓	✓	✓	○	
308(T9)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	○	
308(T9)	Multiplexed control panel			✓	✓	✓	✓	○	
308(T9)	Intrusion alarm siren			✓	✓	✓	✓	○	
308(T9)	Control of the telematic unit			✓	✓	✓	✓	○	
308(T9)	Radio		RD45	✓	✓	✓	✓	○	
308(T9)	Instrument panel			✓	✓	✓	✓	○	
308(T9)	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	○	
308(T9)	seat belt not fastened warning lights unit			✓	○	○	○	○	
308(T9)	Voltage retaining device		DMTR	✓	✓	✓	○	○	

308(T9)	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○	
308(T9)	Parking assistance			✓	✓	✓	✓	○	
308S	Built-in Systems Interface			✓	✓	✓	○	○	0157
308S	Engine management ECU		VD46	✓	✓	✓	✓	○	
308S	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
308S	Engine management ECU		V46_52	✓	✓	✓	✓	○	
308S	Engine management ECU		CMM_VD56	✓	✓	✓	✓	○	
308S	Engine management ECU		CMM_MG1CS042	✓	✓	✓	✓	○	
308S	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	0003 0275 0357 0358
308S	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○	0155
308S	Automatic or piloted manual gearbox		DCT_6DCT200	✓	✓	✓	✓	○	
308S	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○	
308S	Engine relay unit			✓	✓	✓	✓	○	
308S	Multifunction screen		EMF_C_UDS	✓	✓	✓	✓	○	
308S	Dynamic headlamp height adjuster			✓	✓	✓	✓	○	
308S	Supply protection and management unit			✓	✓	✓	✓	○	
308S	power steering			✓	✓	✓	✓	○	
308S	Electronic key reader			✓	✓	✓	✓	○	
308S	Electric steering lock			✓	✓	✓	✓	○	
308S	Air conditioning			✓	✓	✓	✓	○	
308S	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	○	
308S	Touch screen		EMF_DGT_UDS	✓	✓	✓	✓	○	
308S	Rain and light sensor			✓	✓	✓	✓	○	
308S	Seat driver position memory module.			✓	✓	✓	✓	○	
308S	Battery charge status unit			✓	✓	✓	✓	○	

308S	Hands-free control unit			✓	✓	✓	✓	○	
308S	Service module / Independent telematic		BTA_CN	✓	✓	✓	✓	○	
308S	Multiplexed control panel			✓	✓	✓	✓	○	
308S	Control of the telematic unit			✓	✓	✓	✓	○	
308S	Radio		RD45	✓	✓	✓	✓	○	
308S	Instrument panel			✓	✓	✓	✓	○	
308S	Control panel dot matrix display		MATT_C_2010	✓	✓	✓	○	○	
308S	Voltage retaining device		DMTR	✓	✓	✓	○	○	
308S	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○	
308S	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	○	
308S	Anti-theft alarm			✓	✓	✓	✓	○	
308S	Parking assistance			✓	✓	✓	✓	○	
308 TX9	Built-in systems interface			✓	✓	✓	✓	○	
308 TX9	Engine management ECU		VD46	✓	✓	✓	✓	○	
308 TX9	Engine management ECU		V46_52	✓	✓	✓	✓	○	
308 TX9	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
308 TX9	Engine management ECU		CMM_VD56	✓	✓	✓	✓	○	
308 TX9	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	
308 TX9	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	○	
308 TX9	Automatic or piloted manual gearbox		DCT_6DCT200	✓	✓	✓	✓	○	
308 TX9	Electric steering lock			✓	✓	✓	✓	○	
308 TX9	Instrument panel			✓	✓	✓	✓	○	
308 TX9	Rain and brightness sensor			✓	✓	✓	✓	○	
308 TX9	Audio- navigation/telematic unit/connected audio			✓	✓	✓	✓	○	

308 TX9	Service module / Independent telematic			✓	✓	✓	✓	○	
308 TX9	Power steering			✓	✓	✓	✓	○	
308 TX9	Multifunction control panel			✓	✓	✓	✓	○	
308 TX9	Controls under the steering wheel			✓	✓	✓	✓	○	
308 TX9	Airbags and pretensioners ECU			✓	✓	✓	✓	○	
308 TX9	Control panel dot matrix display			✓	✓	✓	○	○	
308 TX9	Multifunction screen			✓	✓	✓	○	○	
308 TX9	Air conditioning			✓	✓	✓	✓	○	
308 TX9	Battery charge status control unit			✓	✓	✓	✓	○	
308 TX9	Parking assistance			✓	✓	✓	✓	○	
308 TX9	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
308 TX9	Radio			✓	✓	✓	✓	○	
308 TX9	Voltage maintaining device			✓	✓	✓	○	○	
308 TX9	Touch screen			✓	✓	✓	✓	○	
405	Engine management ECU		J35	✓	✓	✓	✓	✓	0009 0038
405	Engine management ECU		ME744	✓	✓	✓	✓	✓	0002 0012
405	Engine management ECU		S2000P	✓	✓	✓	✓	✓	0002
405	Engine management ECU		MP7.3	✓	✓	✓	✓	✓	0001
406	Protect the vehicle		Transponder PEUGEOT	✓	○	✓	✓	○	
406	Air bags and pre-tensioners control unit		Air bag and seat belt	✓	✓	✓	○	○	
406	Air bags and pre-tensioners control unit		Side airbag(right side)	✓	✓	✓	○	○	
406	Air bags and pre-tensioners control unit		Side airbag(left side)	✓	✓	✓	○	○	
406	Air conditioning		Heating/ventilation, heating/ventilation/regulated air conditioning(diagnosis)	○	✓	✓	○	✓	
406	Active safety		ABS5 BOSCH	✓	✓	✓	✓	✓	
406	Active safety		ABS BOSCH 5.3	✓	✓	✓	✓	✓	0010

406	Active safety		Electronically managed suspension	✓	✓	✓	○	○	
406	Engines/ automatic gearbox	MM1AP	LFX MM1AP	✓	✓	✓	✓	✓	
406	Engines/ automatic gearbox	MP5.1.1	LFY BOSCH MP5.1.1	✓	✓	✓	✓	✓	0001
406	Engines/ automatic gearbox	MP5.2	LFY BOSCH MP5.2	✓	✓	✓	✓	✓	0001
406	Engines/ automatic gearbox	MP7.3	LFY BOSCH MP7.3	✓	✓	✓	✓	✓	0001
406	Engines/ automatic gearbox	SL96	LFY SAGEM SL 96	✓	✓	✓	✓	✓	
406	Engines/ automatic gearbox	MP3.2	RGX BOSCH MP3.2	✓	✓	✓	✓	✓	
406	Engines/ automatic gearbox	MP7.0	XFZ BOSCH MP7.0	✓	✓	✓	✓	✓	
406	Engines/ automatic gearbox	VP20	DHX BOSCH VP20	✓	✓	✓	✓	○	
406	Engines/ automatic gearbox	EPIC	P8C LUCAS EPIC	○	✓	✓	○	○	
406	Engines/ automatic gearbox	EDC15C2	RHZ BOSCH EDC15C2	✓	✓	✓	✓	✓	
406	Engines/ automatic gearbox	Automatic gearbox	4HP20 automatic gearbox	✓	✓	✓	✓	○	
406	Engines/ automatic gearbox	Automatic gearbox	AL4 autoadaptive automatic gearbox	✓	✓	✓	✓	✓	0002
406	Variable power steering			✓	✓	✓	○	○	
406	Seat and mirrors with memory			✓	✓	✓	✓	○	
406 Coupe	Protect the vehicle		Transponder PEUGEOT	○	✓	✓	○	○	
406 Coupe	Air bags and pre-tensioners control unit		Air bag and seat belt	○	✓	✓	○	○	
406 Coupe	Air bags and pre-tensioners control unit		Side airbag(right side)	○	✓	✓	○	○	
406 Coupe	Air bags and pre-tensioners control unit		Side airbag(left side)	○	✓	✓	○	○	
406 Coupe	Air conditioning		Heating/ventilation, heating/ventilation/regulated air conditioning(diagnosis)	○	✓	✓	○	✓	
406 Coupe	Active safety		BOSCH ABS5	✓	✓	✓	✓	✓	
406 Coupe	Active safety		BOSCH ABS5.3	✓	✓	✓	✓	✓	

406 Coupe	Engines/ automatic gearbox	MP5.2	RFV BOSCH MP5.2	✓	✓	✓	✓	✓	0001
406 Coupe	Engines/ automatic gearbox	MP7.0	XFZ BOSCH MP7.0	✓	✓	✓	✓	✓	
406 Coupe	Engines/ automatic gearbox	Automatic gearbox	4HP20 automatic gearbox	○	✓	✓	○	○	
406 Coupe	Engines/ automatic gearbox	Automatic gearbox	BVA_AL4_AT8	✓	✓	✓	✓	✓	0002
406 Coupe	Variable power steering			○	✓	✓	○	○	
406 Coupe	Seat and mirrors with memory			○	✓	✓	○	○	
406 R	Built-in systems interface			✓	✓	✓	✓	✓	
406 R	Driver information/communicati		Multifunction screen	✓	✓	✓	✓	✓	
406 R	Driver information/communicati		Radio	✓	✓	✓	✓	✓	
406 R	Driver information/communicati		CD player	✓	✓	✓	✓	✓	
406 R	Driver information/communicati		Instrument panel	✓	✓	✓	✓	✓	
406 R	Driver information/communicati		On-board navigation system	✓	✓	✓	✓	○	
406 R	Air bags and pre-tensioners control unit		Air bag and seat belt	✓	✓	✓	○	○	
406 R	Air bags and pre-tensioners control unit		Side airbag(right side)	✓	✓	✓	○	○	
406 R	Air bags and pre-tensioners control unit		Side airbag(left side)	✓	✓	✓	○	○	
406 R	Air conditioning			○	✓	✓	○	○	
406 R	Active safety		ABS BOSCH 5.3	✓	✓	✓	✓	✓	0010
406 R	Active safety		ESP BOSCH 5.3	✓	✓	✓	✓	✓	0359
406 R	Engines/ automatic gearbox	MM4MP2	3FZ MM4MP2	✓	✓	✓	✓	✓	0212
406 R	Engines/ automatic gearbox	S2000P	6FZ SAGEM S2000	✓	✓	✓	✓	✓	0002
406 R	Engines/ automatic gearbox	S2000P	6FZ SAGEM S2000	✓	✓	✓	✓	✓	0002
406 R	Engines/ automatic gearbox	IDE_SIRIUS81	RLZ SIEMENS SIRIUS 81	✓	✓	✓	✓	✓	0002
406 R	Engines/ automatic gearbox	MM1AP	LFX MM1AP	○	✓	✓	○	✓	0001

406 R	Engines/ automatic gearbox	MP5.2	LFY BOSCH MP5.2	✓	✓	✓	✓	✓	0001
406 R	Engines/ automatic gearbox	MP7.3	LFY BOSCH MP7.3	✓	✓	✓	✓	✓	0001
406 R	Engines/ automatic gearbox	SL96	LFY SAGEM SL 96	✓	✓	✓	✓	✓	
406 R	Engines/ automatic gearbox	MM48P	R6F MM4.8P	✓	✓	✓	✓	✓	0002 0011
406 R	Engines/ automatic gearbox	ME746	XFX BOSCH ME7.4.6	✓	✓	✓	✓	✓	0002
406 R	Engines/ automatic gearbox	MP7.0	XFZ BOSCH MP7.0	✓	✓	✓	✓	✓	
406 R	Engines/ automatic gearbox	EDC15C2	4HX BOSCH EDC15C2	○	✓	✓	✓	✓	0013
406 R	Engines/ automatic gearbox	Automatic gearbox	4HP20 automatic gearbox	○	✓	✓	○	○	
406 R	Engines/ automatic gearbox	Automatic gearbox	AL4 autoadaptive automatic gearbox	○	✓	✓	✓	✓	0002
406 R	Variable power steering			✓	✓	✓	○	○	
406 R	Seat and mirrors with memory			✓	✓	✓	✓	✓	
406 R	Built-in systems interface			✓	✓	✓	✓	○	0018 0360 0361 0362
406 R	Anti-theft alarm			✓	✓	✓	○	✓	
406 R	Driver information/communication		Multifunction screen	✓	✓	✓	✓	✓	
406 R	Driver information/communication		Instrument panel	✓	✓	✓	✓	✓	
406 R	Driver information/communication		Radio	✓	✓	✓	✓	✓	
406 R	Driver information/communication		CD player	✓	✓	✓	✓	✓	
406 R	Driver information/communication		On-board navigation system	✓	✓	✓	✓	○	
406 R	Driver information/communication		Switching module below steering wheel (COM 2000)	✓	✓	✓	✓	○	
406 R	Visibility /lighting		Rain/sunlight sensor	✓	✓	✓	○	○	
406 R	Air bags and pre-tensioners control unit			✓	✓	✓	○	○	
406 R	Air conditioning			✓	✓	✓	✓	✓	
406 R	Active safety		BOSCH ABS5.3	✓	✓	✓	✓	✓	0010

406 R	Active safety		ESP BOSCH 5.3	✓	✓	✓	✓	✓	0359
406 R	Engines/ automatic gearbox	MM4MP2	3FZ MM4MP2	✓	✓	✓	✓	✓	0212
406 R	Engines/ automatic gearbox	S2000P	6FZ SAGEM S2000	✓	✓	✓	✓	✓	0002
406 R	Engines/ automatic gearbox	MM48P	R6F MM4. 8P	✓	✓	✓	✓	✓	0002 0011
406 R	Engines/ automatic gearbox	ME746	XFX BOSCH ME7. 4. 6	✓	✓	✓	✓	✓	0002
406 R	Engines/ automatic gearbox	IDE_SIRIUS81	RLZ IDE SIRIUS 81	✓	✓	✓	✓	✓	0002
406 R	Engines/ automatic gearbox	EDC15C2	4HX BOSCH EDC15C2	✓	✓	✓	✓	✓	
406 R	Engines/ automatic gearbox	HDI_SID801	RHY SIEMENS SID 801	✓	✓	✓	✓	✓	
406 R	Engines/ automatic gearbox		Diesel fuel additive control unit	✓	✓	✓	✓	✓	0039
406 R	Engines/ automatic gearbox	Automatic gearbox	4HP20 automatic gearbox	○	✓	✓	○	○	
406 R	Engines/ automatic gearbox	Automatic gearbox	AL4 autoadaptive automatic gearbox	○	✓	✓	✓	✓	0002
406 R	Variable power steering			○	✓	✓	○	○	
406 R	Seat position memory ECU			○	✓	✓	○	✓	
406 R Coupe	Built-in systems interface			✓	✓	✓	✓	✓	
406 R Coupe	Driver information/communicati		Multifunction screen	✓	✓	✓	✓	✓	
406 R Coupe	Driver information/communicati		Radio	✓	✓	✓	✓	✓	
406 R Coupe	Driver information/communicati		CD player	✓	✓	✓	✓	✓	
406 R Coupe	Driver information/communicati		Instrument panel	✓	✓	✓	✓	✓	
406 R Coupe	Driver information/communicati		On-board navigation system	✓	✓	✓	✓	○	
406 R Coupe	Air bags and pre-tensioners control unit		Air bag and seat belt	✓	✓	✓	○	○	
406 R Coupe	Air bags and pre-tensioners control unit		Side airbag(right side)	✓	✓	✓	○	○	
406 R Coupe	Air bags and pre-tensioners control unit		Side airbag(left side)	✓	✓	✓	○	○	

406 R Coupe	Air conditioning			○	✓	✓	○	○	
406 R Coupe	Active safety		ABS BOSCH 5.3	✓	✓	✓	✓	✓	0010
406 R Coupe	Active safety		ESP BOSCH 5.3	✓	✓	✓	✓	✓	0359
406 R Coupe	Engines/ automatic gearbox	MM4MP2	3FZ MM4MP2	✓	✓	✓	✓	✓	0212
406 R Coupe	Engines/ automatic gearbox	S2000P	6FZ SAGEM S2000	✓	✓	✓	✓	✓	0002
406 R Coupe	Engines/ automatic gearbox	S2000P	6FZ SAGEM S2000	✓	✓	✓	✓	✓	0002
406 R Coupe	Engines/ automatic gearbox	IDE_SIRIUS81	RLZ SIEMENS SIRIUS 81	✓	✓	✓	✓	✓	0002
406 R Coupe	Engines/ automatic gearbox	MM1AP	LFX MM1AP	○	✓	✓	○	✓	0001
406 R Coupe	Engines/ automatic gearbox	MP5.2	LFY BOSCH MP5.2	✓	✓	✓	✓	✓	0001
406 R Coupe	Engines/ automatic gearbox	MP7.3	LFY BOSCH MP7.3	✓	✓	✓	✓	✓	0001
406 R Coupe	Engines/ automatic gearbox	SL96	LFY SAGEM SL 96	✓	✓	✓	✓	✓	
406 R Coupe	Engines/ automatic gearbox	MM48P	R6F MM4.8P	✓	✓	✓	✓	✓	0002 0011
406 R Coupe	Engines/ automatic gearbox	ME746	XFX BOSCH ME7.4.6	✓	✓	✓	✓	✓	0002
406 R Coupe	Engines/ automatic gearbox	MP7.0	XFZ BOSCH MP7.0	✓	✓	✓	✓	✓	
406 R Coupe	Engines/ automatic gearbox	EDC15C2	4HX BOSCH EDC15C2	○	✓	✓	✓	✓	0013
406 R Coupe	Engines/ automatic gearbox	Automatic gearbox	4HP20 automatic gearbox	○	✓	✓	○	○	
406 R Coupe	Engines/ automatic gearbox	Automatic gearbox	AL4 autoadaptive automatic gearbox	○	✓	✓	✓	✓	0002
406 R Coupe	Variable power steering			✓	✓	✓	○	○	
406 R Coupe	Seat and mirrors with memory			✓	✓	✓	✓	✓	
406 R Coupe	Built-in systems interface			✓	✓	✓	✓	○	0018 0360 0361 0362
406 R Coupe	Anti-theft alarm			✓	✓	✓	○	✓	
406 R Coupe	Driver information/communicati		Multifunction screen	✓	✓	✓	✓	✓	
406 R Coupe	Driver information/communicati		Instrument panel	✓	✓	✓	✓	✓	

406 R Coupe	Driver information/communication		Radio	✓	✓	✓	✓	✓	
406 R Coupe	Driver information/communication		CD player	✓	✓	✓	✓	✓	
406 R Coupe	Driver information/communication		On-board navigation system	✓	✓	✓	✓	○	
406 R Coupe	Driver information/communication		Switching module below steering wheel (COM 2000)	✓	✓	✓	✓	○	
406 R Coupe	Visibility /lighting		Rain/sunlight sensor	✓	✓	✓	○	○	
406 R Coupe	Air bags and pre-tensioners control unit			✓	✓	✓	○	○	
406 R Coupe	Air conditioning			✓	✓	✓	✓	✓	
406 R Coupe	Active safety		BOSCH ABS5.3	✓	✓	✓	✓	✓	0010
406 R Coupe	Active safety		ESP BOSCH 5.3	✓	✓	✓	✓	✓	0359
406 R Coupe	Engines/ automatic gearbox	MM4MP2	3FZ MM4MP2	✓	✓	✓	✓	✓	0212
406 R Coupe	Engines/ automatic gearbox	S2000P	6FZ SAGEM S2000	✓	✓	✓	✓	✓	0002
406 R Coupe	Engines/ automatic gearbox	MM48P	R6F MM4.8P	✓	✓	✓	✓	✓	0002 0011
406 R Coupe	Engines/ automatic gearbox	ME746	XFX BOSCH ME7.4.6	✓	✓	✓	✓	✓	0002
406 R Coupe	Engines/ automatic gearbox	IDE_SIRIUS81	RLZ IDE SIRIUS 81	✓	✓	✓	✓	✓	0002
406 R Coupe	Engines/ automatic gearbox	EDC15C2	4HX BOSCH EDC15C2	✓	✓	✓	✓	✓	
406 R Coupe	Engines/ automatic gearbox	HDI_SID801	RHY SIEMENS SID 801	✓	✓	✓	✓	✓	
406 R Coupe	Engines/ automatic gearbox		Diesel fuel additive control unit	✓	✓	✓	✓	✓	0039
406 R Coupe	Engines/ automatic gearbox	Automatic gearbox	4HP20 automatic gearbox	○	✓	✓	○	○	
406 R Coupe	Engines/ automatic gearbox	Automatic gearbox	AL4 autoadaptive automatic gearbox	○	✓	✓	✓	✓	0002
406 R Coupe	Variable power steering			○	✓	✓	○	○	
406 R Coupe	Seat position memory ECU			○	✓	✓	○	✓	
407	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	✓	
407	Driving assistance / Comfort		Seat driver position memory module.	✓	✓	✓	✓	✓	0285 0286 0287 0288 0289 0290

407	Driving assistance / Comfort		Passenger seat memorisation module	✓	✓	✓	✓	✓	0285 0286 0287 0288 0289 0363
407	Driving assistance / Comfort	Air conditioning	407 heating/ventilation	✓	✓	✓	✓	✓	
407	Driving assistance / Comfort	Air conditioning	Aircon on 407 Restyling	✓	✓	✓	✓	✓	
407	Driving assistance / Comfort		Additional heating	✓	✓	✓	✓	✓	0364
407	Driving assistance / Comfort		Under inflation detection	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088
407	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	✓	
407	Driving assistance / Comfort		Electronically managed suspension	✓	✓	✓	✓	✓	
407	Driving assistance / Comfort	Battery charge status unit	BECB (1)	✓	✓	✓	✓	○	
407	Driving assistance / Comfort	Battery charge status unit	BECB (2)	✓	✓	✓	✓	○	
407	Driving assistance / Comfort	Battery charge status unit	BECB_GEN2	✓	✓	✓	✓	○	
407	Built-in systems interface			✓	✓	✓	✓	✓	0018 0091 0093 0157
407	Inform the driver / Audio / Communication		Multifunction screen	✓	✓	✓	✓	✓	
407	Inform the driver / Audio / Communication		Radio	✓	✓	✓	✓	✓	
407	Inform the driver / Audio / Communication		CD player	✓	✓	✓	○	✓	
407	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0099
407	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	
407	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	
407	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	
407	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	Data communication ECU	✓	✓	✓	✓	✓	
407	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG radio navigation	✓	✓	✓	✓	✓	
407	Inform the driver / Audio / Communication		High frequency receiver	✓	✓	✓	✓	○	

407	Engine / Gearbox	Gearbox ECU	AM6 automatic gearbox	✓	✓	✓	✓	✓	0221 0222
407	Engine / Gearbox	Gearbox ECU	AL4 automatic gearbox	✓	✓	✓	✓	✓	
407	Engine / Gearbox	Gearbox ECU	4HP20 automatic gearbox	✓	✓	✓	✓	○	
407	Engine / Gearbox	Gearbox ECU	AM6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0222
407	Engine / Gearbox	Gearbox ECU	BVA_AM6_AT6_EURO5	✓	✓	✓	✓	○	
407	Engine / Gearbox	Gearbox ECU	BVA_AM6	✓	✓	✓	✓	○	
407	Engine / Gearbox	ME747	XFV ME747	✓	✓	✓	✓	✓	
407	Engine / Gearbox	MM6LP	3FZ MM6LP	✓	✓	✓	✓	✓	
407	Engine / Gearbox	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓	0212
407	Engine / Gearbox	S2000PM2	6FZ S2000PM2	✓	✓	✓	✓	✓	0002
407	Engine / Gearbox	MM6KP	RFJ MM6KP Bio Flex (EW10A FF)	✓	✓	✓	✓	✓	0002 0365
407	Engine / Gearbox	Diesel	EDC17CP11	✓	✓	✓	✓	✓	0066 0067 0366
407	Engine / Gearbox	EDC16C3	9HY BOSCH EDC16C3 EURO3	✓	✓	✓	✓	✓	0066 0067
407	Engine / Gearbox	EDC16CP39	4HP BOSCH EDC16CP39	✓	✓	✓	✓	✓	0066 0067 0136 0151 0243 0367 0368 0369 0370
407	Engine / Gearbox	DCM3.4	RHL DCM3.4	✓	✓	✓	✓	✓	0066 0067 0136 0151 0243 0251 0263 0264 0265
407	Engine / Gearbox	SID201	UHZ SIEMENS SID201	✓	✓	✓	✓	✓	0136 0147 0262 0371 0372 0373
407	Engine / Gearbox	HDI_SID803	RHR SIEMENS SID 803	✓	✓	✓	✓	✓	0009 0066 0067 0214
407	Engine / Gearbox	DCM3.5	RHH DCM3.5	✓	✓	✓	✓	✓	0066 0067 0068 0136 0151 0243
407	Engine / Gearbox	Diesel	HDI_SID803A	✓	✓	✓	✓	○	0066 0067
407	Engine / Gearbox	Diesel	DCM35_BR2	✓	✓	✓	✓	○	0136 0150
407	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	
407	Vehicle protection / Management of accesses		Driver's door module	✓	✓	✓	✓	✓	
407	Vehicle protection / Management of accesses		Passenger door module	✓	✓	✓	✓	✓	
407	Vehicle protection / Management of accesses		Sun roof	✓	✓	✓	✓	✓	
407	Active and passive safety	ABS or ESP ECU	ESP EBC 440 (CAN)	✓	✓	✓	✓	✓	0010 0036 0037
407	Active and passive safety	ABS or ESP ECU	ESP EBC 440 (K)	✓	✓	✓	✓	✓	0010 0036 0037

407	Active and passive safety	ABS or ESP ECU	ESP 8.1	✓	✓	✓	✓	✓	0003 0010 0275
407	Active and passive safety	Air bags and pre-tensioners control unit	SAC_GONFLABLE	✓	✓	✓	✓	○	
407	Active and passive safety	Air bags and pre-tensioners control unit	SAC_AUTOLIV	✓	✓	✓	✓	○	
407	Visibility / Lighting / Signalling		Control unit windscreen wipers	✓	✓	✓	✓	✓	
407	Visibility / Lighting / Signalling	Rain/sunlight sensor	CDPL	✓	✓	✓	○	○	
407	Visibility / Lighting / Signalling	Rain/sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓	○	○	
407	Visibility / Lighting / Signalling		Left-hand dynamic headlamp height	✓	✓	✓	✓	✓	
407	Visibility / Lighting / Signalling		Right-hand dynamic headlamp height	✓	✓	✓	✓	○	
407	Diesel fuel additive control unit			✓	✓	✓	✓	✓	0039 0281 0282 0283
407	Dynamic headlamp height adjuster		LADAFS	✓	✓	✓	✓	○	
407	Trailer relay unit			✓	✓	✓	✓	○	
407	Engine relay unit			✓	✓	✓	✓	○	
407	Boot relay unit			✓	✓	✓	✓	○	
408(T73)	Driving assistance / Comfort		Lane departure warning system	✓	✓	✓	✓	✓	
408(T73)	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	0042
408(T73)	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	✓	
408(T73)	Driving assistance / Comfort		Seat driver position memory module.	✓	✓	✓	✓	✓	0285 0286 0287 0288 0289 0290
408(T73)	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	0009 0071
408(T73)	Driving assistance / Comfort		Under inflation detection	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088
408(T73)	Driving assistance / Comfort		Passenger seat memorisation module	✓	✓	✓	✓	✓	
408(T73)	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0092 0093 0291
408(T73)	Inform the driver / Audio / Communication	Multifunction screen	EMF_A	✓	✓	✓	✓	✓	0095 0096 0097

408(T73)	Inform the driver / Audio / Communication	Multifunction screen	EMF_C	✓	✓	✓	✓	✓	0095 0096 0097
408(T73)	Inform the driver / Audio / Communication	Radio	RD4	✓	✓	✓	✓	✓	0005 0031 0048 0098 0292
408(T73)	Inform the driver / Audio / Communication	Radio	RD45	✓	✓	✓	✓	✓	
408(T73)	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0009 0099
408(T73)	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	0100 0101 0293
408(T73)	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	0100 0101
408(T73)	Inform the driver / Audio / Communication		seat belt not fastened warning lights unit	✓	○	○	○	✓	
408(T73)	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓	0005 0030 0097 0102 0103 0105 0106 0107 0108 0109 0110 0111 0112 0220
408(T73)	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓	✓	✓	0005 0102 0105 0106 0107 0108 0294 0295 0296
408(T73)	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_NG4	✓	✓	✓	✓	✓	0005 0102 0105 0106 0107 0108 0294 0295 0296
408(T73)	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEGC	✓	✓	✓	✓	✓	0005 0097 0102 0105 0106 0107 0108 0295 0296
408(T73)	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG_ECO	✓	✓	✓	✓	✓	
408(T73)	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓	✓	✓	
408(T73)	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	0003
408(T73)	Inform the driver / Audio / Communication		CD changer	✓	✓	✓	○	✓	0048 0292 0297
408(T73)	Inform the driver / Audio / Communication		Audio amplifier	✓	✓	✓	○	✓	0009
408(T73)	Inform the driver / Audio / Communication	Service module / Independent telematic	MD_SERV	✓	✓	✓	✓	✓	0005 0298 0299
408(T73)	Inform the driver / Audio / Communication	Service module / Independent telematic	BTA	✓	✓	✓	✓	✓	0005 0300
408(T73)	Inform the driver / Audio / Communication		Control panel dot matrix display	✓	✓	✓	✓	✓	0301 0302 0303
408(T73)	Inform the driver / Audio / Communication	Battery charge status unit	BECB	✓	✓	✓	✓	○	
408(T73)	Inform the driver / Audio / Communication	Battery charge status unit	BECB_GEN2	✓	✓	✓	✓	○	

408(T73)	Inform the driver / Audio / Communication		Folding roof	✓	✓	✓	✓	✓	0140 0304
408(T73)	Engine / Gearbox	ME745	N6A ME745	✓	✓	✓	✓	✓	0002 0009 0051 0058
408(T73)	Engine / Gearbox	Petrol	MM6KP	✓	✓	✓	✓	✓	0002 0009 0014 0053 0054 0055 0060 0125 0178 0229 0230 0231 0232
408(T73)	Engine / Gearbox	MEV17.4	5FW MEV17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0123 0124 0125 0126 0132 0133 0305 0306 0307 0308 0309
408(T73)	Engine / Gearbox	MEV174	5FS MEV17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133 0135
408(T73)	Engine / Gearbox	MED174	5FV MED17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0123 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133
408(T73)	Engine / Gearbox	MED17.4	5FT MED17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0123 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133
408(T73)	Engine / Gearbox	MEVD17_4_2	5FU MEVD17.4.2	✓	✓	✓	✓	✓	0002 0009 0014 0054 0060 0123 0124 0126 0127 0128 0129 0131 0132 0179 0181 0270 0305 0308 0310 0311 0312
408(T73)	Engine / Gearbox	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓	0002 0009 0014 0038 0053 0054 0055 0134 0178 0179
408(T73)	Engine / Gearbox	MM6LPB	MM6LPB	✓	✓	✓	✓	○	
408(T73)	Engine / Gearbox	ME749	NFU ME749 Bio Flex	✓	✓	✓	✓	✓	0002 0049 0058
408(T73)	Engine / Gearbox	MEV17_4_2	EP6C 5FS MEV17.4.2	✓	✓	✓	✓	✓	0002 0009 0014 0054 0060 0124 0126 0132 0135 0179 0181 0305 0308 0309 0311 0312 0313 0314
408(T73)	Engine / Gearbox	Petrol	MED17_4_EURO4	✓	✓	✓	✓	✓	
408(T73)	Engine / Gearbox	Petrol	MEV17_4_EURO4	✓	✓	✓	✓	✓	
408(T73)	Engine / Gearbox	Petrol	ME749_EC5	✓	✓	✓	✓	✓	
408(T73)	Engine / Gearbox	Petrol	ME745_EC5	✓	✓	✓	✓	✓	
408(T73)	Engine / Gearbox	Petrol	MEV17_4_EURO5	✓	✓	✓	✓	✓	
408(T73)	Engine / Gearbox	Petrol	MED17_4_EURO5	✓	✓	✓	✓	✓	
408(T73)	Engine / Gearbox	Petrol	MED17_4_4	✓	✓	✓	✓	✓	

408(T73)	Engine / Gearbox	EDC16C3	9HV EDC16C3	✓	✓	✓	✓	✓	0009 0060 0062 0063 0066 0067 0136 0235 0236 0237 0238 0239 0240
408(T73)	Engine / Gearbox	DCM3.4	RHR DCM3.4	✓	✓	✓	✓	✓	0061 0066 0067 0134 0136 0147 0151 0170 0171 0172 0173 0174 0243 0250 0251 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0262 0263 0264 0265 0266 0267 0268 0269 0270
408(T73)	Engine / Gearbox	HDI_SID807	9HL HDI SID807	✓	✓	✓	✓	✓	0042 0064 0066 0067 0068 0134 0136 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0253 0254 0255 0256 0258 0315 0316 0317 0318 0319 0320
408(T73)	Engine / Gearbox	HDI_SID807_BR2	9HR HDI_SID807_BR2	✓	✓	✓	✓	✓	0060 0064 0066 0067 0068 0069 0134 0136 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0181 0250 0253 0254 0255 0256 0258 0316 0318 0319 0320 0321 0322 0323 0324 0325 0326 0327 0328
408(T73)	Engine / Gearbox	DCM3.5	RHH DCM3.5	✓	✓	✓	✓	✓	0042 0066 0067 0068 0134 0136 0142 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0243 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0262 0316 0320 0320
408(T73)	Engine / Gearbox	EDC17C10	9HP EDC17C10	✓	✓	✓	✓	✓	0038 0068 0134 0142 0143 0144 0145 0146 0149 0170 0171 0172 0173 0174 0233 0240 0250 0252 0258 0316 0318 0319 0325 0330 0331 0332 0333 0334 0335 0336
408(T73)	Engine / Gearbox	EDC17C10_BR2	9HP EDC17C10_BR2	✓	✓	✓	✓	✓	0060 0066 0067 0068 0069 0134 0142 0143 0144 0145 0146 0149 0170 0171 0172 0173 0174 0181 0240 0250 0258 0316 0318 0319 0324 0325 0326 0327 0328 0330 0331 0332 0333 0334 0335 0336 0337 0338
408(T73)	Engine / Gearbox	Diesel	DCM35_BR2	✓	✓	✓	✓	✓	0136 0150
408(T73)	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AM6C gearbox	✓	✓	✓	✓	✓	0155 0221 0222 0223 0224 0225 0226 0227 0339 0340

408(T73)	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AM6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0009 0155 0222 0223 0224 0225 0226 0227
408(T73)	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AT6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0009 0155 0222 0223 0224 0225 0226 0227
408(T73)	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	CFC300P gearbox	✓	✓	✓	✓	✓	0198 0341 0342 0343 0344 0345 0346 0347 0348 0349 0350 0351 0352 0353 0354
408(T73)	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AL4 gearbox	✓	✓	✓	✓	✓	0002 0009 0017
408(T73)	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	
408(T73)	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
408(T73)	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	○	○	0155
408(T73)	Vehicle protection / Management of accesses	Anti-theft alarm	ALARME	✓	✓	✓	✓	✓	0096 0137 0138
408(T73)	Vehicle protection / Management of accesses	Anti-theft alarm	ALARME_LIN	✓	✓	✓	✓	○	
408(T73)	Vehicle protection / Management of accesses		Driver's door module	✓	✓	✓	✓	✓	
408(T73)	Vehicle protection / Management of accesses		Sun roof	✓	✓	✓	✓	✓	0274
408(T73)	Active and passive safety	ABS or ESP ECU	ABS 8.1	✓	✓	✓	✓	✓	0009 0010
408(T73)	Active and passive safety	ABS or ESP ECU	ESP 8.1	✓	✓	✓	✓	✓	0003 0010 0275
408(T73)	Active and passive safety		Air bags and pre-tensioners control unit	✓	✓	✓	✓	○	0034 0035 0276 0277 0278 0279
408(T73)	Visibility / Lighting / Signalling		Rain and light sensor	✓	✓	✓	○	○	
408(T73)	Visibility / Lighting / Signalling		Dynamic headlamp height adjuster	✓	✓	✓	✓	✓	
408(T73)	Visibility / Lighting / Signalling		Driving school module	✓	✓	✓	○	✓	
408(T73)	Diesel additive pump		Pompe mux MGI	✓	✓	✓	✓	✓	0009 0156 0355
408(T73)	Diesel additive pump		Pompe mux TI	✓	✓	✓	✓	✓	0009
408(T73)	Engine relay unit			✓	✓	✓	✓	✓	

408(T73)	Trailer relay unit			✓	✓	✓	✓	○	
408(T73)	high frequency receiver			✓	✓	✓	✓	○	
408(T93)	Built-in Systems Interface			✓	✓	✓	○	○	0157
408(T93)	Engine management ECU		VD46	✓	✓	✓	✓	○	
408(T93)	Engine management ECU		V46_32	✓	✓	✓	✓	○	
408(T93)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
408(T93)	Engine management ECU		V46_52	✓	✓	✓	✓	○	
408(T93)	Engine management ECU		CMM_DCM71	✓	✓	✓	✓	○	
408(T93)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○	
408(T93)	Engine management ECU		CMM_VD56	✓	✓	✓	✓	○	
408(T93)	Engine management ECU		CMM_MG1CS042	✓	✓	✓	✓	○	
408(T93)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	0003 0275 0357 0358
408(T93)	Automatic or piloted manual gearbox		DCT_6DCT200	✓	✓	✓	✓	○	
408(T93)	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○	
408(T93)	Engine relay unit			✓	✓	✓	✓	○	
408(T93)	Multifunction screen		EMF_C_UDS	✓	✓	✓	✓	○	
408(T93)	Dynamic headlamp height adjuster			✓	✓	✓	✓	○	
408(T93)	Supply protection and management unit			✓	✓	✓	✓	○	
408(T93)	power steering			✓	✓	✓	✓	○	
408(T93)	Electronic key reader			✓	✓	✓	✓	○	
408(T93)	Electric steering lock			✓	✓	✓	✓	○	
408(T93)	Air conditioning			✓	✓	✓	✓	○	
408(T93)	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	○	
408(T93)	Touch screen		EMF_DGT_UDS	✓	✓	✓	✓	○	
408(T93)	Rain and light sensor			✓	✓	✓	✓	○	
408(T93)	Seat driver position memory module.			✓	✓	✓	✓	○	

408(T93)	Battery charge status unit			✓	✓	✓	✓	○	
408(T93)	Hands-free control unit			✓	✓	✓	✓	○	
408(T93)	Service module / Independent telematic		BTA_CN	✓	✓	✓	✓	○	
408(T93)	Multiplexed control panel			✓	✓	✓	✓	○	
408(T93)	Control of the telematic unit			✓	✓	✓	✓	○	
408(T93)	Radio		RD45	✓	✓	✓	✓	○	
408(T93)	Instrument panel			✓	✓	✓	✓	○	
408(T93)	Control panel dot matrix display		MATT_C_2010	✓	✓	✓	○	○	
408(T93)	Voltage retaining device		DMTR	✓	✓	✓	○	○	
408(T93)	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○	
408(T93)	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	○	
408(T93)	Anti-theft alarm			✓	✓	✓	✓	○	
408(T93)	Parking assistance			✓	✓	✓	✓	○	
508	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓	0018 0091 0157
508	Engine management ECU	DCM3.5_BR2	RHH-DW10CTED4-163CV	✓	✓	✓	✓	✓	0042 0134 0136 0142 0143 0144 0145 0146 0147 0150 0151 0170 0171 0172 0173 0174 0181 0243 0247 0252 0253 0254 0255 0256 0258 0259 0260 0261 0316 0318 0319 0320 0324 0326 0327 0328 0331 0374
508	Engine management ECU	DCM3.4_P	DCM3.4_P RHR	✓	✓	✓	✓	✓	0042 0066 0067 0068 0134 0136 0147 0151 0170 0171 0172 0173 0174 0181 0232 0243 0247 0252 0253 0254 0255 0256 0257 0258 0259 0261 0318 0323 0374 0375 0376 0377
508	Engine management ECU	HDI_SID807_BR2	9HL - DV6CTED	✓	✓	✓	✓	✓	0064 0066 0067 0068 0134 0136 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0181 0250 0253 0254 0255 0256 0258 0316 0318 0319 0320 0321 0322 0323 0324 0325 0326 0327 0328

508	Engine management ECU	MED17_4_2	5FV MED 17.4.2 Euro 5	✓	✓	✓	✓	✓	0002 0014 0042 0054 0123 0124 0126 0127 0128 0129 0131 0132 0176 0179 0181 0305 0311 0312
508	Engine management ECU	MEV17_4_2 EP6C	5FS MEV17.4.2 Euro 5	✓	✓	✓	✓	✓	0002 0009 0014 0054 0124 0126 0127 0128 0129 0131 0132 0135 0179 0181 0270 0305 0308 0310 0311 0312
508	Engine management ECU		EDC17CP42	✓	✓	✓	✓	✓	0042 0066 0067 0134 0148 0151 0170 0171 0172 0173 0174 0181 0243 0245 0248 0252 0316 0317 0319 0327 0328 0330 0331 0332 0333 0336 0366 0378 0379 0380 0381 0382 0383 0384 0385 0386
508	Engine management ECU	MM6KP	MM6KP RFJ	✓	✓	✓	✓	✓	0002 0014 0042 0053 0054 0055 0060 0125 0178 0229 0230 0231 0232
508	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	0152
508	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
508	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS81	✓	✓	✓	✓	✓	0003 0010 0042
508	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		81 ESP	✓	✓	✓	✓	✓	0003 0010 0042 0275 0357 0358 0387 0388
508	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	0009 0155 0222 0223 0224 0225 0226 0227
508	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓	0198 0341 0342 0343 0344 0345 0346 0347 0348 0349 0350 0351 0352 0353 0354
508	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○	0155
508	Power steering			✓	✓	✓	✓	✓	
508	Under-inflation detection		DSG	✓	✓	✓	✓	○	0075 0076 0077 0084 0085 0086 0087 0088 0389 0390 0391 0392 0393
508	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○	
508	Active damper electronic unit			✓	✓	✓	✓	✓	0009 0394 0395 0396

508	Trailer relay unit			✓	✓	✓	✓	✓	
508	Battery charge status unit			✓	✓	✓	✓	○	
508	Electric secondary brake			✓	✓	✓	✓	✓	0397 0398 0399
508	Engine relay unit			✓	✓	✓	✓	✓	0400
508	Air bags and pre-tensioners control unit		RBG_UDS	✓	✓	✓	✓	○	0034 0035 0276 0277 0279 0401 0402
508	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓	0009 0280
508	Parking assistance			✓	✓	✓	✓	○	0009 0071
508	Anti-theft alarm			✓	✓	✓	✓	✓	0096 0137 0138 0403
508	Instrument panel			✓	✓	✓	✓	✓	
508	Multifunction screen		EMF_A_UDS	✓	✓	✓	○	✓	0404
508	Multifunction screen		EMF_C_UDS	✓	✓	✓	○	✓	0095 0096 0404
508	Telematic unit (RTx) or audio-navigation		Data communication ECU RT6	✓	✓	✓	✓	✓	0005 0102 0105 0106 0108 0295 0296 0405
508	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	○	
508	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓	
508	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓	0005
508	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	✓	0009
508	Control panel dot matrix display	Monochrome matrix screen	MATT_M_2010	✓	✓	✓	○	✓	0009
508	Radio		RD5 radio	✓	✓	✓	✓	✓	0005 0031 0098
508	Hands-free control unit			✓	✓	✓	✓	✓	0042 0406 0407 0408 0409 0410 0411 0412 0413 0414
508	Telematic navigator / Separate control			✓	○	○	✓	✓	
508	Radio amplifier			✓	✓	✓	○	✓	0042
508	Controls under the steering wheel			✓	✓	✓	✓	✓	0003
508	seat belt not fastened warning lights unit			✓	○	○	○	✓	
508	Supply protection and management unit			✓	✓	✓	✓	○	

508	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	✓	
508	Rain and light sensor		Rain and brightness sensor (CDPL)	✓	✓	✓	✓	○	0415
508	Air conditioning		RF	✓	✓	✓	✓	✓	0416
508	Rear air conditioning			✓	○	○	✓	✓	
508	Motorised Boot ECU			✓	✓	✓	✓	✓	0417 0418 0419 0420 0421 0422 0423
508	Seat driver position memory module.			✓	✓	✓	✓	✓	0285 0286 0289 0290 0424
508	Voltage retaining device		DMTC	✓	○	○	○	○	
508	Voltage retaining device		DMTR	✓	✓	✓	○	○	
508	Electronic key reader			✓	✓	✓	✓	○	
508	Electric steering lock			✓	✓	✓	✓	✓	0425
508	High Head Vision		VTH_UDS	✓	✓	✓	✓	✓	0009
508	Main beams assistant ECU			✓	✓	✓	✓	✓	0009
508	Left hand front wiper motor.		Windscreen wiper (left-hand side)	✓	✓	✓	✓	✓	
508	Right hand front wiper motor.		Windscreen wiper (right-hand side)	✓	✓	✓	✓	✓	
508	Additional heating			✓	✓	✓	✓	✓	0364 0426 0427
508	Multiplexed control panel		RD5 audio system and manual air conditioning	✓	✓	✓	✓	✓	
508	Driver's door module			✓	✓	✓	✓	✓	
508	external CD player		CDE	✓	✓	✓	✓	○	
508Hybrid	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓	0018 0091 0157
508Hybrid	Engine management ECU	MM6KP	MM6KP RFJ	✓	✓	✓	✓	✓	0002 0014 0042 0053 0054 0055 0060 0125 0178 0229 0230 0231 0232
508Hybrid	Engine management ECU		EDC16C3	✓	✓	✓	✓	✓	0042 0068 0134 0136 0142 0143 0144 0145 0146 0147 0150 0151 0170 0171 0172 0173 0174 0181 0243 0247 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0316 0318 0319 0320 0324 0325 0326 0327

508Hybrid	Engine management ECU		DCM35_HY	✓	✓	✓	✓	✓	0066 0136
508Hybrid	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		81 ESP	✓	✓	✓	✓	✓	0003 0010 0042 0275 0357 0358 0387 0388
508Hybrid	Automatic gearbox or controlled manual gearbox		CFC300P_HY	✓	✓	✓	✓	✓	0198 0199 0341 0354 0428 0429 0430 0431 0432 0433 0434 0435 0436 0437 0438 0439 0440 0441 0442
508Hybrid	Air bags and pre-tensioners control unit		RBG_UDS	✓	✓	✓	✓	○	0034 0035 0276 0277 0279 0401 0402
508Hybrid	Hybrid control ECU 1			✓	✓	✓	✓	✓	0443 0444 0445 0446 0447
508Hybrid	Hybrid control ECU 2			✓	✓	✓	✓	○	0447
508Hybrid	Traction battery ECU			✓	✓	✓	✓	✓	0427 0447
508Hybrid	Hybrid mode selector			✓	✓	○	✓	✓	
508Hybrid	Electric secondary brake			✓	✓	✓	✓	✓	0397 0398 0399
508Hybrid	Battery charge status unit			✓	✓	✓	✓	○	
508Hybrid	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓	0009 0280
508Hybrid	Additional heating			✓	✓	✓	✓	✓	0364 0426 0427
508Hybrid	Engine relay unit			✓	✓	✓	✓	✓	0400
508Hybrid	Trailer relay unit			✓	✓	✓	✓	✓	
508Hybrid	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	✓	
508Hybrid	Multifunction screen		EMF_A_UDS	✓	✓	✓	○	✓	0404
508Hybrid	Multifunction screen		EMF_C_UDS	✓	✓	✓	○	✓	0095 0096 0404
508Hybrid	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓	0005
508Hybrid	Power steering			✓	✓	✓	✓	✓	
508Hybrid	Anti-theft alarm		Alarm with anti-lift module	✓	✓	✓	✓	✓	0096 0137 0138 0403
508Hybrid	Electronic key reader			✓	✓	✓	✓	○	
508Hybrid	Seat driver position memory module.			✓	✓	✓	✓	✓	0285 0286 0289 0290 0424
508Hybrid	Parking assistance			✓	✓	✓	✓	○	0009 0071
508Hybrid	Telematic unit (RTx) or audio-navigation		Data communication ECU RT6	✓	✓	✓	✓	✓	0005 0102 0105 0106 0108 0295 0296 0405
508Hybrid	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	○	

508Hybrid	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓	
508Hybrid	Multiplexed control panel		RD5 audio system and manual air conditioning	✓	✓	✓	✓	✓	
508Hybrid	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	✓	0009
508Hybrid	Control panel dot matrix display	Monochrome matrix screen	MATT_M_2010	✓	✓	✓	○	✓	0009
508Hybrid	Radio		RD5 radio	✓	✓	✓	✓	✓	0005 0031 0098
508Hybrid	Hands-free control unit			✓	✓	✓	✓	✓	0042 0406 0407 0408 0409 0410 0411 0412 0413 0414
508Hybrid	Telematic navigator / Separate control			✓	○	○	✓	✓	
508Hybrid	Radio amplifier			✓	✓	✓	○	✓	0042
508Hybrid	seat belt not fastened warning lights unit			✓	○	○	○	✓	
508Hybrid	Rain and light sensor		Rain and brightness sensor (CDPL)	✓	✓	✓	✓	○	0415
508Hybrid	Air conditioning		RF	✓	✓	✓	✓	✓	0416
508Hybrid	Rear air conditioning			✓	○	○	✓	✓	
508Hybrid	Supply protection and management unit			✓	✓	✓	✓	○	
508Hybrid	Left hand front wiper motor.		Windscreen wiper (left-hand side)	✓	✓	✓	✓	✓	
508Hybrid	Right hand front wiper motor.		Windscreen wiper (right-hand side)	✓	✓	✓	✓	✓	
508Hybrid	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	✓	
508Hybrid	Main beams assistant ECU			✓	✓	✓	✓	✓	0009
508Hybrid	High Head Vision		VTH_UDS	✓	✓	✓	✓	✓	0009
508Hybrid	Driver's door module			✓	✓	✓	✓	✓	
508Hybrid	Controls under the steering wheel			✓	✓	✓	✓	✓	0003
508Hybrid	Electric steering lock			✓	✓	✓	✓	✓	0425
508Hybrid	Under-inflation detection		DSG	✓	✓	✓	✓	○	0075 0076 0077 0084 0085 0086 0087 0088 0389 0390 0391 0392 0393

508Hybrid	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○	
508RXH	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓	0018 0091 0157
508RXH	Engine management ECU	MM6KP	MM6KP RFJ	✓	✓	✓	✓	✓	0002 0014 0042 0053 0054 0055 0060 0125 0178 0229 0230 0231 0232
508RXH	Engine management ECU		EDC16C3	✓	✓	✓	✓	✓	0042 0068 0134 0136 0142 0143 0144 0145 0146 0147 0150 0151 0170 0171 0172 0173 0174 0181 0243 0247 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0316 0318 0319 0320 0324 0325 0326 0374
508RXH	Engine management ECU		DCM35_HY	✓	✓	✓	✓	✓	0066 0136
508RXH	Engine management ECU		DCM62	✓	✓	✓	✓	○	0152
508RXH	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓	0003 0010 0042 0275 0357 0358 0387 0388
508RXH	Automatic gearbox or controlled manual gearbox		CFC300P_HY	✓	✓	✓	✓	✓	0198 0199 0341 0354 0428 0429 0430 0431 0432 0433 0434 0435 0436 0437 0438 0439 0440 0441 0442
508RXH	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○	0155
508RXH	Power steering			✓	✓	✓	✓	✓	
508RXH	Hybrid control ECU 1			✓	✓	✓	✓	✓	0443 0444 0445 0446 0447
508RXH	Hybrid control ECU 2			✓	✓	✓	✓	○	0447
508RXH	Traction battery ECU			✓	✓	✓	✓	✓	0427 0447
508RXH	Hybrid mode selector			✓	✓	○	✓	✓	
508RXH	Electric secondary brake			✓	✓	✓	✓	✓	0397 0398 0399
508RXH	Battery charge status unit			✓	✓	✓	✓	○	
508RXH	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓	0009 0280
508RXH	Additional heating			✓	✓	✓	✓	✓	0364 0426 0427
508RXH	Engine relay unit			✓	✓	✓	✓	✓	0400
508RXH	Trailer relay unit			✓	✓	✓	✓	✓	
508RXH	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	✓	

508RXH	Multifunction screen		EMF_A	✓	✓	✓	○	✓	0404
508RXH	Multifunction screen		EMF_C	✓	✓	✓	○	✓	0095 0096 0404
508RXH	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓	0005
508RXH	Air bags and pre- tensioners control unit		RBG_UDS	✓	✓	✓	✓	○	0034 0035 0276 0277 0279 0401 0402
508RXH	Anti-theft alarm		Alarm with anti-lift module	✓	✓	✓	✓	✓	0096 0137 0138 0403
508RXH	Electronic key reader			✓	✓	✓	✓	○	
508RXH	Seat driver position memory module.			✓	✓	✓	✓	✓	0285 0286 0289 0290 0424
508RXH	Parking assistance			✓	✓	✓	✓	○	0009 0071
508RXH	Telematic unit (RTx) or audio-navigation		Data communication ECU RT6	✓	✓	✓	✓	✓	0005 0102 0105 0106 0108 0295 0296 0405
508RXH	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	○	
508RXH	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓	
508RXH	Multiplexed control panel		RD5 audio system and manual air conditioning	✓	✓	✓	✓	✓	
508RXH	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	✓	0009
508RXH	Control panel dot matrix display	Monochrome matrix screen	MATT_M_2010	✓	✓	✓	○	✓	0009
508RXH	Radio		RD5 radio	✓	✓	✓	✓	✓	0005 0031 0098
508RXH	Hands-free control unit			✓	✓	✓	✓	✓	0042 0406 0407 0408 0409 0410 0411 0412 0413 0414
508RXH	Telematic navigator / Separate control			✓	○	○	✓	✓	
508RXH	Radio amplifier			✓	✓	✓	○	✓	0042
508RXH	seat belt not fastened warning lights unit			✓	○	○	○	✓	
508RXH	Rain and light sensor		Rain and brightness sensor (CDPL)	✓	✓	✓	✓	○	0415
508RXH	Air conditioning		RF	✓	✓	✓	✓	✓	0416
508RXH	Rear air conditioning			✓	○	○	✓	✓	
508RXH	Supply protection and management unit			✓	✓	✓	✓	○	
508RXH	Left hand front wiper motor.		Windscreen wiper (left- hand side)	✓	✓	✓	✓	✓	

508RXH	Right hand front wiper motor.		Windscreen wiper (right-hand side)	✓	✓	✓	✓	✓	
508RXH	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	✓	
508RXH	Main beams assistant ECU			✓	✓	✓	✓	✓	0009
508RXH	High Head Vision		VTH_UDS	✓	✓	✓	✓	✓	0009
508RXH	Driver's door module			✓	✓	✓	✓	✓	
508RXH	Controls under the steering wheel			✓	✓	✓	✓	✓	0003
508RXH	Electric steering lock			✓	✓	✓	✓	✓	0425
508RXH	Motorised Boot ECU			✓	✓	✓	✓	✓	0417 0418 0419 0420 0421 0422 0423
508RXH	external CD player			✓	✓	✓	✓	○	
508RXH	Voltage retaining device		DMTR	✓	✓	✓	○	○	
508 RXH HYbrid4	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓	0018 0091 0157
508 RXH HYbrid4	Engine management ECU	MM6KP	MM6KP RFJ	✓	✓	✓	✓	✓	0002 0014 0042 0053 0054 0055 0060 0125 0178 0229 0230 0231 0232
508 RXH HYbrid4	Engine management ECU		EDC16C3	✓	✓	✓	✓	✓	0042 0068 0134 0136 0142 0143 0144 0145 0146 0147 0150 0151 0170 0171 0172 0173 0174 0181 0243 0247 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0316 0318 0319 0320 0324 0325 0326 0374
508 RXH HYbrid4	Engine management ECU		DCM35_HY	✓	✓	✓	✓	✓	0066 0136
508 RXH HYbrid4	Automatic gearbox/Pro-active manual gearbox display		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	0009 0155 0222 0223 0224 0225 0226 0227
508 RXH HYbrid4	Automatic gearbox/Pro-active manual gearbox display		CFC300P_HY	✓	✓	✓	✓	✓	0198 0199 0341 0354 0428 0429 0430 0431 0432 0433 0434 0435 0436 0437 0438 0439 0440 0441 0442
508 RXH HYbrid4	Automatic gearbox/Pro-active manual gearbox display		CFC300P	✓	✓	✓	✓	✓	0198 0341 0342 0343 0344 0345 0346 0347 0348 0349 0350 0351 0352 0353 0354
508 RXH HYbrid4	Power steering			✓	✓	✓	✓	✓	
508 RXH HYbrid4	Under-inflation detection		DSG	✓	✓	✓	✓	○	0075 0076 0077 0084 0085 0086 0087 0088 0389 0390 0391 0392 0393

508 RXH HYbrid4	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○	
508 RXH HYbrid4	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○	
508 RXH HYbrid4	Electric secondary brake			✓	✓	✓	✓	✓	0397 0398 0399
508 RXH HYbrid4	Additional heating			✓	✓	✓	✓	✓	0364 0426 0427
508 RXH HYbrid4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS81	✓	✓	✓	✓	○	
508 RXH HYbrid4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP81	✓	✓	✓	✓	○	0003 0275
508 RXH HYbrid4	Engine relay unit			✓	✓	✓	✓	✓	0400
508 RXH HYbrid4	Trailer relay unit			✓	✓	✓	✓	✓	
508 RXH HYbrid4	Air bags and pre-tensioners control unit		RBG_UDS	✓	✓	✓	✓	○	0034 0035 0276 0277 0279 0401 0402
508 RXH HYbrid4	Anti-theft alarm			✓	✓	✓	✓	✓	0096 0137 0138 0403
508 RXH HYbrid4	Multifunction screen		EMF_C	✓	✓	✓	○	✓	0095 0096 0404
508 RXH HYbrid4	Multifunction screen		EMF_A_UDS	✓	✓	✓	○	○	
508 RXH HYbrid4	Multiplexed control panel		RD5 audio system and manual air conditioning	✓	✓	✓	✓	✓	
508 RXH HYbrid4	Control panel dot matrix display	Colour matrix screen	MATT_C_2010	✓	✓	✓	○	✓	0009
508 RXH HYbrid4	Control panel dot matrix display	Monochrome matrix screen	MATT_M_2010	✓	✓	✓	○	✓	0009
508 RXH HYbrid4	Radio		RD5 radio	✓	✓	✓	✓	✓	0005 0031 0098
508 RXH HYbrid4	Hands-free control unit			✓	✓	✓	✓	✓	0042 0406 0407 0408 0409 0410 0411 0412 0413 0414
508 RXH HYbrid4	Telematic navigator / Separate control			✓	○	○	✓	✓	
508 RXH HYbrid4	Radio amplifier		AMPLI_AUDIO	✓	✓	✓	○	✓	0042
508 RXH HYbrid4	Controls under the steering wheel			✓	✓	✓	✓	✓	0003
508 RXH HYbrid4	seat belt not fastened warning lights unit			✓	○	○	○	✓	
508 RXH HYbrid4	Supply protection and management unit			✓	✓	✓	✓	○	

508 RXH HYbrid4	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	✓	
508 RXH HYbrid4	Rain and light sensor		Rain and brightness sensor (CDPL)	✓	✓	✓	✓	○	0415
508 RXH HYbrid4	Air conditioning		RF	✓	✓	✓	✓	✓	0416
508 RXH HYbrid4	Rear air conditioning			✓	○	○	✓	✓	
508 RXH HYbrid4	Motorised Boot ECU			✓	✓	✓	✓	✓	0417 0418 0419 0420 0421 0422 0423
508 RXH HYbrid4	Seat driver position memory module.			✓	✓	✓	✓	✓	0285 0286 0289 0290 0424
508 RXH HYbrid4	Driver's door module			✓	✓	✓	✓	✓	
508 RXH HYbrid4	Electronic key reader			✓	✓	✓	✓	○	
508 RXH HYbrid4	High Head Vision		VTH_UDS	✓	✓	✓	✓	✓	0009
508 RXH HYbrid4	Main beams assistant ECU			✓	✓	✓	✓	✓	0009
508 RXH HYbrid4	Left hand front wiper motor.		Windscreen wiper (left-hand side)	✓	✓	✓	✓	✓	
508 RXH HYbrid4	Right hand front wiper motor.		Windscreen wiper (right-hand side)	✓	✓	✓	✓	✓	
508 RXH HYbrid4	Electric steering lock			✓	✓	✓	✓	✓	0425
508 RXH HYbrid4	Hybrid control ECU 1			✓	✓	✓	✓	✓	0443 0444 0445 0446 0447
508 RXH HYbrid4	Hybrid control ECU 2			✓	✓	✓	✓	○	0447
508 RXH HYbrid4	Traction battery ECU			✓	✓	✓	✓	✓	0427 0447
508 RXH HYbrid4	Hybrid mode selector			✓	✓	○	✓	✓	
508 RXH HYbrid4	Instrument panel			✓	✓	✓	✓	✓	
508 RXH HYbrid4	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓	0005
508 RXH HYbrid4	Dynamic headlamp height adjuster		BEMP	✓	✓	✓	✓	○	
508 RXH HYbrid4	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	○	
508 RXH HYbrid4	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	✓	
508 RXH HYbrid4	external CD player			✓	✓	✓	✓	○	
508L (R8)	Built-in systems interface			✓	✓	✓	✓	○	
508L (R8)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
508L (R8)	Engine management ECU		CMM_DCM71	✓	✓	✓	✓	○	

508L (R8)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○	
508L (R8)	Engine management ECU		CMM_MG1CS042	✓	✓	✓	✓	○	
508L (R8)	Diesel additive pump			✓	✓	✓	✓	○	
508L (R8)	Voltage maintaining device		DMTC	✓	✓	✓	○	○	
508L (R8)	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○	
508L (R8)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	○	
508L (R8)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	○	
508L (R8)	Sequential gear lever			✓	✓	✓	✓	○	
508L (R8)	Power steering			✓	✓	✓	✓	○	
508L (R8)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	
508L (R8)	Variable damping ECU			✓	✓	✓	✓	○	
508L (R8)	Dynamic headlamp height adjuster			✓	✓	✓	✓	○	
508L (R8)	Trailer relay unit			✓	✓	✓	✓	○	
508L (R8)	Battery charge status control unit			✓	✓	✓	✓	○	
508L (R8)	Electric steering lock			✓	✓	✓	✓	○	
508L (R8)	Instrument panel			✓	✓	✓	✓	○	
508L (R8)	Controls under the steering wheel			✓	✓	✓	✓	○	
508L (R8)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
508L (R8)	Automatic gearbox electric control ECU			✓	✓	✓	✓	○	
508L (R8)	Multifunction control panel			✓	✓	✓	✓	○	
508L (R8)	Airbags and pretensioners ECU			✓	✓	✓	✓	○	
508L (R8)	Seat belt not fastened warning lights unit			✓	○	○	○	○	
508L (R8)	Windscreen wiper			✓	✓	✓	✓	○	
508L (R8)	Rain and brightness sensor			✓	✓	✓	✓	○	

508L (R8)	Panoramic visual assistance ECU			✓	✓	✓	✓	○	
508L (R8)	Multifunction video camera (CMF)			✓	✓	✓	✓	○	
508L (R8)	Vehicle Distance Assistance			✓	✓	✓	✓	○	
508L (R8)	Night vision ECU			✓	✓	✓	✓	○	
508L (R8)	Parking assistance			✓	✓	✓	✓	○	
508L (R8)	Touch screen			✓	✓	✓	✓	○	
508L (R8)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	○	
508L (R8)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	○	
508L (R8)	Service module / Independent telematic		BTA_3R	✓	✓	✓	✓	○	
508L (R8)	Audio amplifier			✓	✓	✓	○	○	
508L (R8)	Anti-theft alarm			✓	✓	✓	✓	○	
508L (R8)	Intrusion alarm siren			✓	✓	✓	✓	○	
508L (R8)	Driver's door module		PDPC_UDS	✓	✓	✓	✓	○	
508L (R8)	Motorised Boot Unit			✓	✓	✓	✓	○	
508L (R8)	Hands full access ECU, right-hand side or rear			✓	✓	✓	○	○	
508L (R8)	Sunroof		TO	✓	✓	✓	✓	○	
508L (R8)	Air conditioning			✓	✓	✓	✓	○	
508L (R8)	Rear air conditioning ECU			✓	✓	✓	✓	○	
508L (R8)	Additional heating			✓	✓	✓	✓	○	
508L (R8)	Front left seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	○	
508L (R8)	Front right seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	○	
508L (R8)	Driver's seat comfort ECU			✓	✓	✓	✓	○	
508L (R8)	Driver's seat pneumatic functions ECU			✓	✓	✓	✓	○	
508L (R8)	Passenger's seat pneumatic functions ECU			✓	✓	✓	✓	○	

508L (R83)	Built-in systems interface			✓	✓	✓	✓	○	
508L (R83)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
508L (R83)	Engine management ECU		CMM_MG1CS042	✓	✓	✓	✓	○	
508L (R83)	Voltage maintaining device		DMTC	✓	✓	✓	○	○	
508L (R83)	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○	
508L (R83)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	○	
508L (R83)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	○	
508L (R83)	Sequential gear lever			✓	✓	✓	✓	○	
508L (R83)	Power steering			✓	✓	✓	✓	○	
508L (R83)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	
508L (R83)	UNDER-INFLATION DETECTION			✓	✓	✓	✓	○	
508L (R83)	Variable damping ECU			✓	✓	✓	✓	○	
508L (R83)	Dynamic headlamp height adjuster			✓	✓	✓	✓	○	
508L (R83)	Battery charge status control unit			✓	✓	✓	✓	○	
508L (R83)	Electric steering lock			✓	✓	✓	✓	○	
508L (R83)	Instrument panel			✓	✓	✓	✓	○	
508L (R83)	Controls under the steering wheel			✓	✓	✓	✓	○	
508L (R83)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
508L (R83)	Automatic gearbox electric control ECU			✓	✓	✓	✓	○	
508L (R83)	Multifunction control panel			✓	✓	✓	✓	○	
508L (R83)	Airbags and pretensioners ECU			✓	✓	✓	✓	○	
508L (R83)	Windscreen wiper			✓	✓	✓	✓	○	
508L (R83)	Rain and brightness sensor			✓	✓	✓	✓	○	

508L (R83)	Multifunction video camera (CMF)			✓	✓	✓	✓	○	
508L (R83)	Vehicle Distance Assistance			✓	✓	✓	✓	○	
508L (R83)	Night vision ECU			✓	✓	✓	✓	○	
508L (R83)	Parking assistance			✓	✓	✓	✓	○	
508L (R83)	Touch screen			✓	✓	✓	✓	○	
508L (R83)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	○	
508L (R83)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	○	
508L (R83)	Service module / Independent telematic		BTA_CN	✓	✓	✓	✓	○	
508L (R83)	Audio amplifier			✓	✓	✓	○	○	
508L (R83)	Driver's door module		PDPC	✓	✓	✓	✓	○	
508L (R83)	Hands full access ECU, right-hand side or rear			✓	✓	✓	○	○	
508L (R83)	Sunroof		0_DTC	✓	✓	✓	✓	○	
508L (R83)	Air conditioning			✓	✓	✓	✓	○	
508L (R83)	Rear air conditioning control panel			✓	○	○	✓	○	
508L (R83)	Front left seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	○	
508L (R83)	Front right seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	○	
508L (R83)	Driver's seat comfort ECU			✓	✓	✓	✓	○	
508L (R83)	Driver's seat pneumatic functions ECU			✓	✓	✓	✓	○	
607	Built-in systems interface			✓	✓	✓	✓	○	
607	Driver information/communication		Multifunction screen	✓	✓	✓	✓	✓	
607	Driver information/communication		Parking assistance	✓	✓	✓	✓	✓	
607	Driver information/communication		Radio	✓	✓	✓	✓	✓	
607	Driver information/communication		CD player	✓	✓	✓	✓	✓	

607	Driver information/communicati		Instrument panel	✓	✓	✓	✓	○	
607	Driver information/communicati		Carphone	✓	✓	✓	✓	○	
607	Driver information/communicati		Hands-free Kit / Portable Unit	✓	✓	✓	✓	✓	
607	Driver information/communicati		On-board navigation system	✓	✓	✓	✓	○	
607	Visibility /lighting		Dynamic headlamp height adjuster	✓	✓	✓	✓	✓	
607	Air bags and pre-tensioners control unit			✓	✓	✓	○	○	
607	Control the openings		Motorised Boot ECU	✓	✓	✓	✓	✓	
607	Control the openings		Driver's door module	✓	✓	✓	✓	○	
607	Control the openings		Passenger's door control panel	✓	✓	✓	✓	✓	
607	Air conditioning			✓	✓	✓	✓	✓	
607	Active safety		ABS BOSCH 5.3	✓	✓	✓	✓	○	0010
607	Active safety		ESP BOSCH 5.3	✓	✓	✓	✓	✓	0359 0448
607	Active safety		Electronically managed suspension	✓	✓	✓	✓	✓	
607	Engines/ automatic gearbox	MM4MP2	3FZ MM4MP2	✓	✓	✓	✓	✓	0212
607	Engines/ automatic gearbox	MM48P	RFN MM48P (mechanical throttle housing)	✓	✓	✓	✓	✓	0002 0011
607	Engines/ automatic gearbox	ME746	XFX BOSCH ME7.4.6	✓	✓	✓	✓	✓	0002
607	Engines/ automatic gearbox	EDC15C2	4HX BOSCH EDC15C2	✓	✓	✓	✓	✓	
607	Engines/ automatic gearbox		Diesel fuel additive control unit	✓	✓	✓	✓	✓	
607	Engines/ automatic gearbox		4HP20 gearbox	✓	✓	✓	✓	✓	
607	Storing of the driving position			✓	✓	✓	✓	✓	
607 R	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	✓	
607 R	Driving assistance / Comfort		Seat driver position memory module.	✓	✓	✓	✓	✓	0285 0286 0287 0288 0289 0290
607 R	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	

607 R	Driving assistance / Comfort		Under inflation detection	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088
607 R	Driving assistance / Comfort	Power steering	Power steeringGEP	✓	✓	✓	✓	○	
607 R	Driving assistance / Comfort	Piloted suspension	SuspensionCSS	✓	✓	✓	✓	✓	
607 R	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0092 0093 0094
607 R	Inform the driver / Audio / Communication	Multifunction screen	EMF_A	✓	✓	✓	✓	✓	
607 R	Inform the driver / Audio / Communication	Multifunction screen	EMF_C	✓	✓	✓	✓	✓	
607 R	Inform the driver / Audio / Communication		Radio	✓	✓	✓	✓	✓	
607 R	Inform the driver / Audio / Communication		CD player	✓	✓	✓	○	✓	
607 R	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0099
607 R	Inform the driver / Audio / Communication		Hands-free Kit / Portable Unit	✓	✓	✓	✓	✓	
607 R	Inform the driver / Audio / Communication		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓	
607 R	Engine / Gearbox	Gearbox ECU	AM6 automatic gearbox	✓	✓	✓	✓	✓	0221 0222
607 R	Engine / Gearbox	Gearbox ECU	4HP20 automatic gearbox	✓	✓	✓	✓	✓	0002
607 R	Engine / Gearbox	ME747	XFV ME747	✓	✓	✓	✓	✓	
607 R	Engine / Gearbox	MM6LP	3FZ MM6LP	✓	✓	✓	✓	✓	0002
607 R	Engine / Gearbox	MM6LPB	3FY MM6LPB	✓	✓	✓	✓	✓	
607 R	Engine / Gearbox	EDC15C2	4HX BOSCH EDC15C2	✓	✓	✓	✓	✓	
607 R	Engine / Gearbox	EDC16CP39	4HP BOSCH EDC16CP39	✓	✓	✓	✓	✓	0042 0066 0067 0136 0151 0243 0367 0368 0369 0370
607 R	Engine / Gearbox	SID201	UHZ SIEMENS SID201	✓	✓	✓	✓	✓	0371 0372
607 R	Engine / Gearbox	HDI_SID803	RHR SIEMENS SID 803	✓	✓	✓	✓	✓	0066 0067 0214
607 R	Engine / Gearbox	Diesel	HDI_SID803A	✓	✓	✓	✓	✓	0066 0067
607 R	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	
607 R	Vehicle protection / Management of accesses	Motorised Boot ECU	Motorised Boot ECUBCM	✓	✓	✓	✓	✓	0449

607 R	Vehicle protection / Management of accesses		Driver's door module	✓	✓	✓	✓	✓	
607 R	Vehicle protection / Management of accesses		Passenger door module	✓	✓	✓	✓	✓	
607 R	Active and passive safety	ABS or ESP ECU	ESP_BOSCH8	✓	✓	✓	✓	✓	0010 0036
607 R	Active and passive safety	Air bags and pre- tensioners control unit	SAC_GONFLABLE	✓	✓	✓	✓	○	
607 R	Active and passive safety	Air bags and pre- tensioners control unit	SAC_AUTOLIV	✓	✓	✓	✓	○	
607 R	Visibility / Lighting / Signalling	Rain/sunlight sensor	CDPL	✓	✓	✓	○	○	
607 R	Visibility / Lighting / Signalling	Rain/sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓	○	○	
607 R	Visibility / Lighting / Signalling		Automatic headlamps corrector	✓	✓	✓	✓	✓	0356
607 R	Visibility / Lighting / Signalling	Controls under the steering wheel	COM2003	✓	✓	✓	✓	✓	
607 R	Visibility / Lighting / Signalling	Controls under the steering wheel	HDC	✓	✓	✓	✓	✓	
607 R	Diesel fuel additive control unit			✓	✓	✓	✓	✓	0039 0281 0282 0283
607 R	Engine relay unit			✓	✓	✓	✓	✓	
607 R	Trailer relay unit			✓	✓	✓	✓	✓	
806	Air bags and pre- tensioners control unit		Air bag and seat belt	○	✓	✓	○	○	
806	Air conditioning		WEBASTO additional heating	✓	✓	✓	✓	✓	0364
806	Active safety		BOSCH ABS5.3	✓	✓	✓	✓	✓	0010
806	Engines/ automatic gearbox	MM48P	RFN MM4. 8P	✓	✓	✓	✓	✓	0002 0011
806	Engines/ automatic gearbox	MP7.3	RFV BOSCH MP7.3	✓	✓	✓	✓	✓	0001
806	Engines/ automatic gearbox	MP3.2T	RGX BOSCH MP3.2	✓	✓	✓	✓	✓	
806	Engines/ automatic gearbox	VP20	DHX BOSCH VP20	✓	✓	✓	✓	○	
806	Engines/ automatic gearbox	EPIC	P8C LUCAS EPIC	○	✓	✓	✓	○	
806	Engines/ automatic gearbox	EDC15C2	RHW BOSCH EDC15C2	○	✓	✓	✓	✓	
806	Engines/ automatic gearbox		AL4 autoadaptive automatic gearbox	✓	✓	✓	✓	✓	0002

807 VAN	Built-in systems interface			✓	✓	✓	✓	✓	0021 0450 0451 0452 0453
807 VAN	Anti-theft alarm			✓	✓	✓	○	✓	
807 VAN	Driver information/communication	Display / Telematics	AMF	✓	✓	✓	✓	✓	
807 VAN	Driver information/communication	Display / Telematics	RT3	✓	✓	✓	✓	✓	
807 VAN	Driver information/communication		Radio/telematic receiver control	✓	✓	✓	✓	✓	
807 VAN	Driver information/communication		Parking assistance	✓	✓	✓	✓	✓	
807 VAN	Driver information/communication		Odometer and warning lamps electronic unit	✓	✓	✓	✓	✓	
807 VAN	Driver information/communication		Instrument panel	✓	✓	✓	✓	✓	
807 VAN	Driver information/communication		CD player	✓	✓	✓	✓	✓	
807 VAN	Driver information/communication		Switching module below steering wheel (COM 2000)	✓	✓	✓	✓	○	
807 VAN	Visibility /lighting		Right headlamp beam corrector	✓	✓	✓	✓	✓	
807 VAN	Visibility /lighting		Left headlamp beam level corrector	✓	✓	✓	✓	✓	
807 VAN	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○	
807 VAN	Control the openings		Driver's door module	✓	✓	✓	✓	○	
807 VAN	Control the openings		Passenger door module	✓	✓	✓	✓	○	
807 VAN	Control the openings		The side sliding door	✓	✓	✓	✓	✓	
807 VAN	Control the openings		Front sunroof	✓	✓	✓	✓	✓	
807 VAN	Control the openings		Rear sunroof	✓	✓	✓	✓	✓	
807 VAN	Control the openings		Middle sunroof	✓	✓	✓	✓	✓	
807 VAN	Active safety		ABR BOSCH 5.7	✓	✓	✓	✓	✓	
807 VAN	Active safety		ESP BOSCH 5.7	○	✓	✓	○	✓	0009 0010 0036 0037
807 VAN	Air conditioning		WEBASTO additional heating	✓	✓	✓	✓	✓	0364
807 VAN	Air conditioning		Climate control	✓	✓	✓	✓	✓	
807 VAN	Engines/ automatic gearbox	MM48P	RFN MM48P (mechanical throttle housing)	✓	✓	✓	✓	✓	0002 0011
807 VAN	Engines/ automatic gearbox	MM4MP2	3FZ MM4MP2	✓	✓	✓	✓	✓	0212

807 VAN	Engines/ automatic gearbox	MM6LP	3FZ MM6LP	✓	✓	✓	✓	✓	0212
807 VAN	Engines/ automatic gearbox	ME746	XFW BOSCH ME746	✓	✓	✓	✓	✓	0002
807 VAN	Engines/ automatic gearbox	EDC15C2	RHW BOSCH EDC15C2	✓	✓	✓	✓	✓	
807 VAN	Engines/ automatic gearbox		Diesel fuel additive control unit: ADDITIF_FAP	✓	✓	✓	✓	✓	
807 VAN	Engines/ automatic gearbox		Diesel fuel additive control unit: ADDG02	✓	✓	✓	✓	✓	
807 VAN	Engines/ automatic gearbox	Automatic gearbox	4HP Automatic gearbox	✓	✓	✓	✓	✓	
807 VAN	Engines/ automatic gearbox	Automatic gearbox	AL4 automatic gearbox	✓	✓	✓	✓	✓	0002
807 VAN	Storing of the driving position			✓	✓	✓	✓	✓	
807 CAN	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	✓	
807 CAN	Driving assistance / Comfort		Additional heating	✓	✓	✓	✓	✓	0364
807 CAN	Driving assistance / Comfort		Seat driver position memory module.	✓	✓	✓	✓	✓	
807 CAN	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	
807 CAN	Driving assistance / Comfort		Under inflation detection	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088
807 CAN	Driving assistance / Comfort	Power steering	Power steeringGEP	✓	✓	✓	✓	○	
807 CAN	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091
807 CAN	Inform the driver / Audio / Communication	Multifunction screen	EMF_A	✓	✓	✓	✓	✓	
807 CAN	Inform the driver / Audio / Communication	Multifunction screen	EMF_C	✓	✓	✓	✓	✓	
807 CAN	Inform the driver / Audio / Communication	Radio	RD4	✓	✓	✓	✓	✓	
807 CAN	Inform the driver / Audio / Communication	Radio	RD45	✓	✓	✓	✓	✓	
807 CAN	Inform the driver / Audio / Communication		Warning lights/odometer unit	✓	✓	✓	✓	✓	

807 CAN	Inform the driver / Audio / Communication		CD player	✓	✓	✓	○	✓	
807 CAN	Inform the driver / Audio / Communication		Control of the telematic unit	✓	○	○	✓	○	
807 CAN	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0099
807 CAN	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	
807 CAN	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	
807 CAN	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	
807 CAN	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓	
807 CAN	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓	✓	✓	
807 CAN	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓	✓	✓	
807 CAN	Engine / Gearbox	BVA_AL4	AL4 automatic gearbox	✓	✓	✓	✓	✓	0002
807 CAN	Engine / Gearbox	Gearbox ECU	BVA_AM6C	✓	✓	✓	✓	✓	0221 0222
807 CAN	Engine / Gearbox	Gearbox ECU	AM6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0222
807 CAN	Engine / Gearbox	Gearbox ECU	BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	
807 CAN	Engine / Gearbox	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓	0212
807 CAN	Engine / Gearbox	EDC15C2	4HW BOSCH EDC15C2	○	✓	✓	✓	✓	
807 CAN	Engine / Gearbox	HDI_SID803	RHR SIEMENS SID 803	✓	✓	✓	✓	✓	0009 0066 0067 0214
807 CAN	Engine / Gearbox	EDC16CP39	4HP EDC16CP39	✓	✓	✓	✓	✓	0066 0067 0136 0151 0243 0367 0368 0369 0370
807 CAN	Engine / Gearbox	DCM3.5	RHH DCM3.5	✓	✓	✓	✓	✓	0066 0067 0068 0136 0151 0243
807 CAN	Engine / Gearbox	Diesel	HDI_SID803A	✓	✓	✓	✓	✓	0066 0067
807 CAN	Engine / Gearbox	Diesel	DCM35_BR2	✓	✓	✓	✓	✓	0136 0150
807 CAN	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	
807 CAN	Vehicle protection / Management of accesses		Sliding side doors module	✓	✓	✓	✓	✓	
807 CAN	Vehicle protection / Management of accesses		Driver's door module	✓	✓	✓	✓	✓	
807 CAN	Vehicle protection / Management of accesses		Passenger door module	✓	✓	✓	✓	✓	

807 CAN	Vehicle protection / Management of accesses		Front sunroof	✓	✓	✓	✓	✓	
807 CAN	Vehicle protection / Management of accesses		Rear sunroof	✓	✓	✓	✓	✓	
807 CAN	Vehicle protection / Management of accesses		Middle sunroof	✓	✓	✓	✓	✓	
807 CAN	Active and passive safety	ABS or ESP ECU	ESP_BOSCH8	✓	✓	✓	✓	✓	0010 0036
807 CAN	Active and passive safety	ABS or ESP ECU	ESP 8.1	✓	✓	✓	✓	✓	0003 0010 0275
807 CAN	Active and passive safety	Air bags and pre- tensioners control unit	SAC_GONFLABLE	✓	✓	✓	✓	○	
807 CAN	Active and passive safety	Air bags and pre- tensioners control unit	SAC_AUTOLIV	✓	✓	✓	✓	○	
807 CAN	Visibility / Lighting / Signalling	Rain/sunlight sensor	CDPL	✓	✓	✓	○	○	
807 CAN	Visibility / Lighting / Signalling	Rain/sunlight sensor	PLUIE_LUMINOSITE	✓	✓	✓	○	○	
807 CAN	Diesel fuel additive control unit			✓	✓	✓	✓	✓	0039 0281 0282 0283
807 CAN	Trailer relay unit			✓	✓	✓	✓	✓	
807 CAN	Engine relay unit			✓	✓	✓	✓	✓	
1007 VAN	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	✓	
1007 VAN	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	
1007 VAN	Driving assistance / Comfort	Power steering	Power steeringDAE	✓	✓	✓	✓	○	
1007 VAN	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091
1007 VAN	Inform the driver / Audio / Communication	Display / Telematics	Telematics RT3	✓	✓	✓	✓	✓	
1007 VAN	Inform the driver / Audio / Communication	Display / Telematics	Multifunction displayEMF	✓	✓	✓	✓	✓	
1007 VAN	Inform the driver / Audio / Communication		Radio	✓	✓	✓	✓	✓	
1007 VAN	Inform the driver / Audio / Communication		CD player	✓	✓	✓	✓	✓	
1007 VAN	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	
1007 VAN	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	○	
1007 VAN	Engine / Gearbox		Gearbox ECU	✓	✓	✓	✓	✓	0119 0120 0121 0122

1007 VAN	Engine / Gearbox	ME744	NFU ME744	✓	✓	✓	✓	✓	
1007 VAN	Engine / Gearbox	ME745	N6A BOSCH ME7.4.5	✓	✓	✓	✓	✓	
1007 VAN	Engine / Gearbox	S2000PM2	KFV S2000PM2	✓	✓	✓	✓	✓	
1007 VAN	Engine / Gearbox	MM6LP	KFU MM6LP	✓	✓	✓	✓	✓	
1007 VAN	Engine / Gearbox	J34P	KFV J34P	✓	✓	✓	✓	✓	
1007 VAN	Engine / Gearbox	HDI_SID804	8HX SIEMENS SID 804	✓	✓	✓	✓	✓	
1007 VAN	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	○	✓	
1007 VAN	Vehicle protection / Management of accesses	Sliding side doors module	The side sliding door	✓	✓	✓	✓	✓	
1007 VAN	Active and passive safety	ABS or ESP ECU	ABS MK70	✓	✓	✓	✓	✓	0010
1007 VAN	Active and passive safety	ABS or ESP ECU	ESP MK60	✓	✓	✓	✓	✓	0010 0036 0037
1007 VAN	Active and passive safety		Air bags and pre- tensioners control unit	✓	✓	✓	✓	○	
1007 VAN	Visibility / Lighting / Signalling		Rain/sunlight sensor	✓	✓	✓	○	○	
1007 CAN	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	✓	
1007 CAN	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	
1007 CAN	Driving assistance / Comfort		Under inflation detection	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0088 0454 0455 0456 0457
1007 CAN	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	○	
1007 CAN	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091
1007 CAN	Inform the driver / Audio / Communication		Multifunction screen	✓	✓	✓	✓	✓	
1007 CAN	Inform the driver / Audio / Communication		Radio	✓	✓	✓	✓	✓	
1007 CAN	Inform the driver / Audio / Communication		CD player	✓	✓	✓	○	✓	
1007 CAN	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0099
1007 CAN	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	Hands-free Kit / Portable Unit	✓	✓	✓	✓	✓	
1007 CAN	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	

1007 CAN	Inform the driver / Audio / Communication		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓	
1007 CAN	Inform the driver / Audio / Communication		High frequency receiver	✓	✓	✓	✓	○	
1007 CAN	Engine / Gearbox		Gearbox ECU	✓	✓	✓	✓	✓	0118 0119 0120 0121 0122
1007 CAN	Engine / Gearbox	ME745	NFU BOSCH ME7.4.5	✓	✓	✓	✓	✓	
1007 CAN	Engine / Gearbox	J34P	KFV J34P	✓	✓	✓	✓	✓	
1007 CAN	Engine / Gearbox	MM6LPC	KFU MM6LPC	✓	✓	✓	✓	✓	0212
1007 CAN	Engine / Gearbox	SID806	8HX SID 806 DV4	✓	✓	✓	✓	✓	
1007 CAN	Engine / Gearbox	EDC16C3	9HZ BOSCH EDC16C3	✓	✓	✓	✓	✓	0066 0067 0234
1007 CAN	Engine / Gearbox		Multiplexed additive adding pump ECU	✓	✓	✓	✓	✓	
1007 CAN	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	
1007 CAN	Vehicle protection / Management of accesses		Motorised sliding side doors	✓	✓	✓	✓	✓	
1007 CAN	Active and passive safety	ABS or ESP ECU	ABS MK70.1	✓	✓	✓	✓	✓	0010
1007 CAN	Active and passive safety	ABS or ESP ECU	ESP MK60-0	✓	✓	✓	✓	✓	0010 0036 0037
1007 CAN	Active and passive safety		Air bags and pre-tensioners control unit	✓	✓	✓	✓	○	
1007 CAN	Visibility / Lighting / Signalling		Rain/sunlight sensor	✓	✓	✓	○	○	
2008	Built-in Systems Interface		BSI2010	✓	✓	✓	✓	✓	0018 0091 0157
2008	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	✓	0066 0136
2008	Engine management ECU		MEV17_4_2	✓	✓	✓	✓	✓	
2008	Engine management ECU		HDI_SID807_BR2	✓	✓	✓	✓	✓	0066 0136
2008	Engine management ECU		V46	✓	✓	✓	✓	✓	
2008	Engine management ECU		MED17_4_2	✓	✓	✓	✓	✓	
2008	Engine management ECU		MEVD17_4_2	✓	✓	✓	✓	✓	
2008	Engine management ECU		V344	✓	✓	✓	✓	✓	
2008	Engine management ECU		V345	✓	✓	✓	✓	✓	
2008	Engine management ECU		ME745_EC5	✓	✓	✓	✓	✓	
2008	Engine management ECU		VD46	✓	✓	✓	✓	○	
2008	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	0152
2008	Engine management ECU		MEVD17_4_4	✓	✓	✓	✓	○	

2008	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
2008	Engine management ECU		CMM_V56	✓	✓	✓	✓	○	
2008	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○	
2008	Engine management ECU		CMM_VD56	✓	✓	✓	✓	○	
2008	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK100	✓	✓	✓	✓	✓	
2008	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK100	✓	✓	✓	✓	✓	0003 0141
2008	Automatic gearbox or controlled manual gearbox		BVA_AL4	✓	✓	✓	✓	✓	
2008	Automatic gearbox or controlled manual gearbox		CFC300P	✓	✓	✓	✓	✓	
2008	Automatic gearbox or controlled manual gearbox		MAPS_UDS	✓	✓	✓	✓	✓	
2008	Automatic gearbox or controlled manual gearbox		BVMP	✓	✓	✓	✓	✓	
2008	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓	0155
2008	Telematic unit (RTx) or audio-navigation		SMEG	✓	✓	✓	✓	✓	
2008	Rain and light sensor		PLUIE_LUMINOSITE_UDS	✓	✓	✓	✓	○	
2008	Intrusion alarm siren		SIR	✓	✓	✓	✓	✓	
2008	Anti-theft alarm		MUS	✓	✓	✓	✓	✓	
2008	Audio amplifier		AMPLI_AUDIO	✓	✓	✓	○	✓	
2008	Air bags and pre-tensioners control unit		RBG_UDS	✓	✓	✓	✓	○	
2008	CD player		CDE	✓	✓	✓	✓	✓	
2008	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○	
2008	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	✓	
2008	Multiplexed control panel		FMUX	✓	✓	✓	○	✓	
2008	Trailer relay unit		BSG_2010_RQ	✓	✓	✓	✓	✓	

2008	Controls under the steering wheel		COM2008P	✓	✓	✓	✓	✓	
2008	Radio		RDE	✓	✓	✓	✓	✓	
2008	Electric power steering		DAE	✓	✓	✓	✓	✓	
2008	Controls on the steering wheel / Integral controls		VCI	✓	✓	✓	✓	○	
2008	Air conditioning		TDC_RFTA_MUX	✓	✓	✓	✓	✓	
2008	Parking assistance		AAS_UDS	✓	✓	✓	✓	○	
2008	Control panel dot matrix display		MATT_C_2010	✓	✓	✓	○	✓	
2008	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓	
2008	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	○	
2008	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓	
2008	Diesel additive pump		PADDGO_TI_E6	✓	✓	✓	✓	○	
2008	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○	
2008	Traction control mode selector			✓	✓	○	✓	○	
2008 (P24)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	○	0158 0159 0160 0161 0162 0163 0164 0165 0166 0167 0168 0169
2008 (P24)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	✓	
2008 (P24)	Sequential gear lever			✓	✓	✓	✓	✓	
2008 (P24)	Power steering			✓	✓	✓	✓	○	
2008 (P24)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESPMK100_UDS	✓	✓	✓	✓	✓	
2008 (P24)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABSMK100_UDS	✓	✓	✓	✓	✓	
2008 (P24)	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓	
2008 (P24)	Trailer relay unit			✓	✓	✓	✓	✓	
2008 (P24)	Battery charge status control unit			✓	✓	✓	✓	○	

2008 (P24)	Electric steering lock			✓	✓	✓	✓	✓	
2008 (P24)	Hands-free unit			✓	✓	✓	✓	✓	
2008 (P24)	Instrument panel			✓	✓	✓	✓	✓	
2008 (P24)	Controls under the steering wheel			✓	✓	✓	✓	✓	
2008 (P24)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
2008 (P24)	Multifunction control panel			✓	✓	✓	✓	✓	
2008 (P24)	Airbags and pretensioners ECU			✓	✓	✓	✓	○	
2008 (P24)	Seat belt not fastened warning lights unit			✓	○	○	○	✓	
2008 (P24)	Rain and brightness sensor			✓	✓	✓	✓	○	
2008 (P24)	Multifunction video camera (CMF)			✓	✓	✓	✓	✓	
2008 (P24)	Vehicle Distance Assistance			✓	✓	✓	✓	✓	
2008 (P24)	Parking assistance			✓	✓	✓	✓	✓	
2008 (P24)	Touch screen		EMF_DGT_UDS_GP	✓	✓	✓	✓	✓	
2008 (P24)	Touch screen		EMF_DGT_LVDS_BD	✓	✓	✓	✓	✓	
2008 (P24)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	✓	
2008 (P24)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	✓	
2008 (P24)	Telematic unit (RTx) or audio-navigation		RCE	✓	✓	✓	✓	○	
2008 (P24)	Telematic unit (RTx) or audio-navigation		AIO	✓	✓	✓	✓	○	
2008 (P24)	Service module / Independent telematic		BTA_3R	✓	✓	✓	✓	○	
2008 (P24)	Service module / Independent telematic		BTA_3S	✓	✓	✓	✓	✓	
2008 (P24)	Anti-theft alarm			✓	✓	✓	✓	○	
2008 (P24)	Air conditioning			✓	✓	✓	✓	✓	
2008 (P24)	Intrusion alarm siren			✓	✓	✓	✓	✓	
2008 (P24)	Driver's door module			✓	✓	✓	✓	✓	

2008 (P24)	Front left seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	✓	
2008 (P24)	Front right seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	✓	
2008 (P24)	Passenger compartment LEDs management ECU			✓	✓	✓	○	✓	
2008 (P24)	Built-in systems interface			✓	✓	✓	✓	○	
2008 (P24)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	✓	
2008 (P24)	Engine management ECU		V46_21	✓	✓	✓	✓	✓	
3008	Driving assistance / Comfort	High Head Vision	VTH	✓	✓	✓	✓	✓	
3008	Driving assistance / Comfort	High Head Vision	VTH_UDS	✓	✓	✓	✓	○	
3008	Driving assistance / Comfort		Vehicle Distance Assistance	✓	✓	✓	✓	○	0458
3008	Driving assistance / Comfort		Lane departure warning system	✓	✓	✓	✓	✓	
3008	Driving assistance / Comfort		Air conditioning ECU	✓	✓	✓	✓	✓	
3008	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	
3008	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	✓	
3008	Driving assistance / Comfort	Under inflation detection	DSG	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088
3008	Driving assistance / Comfort	Under inflation detection	DSG_UDS	✓	✓	✓	✓	○	
3008	Driving assistance / Comfort		Electric secondary brake	✓	✓	✓	✓	✓	0397 0398 0399
3008	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091
3008	Inform the driver / Audio / Communication		Audio amplifier	✓	✓	✓	○	✓	
3008	Inform the driver / Audio / Communication	Multifunction screen	Type 'A' (segments)	✓	✓	✓	✓	✓	
3008	Inform the driver / Audio / Communication	Multifunction screen	Type 'C' (dot matrix)	✓	✓	✓	✓	✓	
3008	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	

3008	Inform the driver / Audio / Communication		Hands-free Kit / Portable Unit	✓	✓	✓	✓	✓	
3008	Inform the driver / Audio / Communication	Radio	RD45	✓	✓	✓	✓	✓	
3008	Inform the driver / Audio / Communication	Radio	RD4	✓	✓	✓	✓	✓	
3008	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG radio navigation	✓	✓	✓	✓	✓	
3008	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	Radio-navigation NG4	✓	✓	✓	✓	○	
3008	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓	✓	○	
3008	Inform the driver / Audio / Communication	Service module / Independent telematic	MD_SERV	✓	✓	✓	✓	✓	
3008	Inform the driver / Audio / Communication	Service module / Independent telematic	BTA	✓	✓	✓	✓	✓	
3008	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	
3008	Inform the driver / Audio / Communication		Control panel dot matrix display	✓	✓	✓	✓	✓	
3008	Inform the driver / Audio / Communication	Battery charge status unit	BECB	✓	✓	✓	✓	○	
3008	Inform the driver / Audio / Communication	Battery charge status unit	BECB_GEN2	✓	✓	✓	✓	○	
3008	Inform the driver / Audio / Communication		CD player	✓	✓	✓	○	✓	
3008	Inform the driver / Audio / Communication		seat belt not fastened warning lights unit	✓	○	○	○	✓	
3008	Engine / Gearbox	MEV17.4	5FW MEV17.4	✓	✓	✓	✓	✓	0002
3008	Engine / Gearbox	MEV174	5FU MEV17.4	✓	✓	✓	✓	✓	0002
3008	Engine / Gearbox	MED17.4	5FX MED17.4	✓	✓	✓	✓	✓	
3008	Engine / Gearbox	MED174	5FV MED17.4	✓	✓	✓	✓	✓	0002
3008	Engine / Gearbox	MED17_4_2	5FV MED17.4.2 Euro5	✓	✓	✓	✓	✓	0002
3008	Engine / Gearbox	Petrol	MEV17_4_2	✓	✓	✓	✓	○	
3008	Engine / Gearbox	Petrol	MEV17_4_EURO4	✓	✓	✓	✓	○	
3008	Engine / Gearbox	Petrol	MED17_4_EURO4	✓	✓	✓	✓	○	
3008	Engine / Gearbox	Petrol	MEV17_4_EURO5	✓	✓	✓	✓	○	
3008	Engine / Gearbox	Petrol	MED17_4_EURO5	✓	✓	✓	✓	○	
3008	Engine / Gearbox	Petrol	EDC17C60	✓	✓	✓	✓	○	0152
3008	Engine / Gearbox	Petrol	MED17_4_4	✓	✓	✓	✓	○	

3008	Engine / Gearbox	Petrol	VD46	✓	✓	✓	✓	○	
3008	Engine / Gearbox	EDC16C3	9HZ EDC16C3	✓	✓	✓	✓	✓	0066 0067 0234
3008	Engine / Gearbox	DCM3.5	RHH DCM3.5	✓	✓	✓	✓	○	0066 0067 0068 0136 0151 0243
3008	Engine / Gearbox	HDI_SID807	9HL HDI SID807	✓	✓	✓	✓	✓	0066 0067 0068
3008	Engine / Gearbox	Diesel	HDI_SID807_BR2	✓	✓	✓	✓	○	0136 0150
3008	Engine / Gearbox	Diesel	DCM35_BR2	✓	✓	✓	✓	○	0136 0150
3008	Engine / Gearbox	Diesel	DCM62	✓	✓	✓	✓	○	0152
3008	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	CFC300P gearbox	✓	✓	✓	✓	✓	
3008	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AM6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0222
3008	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AT6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0222
3008	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	○	○	0155
3008	Vehicle protection / Management of accesses		Driver's door module	✓	✓	✓	✓	✓	
3008	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	
3008	Active and passive safety	Air bags and pre-tensioners control unit	SAC_AUTOLIV	✓	✓	✓	✓	○	
3008	Active and passive safety		8.1 ESP	✓	✓	✓	✓	✓	0003 0010 0275 0357 0358 0459
3008	Active and passive safety		Anti-slip mode selector	✓	○	○	✓	✓	
3008	Active and passive safety		Network isolation unit	✓	○	○	✓	○	
3008	Visibility / Lighting / Signalling		Rain and light sensor	✓	✓	✓	○	○	
3008	Visibility / Lighting / Signalling		Windscreen wiper	✓	✓	✓	✓	✓	
3008	Visibility / Lighting / Signalling		Dynamic headlamp height adjuster	✓	✓	✓	✓	✓	
3008	Diesel additive pump		PADDGO	✓	✓	✓	✓	✓	
3008	Diesel additive pump		Pompe mux TI	✓	✓	✓	✓	✓	
3008	Diesel additive pump		PADDGO_TI_E6	✓	✓	✓	✓	○	
3008	Trailer relay unit			✓	✓	✓	✓	○	

3008	Engine relay unit			✓	✓	✓	✓	○	
3008	Air bags and pre-tensioners control unit		SAC_BOSCH	✓	✓	✓	✓	○	
3008	Traction control mode selector			✓	✓	○	✓	○	
3008	Voltage retaining device		DMTR	✓	✓	✓	○	○	
3008	high frequency receiver			✓	✓	✓	✓	○	
3008 HYbrid4	Built-in systems interface			✓	✓	✓	✓	✓	0021 0091 0092 0093 0094
3008 HYbrid4	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP 8.1	✓	✓	✓	✓	✓	0003 0010 0275 0357 0358
3008 HYbrid4	Automatic gearbox or controlled manual gearbox		CFC300P_HY	✓	✓	✓	✓	✓	
3008 HYbrid4	Air bags and pre-tensioners control unit		SAC_BOSCH	✓	✓	✓	✓	○	
3008 HYbrid4	Air bags and pre-tensioners control unit		SAC_AUTOLIV	✓	✓	✓	✓	○	
3008 HYbrid4	Anti-theft alarm		Alarm without anti-lift module	✓	✓	✓	✓	✓	
3008 HYbrid4	Engine management ECU	DCM35_HY	RHC-DW10CTED4-163CV	✓	✓	✓	✓	✓	0066 0136
3008 HYbrid4	Radio		RD4	✓	✓	✓	✓	✓	
3008 HYbrid4	Radio		RD45	✓	✓	✓	✓	✓	
3008 HYbrid4	Battery charge status unit			✓	✓	✓	✓	○	
3008 HYbrid4	Parking assistance			✓	✓	✓	✓	○	
3008 HYbrid4	Multifunction screen		Type 'A' (segments) AVEC buttons	✓	✓	✓	✓	✓	
3008 HYbrid4	Multifunction screen		Type 'C' (dot matrix)	✓	✓	✓	✓	✓	
3008 HYbrid4	Engine relay unit			✓	✓	✓	✓	✓	
3008 HYbrid4	Trailer relay unit			✓	✓	✓	✓	✓	
3008 HYbrid4	CD player			✓	✓	✓	○	✓	
3008 HYbrid4	Air conditioning ECU			✓	✓	✓	✓	✓	
3008 HYbrid4	Instrument panel			✓	✓	✓	✓	✓	
3008 HYbrid4	Rain and light sensor			✓	✓	✓	○	○	
3008 HYbrid4	Power steering			✓	✓	✓	✓	✓	

3008 HYbrid4	Windscreen wiper			✓	✓	✓	○	✓	
3008 HYbrid4	Hybrid mode selector			✓	✓	○	✓	✓	
3008 HYbrid4	Electric secondary brake			✓	✓	✓	✓	✓	0397 0398 0399
3008 HYbrid4	Controls under the steering wheel			✓	✓	✓	✓	✓	
3008 HYbrid4	Audio amplifier			✓	✓	✓	○	✓	
3008 HYbrid4	Hands-free Kit / Portable Unit			✓	✓	✓	✓	✓	
3008 HYbrid4	Service module / Independent telematic		MD_SERV	✓	✓	✓	✓	✓	
3008 HYbrid4	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓	
3008 HYbrid4	Service module / Independent telematic		BLVV	✓	✓	✓	✓	✓	
3008 HYbrid4	Diesel additive pump			✓	✓	✓	✓	✓	
3008 HYbrid4	Driver's door module			✓	✓	✓	✓	✓	
3008 HYbrid4	Telematic unit (RTx) or audio-navigation		RADIONAV_NG4	✓	✓	✓	✓	✓	
3008 HYbrid4	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	✓	
3008 HYbrid4	High Head Vision			✓	✓	✓	✓	✓	
3008 HYbrid4	Traction battery ECU			✓	✓	✓	✓	✓	
3008 HYbrid4	Hybrid control ECU 2			✓	✓	✓	✓	○	
3008 HYbrid4	Hybrid control ECU 1			✓	✓	✓	✓	✓	
3008 HYbrid4	Control panel dot matrix display			✓	✓	✓	✓	✓	
3008 HYbrid4	Under-inflation detection		DSG	✓	✓	✓	✓	○	
3008 HYbrid4	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○	
3008 HYbrid4	High Head Vision		VTH_UDS	✓	✓	✓	✓	✓	
3008 Chine	Built-in systems interface			✓	✓	✓	✓	✓	0021 0091 0092 0093 0094
3008 Chine	Engine management ECU	DCM35_HY	RHC-DW10CTED4-163CV	✓	✓	✓	✓	✓	0066 0136
3008 Chine	Engine management ECU		EDC16C3	✓	✓	✓	✓	✓	0066 0067 0234
3008 Chine	Engine management ECU		MEV17_4_EURO4	✓	✓	✓	✓	✓	
3008 Chine	Engine management ECU		MED17_4_EURO4	✓	✓	✓	✓	✓	
3008 Chine	Engine management ECU		MEV17_4_EURO5	✓	✓	✓	✓	✓	

3008 Chine	Engine management ECU		MED17_4_EURO5	✓	✓	✓	✓	✓	
3008 Chine	Engine management ECU		DCM35	✓	✓	✓	✓	✓	0066 0067 0136
3008 Chine	Engine management ECU		HDI_SID807	✓	✓	✓	✓	✓	0136 0150
3008 Chine	Engine management ECU		HDI_SID807_BR2	✓	✓	✓	✓	✓	0136 0150
3008 Chine	Engine management ECU		MED17_4_2	✓	✓	✓	✓	✓	
3008 Chine	Engine management ECU		MM6KP	✓	✓	✓	✓	✓	
3008 Chine	Engine management ECU		MED17_4_4	✓	✓	✓	✓	✓	
3008 Chine	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90	✓	✓	✓	✓	✓	0003 0275 0357 0358
3008 Chine	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP81	✓	✓	✓	✓	✓	0003 0010 0275 0357 0358
3008 Chine	Power steering			✓	✓	✓	✓	✓	
3008 Chine	automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_EURO5	✓	✓	✓	✓	✓	
3008 Chine	automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	✓	
3008 Chine	Under-inflation detection		DSG	✓	✓	✓	✓	○	
3008 Chine	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○	
3008 Chine	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○	
3008 Chine	Electric secondary brake			✓	✓	✓	✓	✓	0397 0398 0399
3008 Chine	Engine relay unit			✓	✓	✓	✓	✓	
3008 Chine	Air bags and pre-tensioners control unit		SAC_AUTOLIV	✓	✓	✓	✓	○	
3008 Chine	Air conditioning ECU			✓	✓	✓	✓	✓	
3008 Chine	Controls under the steering wheel			✓	✓	✓	✓	✓	
3008 Chine	Multifunction screen		Type 'A' (segments) AVEC buttons	✓	✓	✓	✓	✓	
3008 Chine	Multifunction screen		Type 'C' (dot matrix)	✓	✓	✓	✓	✓	
3008 Chine	Instrument panel			✓	✓	✓	✓	✓	
3008 Chine	Parking assistance			✓	✓	✓	✓	○	

3008 Chine	Radio		RD45	✓	✓	✓	✓	✓	
3008 Chine	Radio		RD43	✓	✓	✓	✓	✓	
3008 Chine	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEGC	✓	✓	✓	✓	✓	
3008 Chine	Telematic unit (RTx) or audio-navigation		MRN	✓	✓	✓	✓	✓	
3008 Chine	Anti-theft alarm		Alarm without anti-lift module	✓	✓	✓	✓	✓	
3008 Chine	Traction control mode selector			✓	✓	○	✓	✓	
3008 Chine	Driver's door module			✓	✓	✓	✓	✓	
3008 Chine	Control panel dot matrix display			✓	✓	✓	✓	✓	
3008 Chine	Rain and light sensor			✓	✓	✓	○	○	
3008 Chine	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○	
3008 Chine	Windscreen wiper			✓	✓	✓	○	✓	
3008 Chine	High Head Vision		VTH	✓	✓	✓	✓	✓	
3008 Chine	High Head Vision		VTH_UDS	✓	✓	✓	✓	✓	
3008 (P84)	Built-in systems interface			✓	✓	✓	✓	○	
3008 (P84)	Engine management ECU		VD46	✓	✓	✓	✓	○	
3008 (P84)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
3008 (P84)	Engine management ECU		DCM62	✓	✓	✓	✓	○	
3008 (P84)	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	
3008 (P84)	Engine management ECU		CMM_DCM71	✓	✓	✓	✓	○	
3008 (P84)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○	
3008 (P84)	Engine management ECU		CMM_VD56	✓	✓	✓	✓	○	
3008 (P84)	Engine management ECU		CMM_MG1CS042	✓	✓	✓	✓	○	
3008 (P84)	Diesel additive pump			✓	✓	✓	✓	○	
3008 (P84)	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○	
3008 (P84)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	○	
3008 (P84)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	○	
3008 (P84)	Sequential gear lever			✓	✓	✓	✓	○	
3008 (P84)	Power steering			✓	✓	✓	✓	○	

3008 (P84)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	
3008 (P84)	Dynamic headlamp height adjuster			✓	✓	✓	✓	○	
3008 (P84)	Engine wiring housing			✓	✓	✓	✓	○	0460
3008 (P84)	Trailer relay unit			✓	✓	✓	✓	○	
3008 (P84)	Battery charge status control unit			✓	✓	✓	✓	○	
3008 (P84)	Supplies protection and management unit			✓	✓	✓	✓	○	
3008 (P84)	Electric steering lock			✓	✓	✓	✓	○	
3008 (P84)	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	○	
3008 (P84)	Controls under the steering wheel			✓	✓	✓	✓	○	
3008 (P84)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
3008 (P84)	Traction control mode selector			✓	✓	✓	✓	○	
3008 (P84)	Automatic gearbox electric control ECU			✓	✓	✓	✓	○	
3008 (P84)	Multifunction control panel			✓	✓	✓	✓	○	
3008 (P84)	Airbags and pretensioners ECU		RBG_SPEED_UDS	✓	✓	✓	✓	○	
3008 (P84)	Seat belt not fastened warning lights unit			✓	○	○	○	○	
3008 (P84)	Windscreen wiper			✓	✓	✓	✓	○	
3008 (P84)	Rain and brightness sensor			✓	✓	✓	✓	○	
3008 (P84)	Panoramic visual assistance ECU			✓	✓	✓	✓	○	
3008 (P84)	Multifunction video camera (CMF)			✓	✓	✓	✓	○	
3008 (P84)	Vehicle Distance Assistance			✓	✓	✓	✓	○	
3008 (P84)	Parking assistance			✓	✓	✓	✓	○	
3008 (P84)	Multifunction screen			✓	✓	✓	○	○	
3008 (P84)	Touch screen			✓	✓	✓	✓	○	

3008 (P84)	Audio- navigation/telematic unit/connected audio		NAC	✓	✓	✓	✓	○	
3008 (P84)	Audio- navigation/telematic unit/connected audio		RCC	✓	✓	✓	✓	○	
3008 (P84)	Radio			✓	✓	✓	✓	○	
3008 (P84)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	○	
3008 (P84)	Service module / Independent telematic		BTA_3S	✓	✓	✓	✓	○	
3008 (P84)	External CD player			✓	✓	✓	✓	○	
3008 (P84)	Audio amplifier			✓	✓	✓	○	○	
3008 (P84)	Anti-theft alarm			✓	✓	✓	✓	○	
3008 (P84)	Intrusion alarm siren			✓	✓	✓	✓	○	
3008 (P84)	Driver's door module		PDPC_UDS	✓	✓	✓	✓	○	
3008 (P84)	Motorised Boot Unit			✓	✓	✓	✓	○	
3008 (P84)	Hands full access ECU, right-hand side or rear			✓	✓	✓	○	○	
3008 (P84)	Air conditioning			✓	✓	✓	✓	○	
3008 (P84)	Rear air conditioning ECU			✓	✓	✓	✓	○	
3008 (P84)	Front left seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	○	
3008 (P84)	Front right seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	○	
3008 (P84)	Driver's seat comfort ECU			✓	✓	✓	✓	○	
3008 (P84)	Driver's seat pneumatic functions ECU			✓	✓	✓	✓	○	
3008 (P84)	Passenger's seat pneumatic functions ECU			✓	✓	✓	✓	○	
4007	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	
4007	Built-in systems interface			✓	✓	✓	✓	✓	
4007	Inform the driver / Audio / Communication		Radio	✓	✓	✓	✓	✓	

4007	Inform the driver / Audio / Communication		Navigation	✓	✓	✓	○	○	
4007	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0157 0461
4007	Inform the driver / Audio / Communication		Hands-free Kit / Portable Unit	✓	✓	✓	✓	✓	
4007	Engine/Automatic Gearbox/Transmission	Petrol	SFZ MIVEC	✓	✓	✓	✓	✓	
4007	Engine/Automatic Gearbox/Transmission	Petrol	AFZ 4B11 MIVEC EURO4	○	✓	✓	✓	✓	
4007	Engine/Automatic Gearbox/Transmission	Petrol	SFY 4B12 MIVEC EURO5	○	✓	✓	✓	✓	
4007	Engine/Automatic Gearbox/Transmission	Petrol	EDC16CP39_E5	✓	✓	✓	✓	○	
4007	Engine/Automatic Gearbox/Transmission	Diesel	4HN EDC16CP39	✓	✓	✓	✓	✓	0067 0136 0251 0369 0386 0462 0463 0464 0465 0466 0467
4007	Engine/Automatic Gearbox/Transmission	Diesel	4HK EDC16CP39 EURO5	○	✓	✓	✓	✓	0066 0067 0136 0251 0369 0386 0462 0463 0464 0466 0467
4007	Engine/Automatic Gearbox/Transmission	Automatic gearbox or controlled manual gearbox	CVT gearbox	✓	✓	✓	✓	○	
4007	Engine/Automatic Gearbox/Transmission	Automatic gearbox or controlled manual gearbox	DCT controlled gearbox	✓	✓	✓	✓	✓	
4007	Engine/Automatic Gearbox/Transmission		4x4 transmission	✓	✓	✓	✓	✓	
4007	Vehicle protection / Management of accesses	Engine immobiliser / Hands-free control unit	IMMOBILISEUR	✓	✓	✓	✓	○	
4007	Vehicle protection / Management of accesses	Engine immobiliser / Hands-free control unit	WCM	✓	✓	✓	✓	○	
4007	Vehicle protection / Management of accesses		Driver's door module	✓	✓	✓	✓	○	
4007	Vehicle protection / Management of accesses		Passenger's door control panel	✓	✓	✓	✓	○	
4007	Vehicle protection / Management of accesses		Rear LH door switch panel	✓	✓	✓	✓	○	
4007	Vehicle protection / Management of accesses		Rear RH door switch panel	✓	✓	✓	✓	○	
4007	Vehicle protection / Management of accesses		Sun roof	✓	✓	✓	✓	○	

4007	Active and passive safety		Air bags and pre-tensioners control unit	✓	✓	✓	✓	✓	
4007	Active and passive safety	ABS or ESP ECU	ABS	✓	✓	✓	✓	✓	0468 0469 0470
4007	Active and passive safety	ABS or ESP ECU	ESP	✓	✓	✓	✓	✓	0036 0471
4007	Active and passive safety		Steering wheel angle sensor	✓	✓	✓	○	○	0036
4007	Visibility / Lighting / Signalling		Static AFS	○	✓	✓	✓	○	
4007	Visibility / Lighting / Signalling	Rain and light sensor	CDPL	✓	✓	✓	✓	○	
4007	gear lever			✓	✓	✓	✓	○	
4007	Parking assistance			✓	✓	✓	✓	○	
4008	Built-in systems interface			✓	✓	✓	✓	✓	
4008	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS_4x4	✓	✓	✓	✓	✓	
4008	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP_4x4	✓	✓	✓	✓	✓	0036 0472
4008	Air bags and pre-tensioners control unit			✓	✓	✓	✓	✓	
4008	Engine management ECU	MIVEC	MIVEC SFZ	✓	✓	✓	✓	✓	
4008	Engine management ECU		CMM_4A92	✓	✓	✓	✓	✓	
4008	Engine management ECU	HDI_4N13	HDI_4N13	✓	✓	✓	✓	✓	0465
4008	Engine management ECU		HDI_SID807 J3J4	✓	✓	✓	✓	✓	0150
4008	Automatic gearbox or controlled manual gearbox	BV_CVT	MIVEC 2.0L EURO 2	✓	✓	✓	✓	○	
4008	Anti-theft alarm			✓	✓	✓	✓	✓	
4008	Power steering			✓	✓	✓	✓	○	
4008	Instrument panel		Control panel	✓	✓	✓	✓	✓	0157
4008	Starting authorisation ECU			✓	✓	✓	✓	✓	
4008	Radio or radiotelephone (radio part)			✓	✓	✓	✓	✓	
4008	Driver's door module			✓	✓	✓	✓	○	

4008	Rear final drive piloted clutch			✓	✓	✓	✓	✓	
4008	Dynamic headlamp height adjuster			✓	✓	✓	✓	✓	
4008	Locking and immobiliser control module		WCM	✓	✓	✓	✓	○	
4008	Locking and immobiliser control module		KOS	✓	✓	✓	✓	○	
4008	Calculateur stop and start			✓	✓	✓	✓	○	
4008	Steering wheel angle sensor			✓	✓	✓	○	○	0036
4008	Heating/ventilation			✓	✓	✓	✓	✓	
4008	Rain and brightness sensor			✓	✓	✓	✓	○	
4008	Parking assistance			✓	✓	✓	✓	○	
4008	Navigation assistance			✓	✓	✓	○	○	
4008	Power steering (vehicle recent)			✓	✓	✓	✓	○	
4008 (P84C)	Built-in systems interface			✓	✓	✓	✓	○	
4008 (P84C)	Engine management ECU		VD46	✓	✓	✓	✓	○	
4008 (P84C)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
4008 (P84C)	Engine management ECU		MED17_4_4_EP8	✓	✓	✓	✓	○	
4008 (P84C)	Engine management ECU		MEVD17_4_4	✓	✓	✓	✓	○	
4008 (P84C)	Engine management ECU		CMM_MG1CS042	✓	✓	✓	✓	○	
4008 (P84C)	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○	
4008 (P84C)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	○	
4008 (P84C)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	○	
4008 (P84C)	Sequential gear lever			✓	✓	✓	✓	○	
4008 (P84C)	Power steering			✓	✓	✓	✓	○	
4008 (P84C)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	
4008 (P84C)	Dynamic headlamp height adjuster			✓	✓	✓	✓	○	

4008 (P84C)	Battery charge status control unit			✓	✓	✓	✓	○	
4008 (P84C)	Electric steering lock			✓	✓	✓	✓	○	
4008 (P84C)	Instrument panel		CIROCCO	✓	✓	✓	✓	○	
4008 (P84C)	Instrument panel		COMBINE_UDS	✓	✓	✓	✓	○	
4008 (P84C)	Controls under the steering wheel			✓	✓	✓	✓	○	
4008 (P84C)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
4008 (P84C)	Traction control mode selector			✓	✓	✓	✓	○	
4008 (P84C)	Automatic gearbox electric control ECU			✓	✓	✓	✓	○	
4008 (P84C)	Multifunction control panel			✓	✓	✓	✓	○	
4008 (P84C)	Airbags and pretensioners ECU		RBG_UDS	✓	✓	✓	✓	○	
4008 (P84C)	Windscreen wiper			✓	✓	✓	✓	○	
4008 (P84C)	Rain and brightness sensor			✓	✓	✓	✓	○	
4008 (P84C)	Panoramic visual assistance ECU			✓	✓	✓	✓	○	
4008 (P84C)	Multifunction video camera (CMF)			✓	✓	✓	✓	○	
4008 (P84C)	Vehicle Distance Assistance			✓	✓	✓	✓	○	
4008 (P84C)	Parking assistance			✓	✓	✓	✓	○	
4008 (P84C)	Touch screen			✓	✓	✓	✓	○	
4008 (P84C)	Audio- navigation/telematic unit/connected audio		NAC	✓	✓	✓	✓	○	
4008 (P84C)	Audio- navigation/telematic unit/connected audio		RCC	✓	✓	✓	✓	○	
4008 (P84C)	Service module / Independent telematic		BTA_CN	✓	✓	✓	✓	○	
4008 (P84C)	Audio amplifier			✓	✓	✓	○	○	
4008 (P84C)	Driver's door module		PDPC_UDS	✓	✓	✓	✓	○	
4008 (P84C)	Driver's door module		PDPC	✓	✓	✓	✓	○	
4008 (P84C)	Motorised Boot Unit			✓	✓	✓	✓	○	

4008 (P84C)	Hands full access ECU, right-hand side or rear			✓	✓	✓	○	○	
4008 (P84C)	Air conditioning			✓	✓	✓	✓	○	
4008 (P84C)	Rear air conditioning ECU			✓	✓	✓	✓	○	
4008 (P84C)	Front left seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	○	
4008 (P84C)	Front right seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	○	
4008 (P84C)	Driver's seat comfort ECU			✓	✓	✓	✓	○	
4008 (P84C)	Driver's seat pneumatic functions ECU			✓	✓	✓	✓	○	
4008 (P84C)	Passenger's seat pneumatic functions ECU			✓	✓	✓	✓	○	
5008	Driving assistance / Comfort	High Head Vision	VTH	✓	✓	✓	✓	✓	
5008	Driving assistance / Comfort	High Head Vision	VTH_UDS	✓	✓	✓	✓	○	
5008	Driving assistance / Comfort		Vehicle Distance Assistance	✓	✓	✓	✓	○	0458
5008	Driving assistance / Comfort		Lane departure warning system	✓	✓	✓	✓	✓	
5008	Driving assistance / Comfort		Air conditioning ECU	✓	✓	✓	✓	✓	
5008	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	
5008	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	✓	
5008	Driving assistance / Comfort	Under inflation detection	DSG	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088
5008	Driving assistance / Comfort	Under inflation detection	DSG_UDS	✓	✓	✓	✓	○	
5008	Driving assistance / Comfort		Electric secondary brake	✓	✓	✓	✓	✓	0397 0398 0399
5008	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091
5008	Inform the driver / Audio / Communication		Audio amplifier	✓	✓	✓	○	✓	

5008	Inform the driver / Audio / Communication	Multifunction screen	Type 'A' (segments)	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication	Multifunction screen	Type 'C' (dot matrix)	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication		Hands-free Kit / Portable Unit	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication	Radio	RD45	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication	Radio	RD4	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG radio navigation	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	Radio-navigation NG4	✓	✓	✓	✓	○	
5008	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓	✓	○	
5008	Inform the driver / Audio / Communication	Service module / Independent telematic	MD_SERV	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication	Service module / Independent telematic	Service module / Independent telematic	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication	Service module / Independent telematic	BTA	✓	✓	✓	✓	○	
5008	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication		Control panel dot matrix display	✓	✓	✓	✓	✓	
5008	Inform the driver / Audio / Communication	Battery charge status unit	BECB	✓	✓	✓	✓	○	
5008	Inform the driver / Audio / Communication	Battery charge status unit	BECB_GEN2	✓	✓	✓	✓	○	
5008	Inform the driver / Audio / Communication		CD player	✓	✓	✓	○	✓	
5008	Inform the driver / Audio / Communication		seat belt not fastened warning lights unit	✓	○	○	○	✓	
5008	Engine / Gearbox	MEV17.4	5FW MEV17.4	✓	✓	✓	✓	✓	0002
5008	Engine / Gearbox	MEV174	5FS MEV17.4	✓	✓	✓	✓	✓	0002
5008	Engine / Gearbox	MED17.4	5FX MED17.4	✓	✓	✓	✓	✓	
5008	Engine / Gearbox	MED174	5FV MED17.4	✓	✓	✓	✓	✓	0002
5008	Engine / Gearbox	MED17_4_2	5FV MED17.4.2 Euro5	✓	✓	✓	✓	✓	0002
5008	Engine / Gearbox	Petrol	MEV17_4_2	✓	✓	✓	✓	○	

5008	Engine / Gearbox	Petrol	MEV17_4_EURO4	✓	✓	✓	✓	○	
5008	Engine / Gearbox	Petrol	MED17_4_EURO4	✓	✓	✓	✓	○	
5008	Engine / Gearbox	Petrol	MEV17_4_EURO5	✓	✓	✓	✓	○	
5008	Engine / Gearbox	Petrol	MED17_4_EURO5	✓	✓	✓	✓	○	
5008	Engine / Gearbox	Petrol	MED17_4_4	✓	✓	✓	✓	○	
5008	Engine / Gearbox	Petrol	VD46	✓	✓	✓	✓	○	
5008	Engine / Gearbox	EDC16C3	9HZ EDC16C3	✓	✓	✓	✓	✓	0066 0067 0234
5008	Engine / Gearbox	DCM3.5	RHH DCM3.5	✓	✓	✓	✓	○	0066 0067 0068 0136 0151 0243
5008	Engine / Gearbox	HDI_SID807	9HL HDI_SID807	✓	✓	✓	✓	✓	0066 0067 0068
5008	Engine / Gearbox	Diesel	DCM35_BR2	✓	✓	✓	✓	○	0136 0150
5008	Engine / Gearbox	Diesel	HDI_SID807_BR2	✓	✓	✓	✓	○	0136 0150
5008	Engine / Gearbox	Diesel	EDC17C60	✓	✓	✓	✓	○	0152
5008	Engine / Gearbox	Diesel	DCM62	✓	✓	✓	✓	○	0152
5008	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	CFC300P gearbox	✓	✓	✓	✓	✓	
5008	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AM6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0222
5008	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AT6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0222
5008	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	○	○	
5008	Vehicle protection / Management of accesses		Driver's door module	✓	✓	✓	✓	✓	
5008	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	
5008	Active and passive safety		Anti-slip mode selector	✓	○	○	✓	✓	
5008	Active and passive safety		Network isolation unit	✓	○	○	✓	○	
5008	Visibility / Lighting / Signalling		Rain and light sensor	✓	✓	✓	○	○	
5008	Visibility / Lighting / Signalling		Windscreen wiper	✓	✓	✓	✓	✓	
5008	Visibility / Lighting / Signalling		Dynamic headlamp height adjuster	✓	✓	✓	✓	✓	
5008	Diesel additive pump		Pompe mux MGI	✓	✓	✓	✓	✓	

5008	Diesel additive pump		Pompe mux TI	✓	✓	✓	✓	✓	
5008	Diesel additive pump		PADDGO_TI_E6	✓	✓	✓	✓	○	
5008	Trailer relay unit			✓	✓	✓	✓	○	
5008	Engine relay unit			✓	✓	✓	✓	○	
5008	Air bags and pre-tensioners control unit		SAC_BOSCH	✓	✓	✓	✓	○	
5008	Air bags and pre-tensioners control unit		SAC_AUTOLIV	✓	✓	✓	✓	○	
5008	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		8.1 ESP	✓	✓	✓	✓	✓	0003 0010 0275 0357 0358 0459
5008	Voltage retaining device		DMTR	✓	✓	✓	○	○	
5008	high frequency receiver			✓	✓	✓	✓	○	
5008 (P87)	Built-in systems interface			✓	✓	✓	✓	○	
5008 (P87)	Engine management ECU		VD46	✓	✓	✓	✓	○	
5008 (P87)	Engine management ECU		MED17_4_4	✓	✓	✓	✓	○	
5008 (P87)	Engine management ECU		DCM62	✓	✓	✓	✓	○	
5008 (P87)	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	
5008 (P87)	Engine management ECU		CMM_DCM71	✓	✓	✓	✓	○	
5008 (P87)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○	
5008 (P87)	Engine management ECU		CMM_VD56	✓	✓	✓	✓	○	
5008 (P87)	Engine management ECU		CMM_MG1CS042	✓	✓	✓	✓	○	
5008 (P87)	Diesel additive pump			✓	✓	✓	✓	○	
5008 (P87)	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○	
5008 (P87)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	○	
5008 (P87)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	○	
5008 (P87)	Sequential gear lever			✓	✓	✓	✓	○	
5008 (P87)	Power steering			✓	✓	✓	✓	○	
5008 (P87)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	

5008 (P87)	Dynamic headlamp height adjuster			✓	✓	✓	✓	○	
5008 (P87)	Engine wiring housing			✓	✓	✓	✓	○	0460
5008 (P87)	Trailer relay unit			✓	✓	✓	✓	○	
5008 (P87)	Battery charge status control unit			✓	✓	✓	✓	○	
5008 (P87)	Supplies protection and management unit			✓	✓	✓	✓	○	
5008 (P87)	Electric steering lock			✓	✓	✓	✓	○	
5008 (P87)	Instrument panel		CIROCCO	✓	✓	✓	✓	○	
5008 (P87)	Controls under the steering wheel			✓	✓	✓	✓	○	
5008 (P87)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
5008 (P87)	Traction control mode selector			✓	✓	✓	✓	○	
5008 (P87)	Automatic gearbox electric control ECU			✓	✓	✓	✓	○	
5008 (P87)	Multifunction control panel			✓	✓	✓	✓	○	
5008 (P87)	Airbags and pretensioners ECU		RBG_SPEED_UDS	✓	✓	✓	✓	○	
5008 (P87)	Airbags and pretensioners ECU		RBG_UDS	✓	✓	✓	✓	○	
5008 (P87)	Seat belt not fastened warning lights unit			✓	○	○	○	○	
5008 (P87)	Windscreen wiper			✓	✓	✓	✓	○	
5008 (P87)	Rain and brightness sensor			✓	✓	✓	✓	○	
5008 (P87)	Panoramic visual assistance ECU			✓	✓	✓	✓	○	
5008 (P87)	Multifunction video camera (CMF)			✓	✓	✓	✓	○	
5008 (P87)	Vehicle Distance Assistance			✓	✓	✓	✓	○	
5008 (P87)	Parking assistance			✓	✓	✓	✓	○	
5008 (P87)	Multifunction screen			✓	✓	✓	○	○	
5008 (P87)	Touch screen			✓	✓	✓	✓	○	
5008 (P87)	Audio-navigation/telematic unit/connected audio		NAC	✓	✓	✓	✓	○	

5008 (P87)	Audio- navigation/telematic unit/connected audio		RCC	✓	✓	✓	✓	○	
5008 (P87)	Radio			✓	✓	✓	✓	○	
5008 (P87)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	○	
5008 (P87)	Service module / Independent telematic		BTA_3S	✓	✓	✓	✓	○	
5008 (P87)	External CD player			✓	✓	✓	✓	○	
5008 (P87)	Audio amplifier			✓	✓	✓	○	○	
5008 (P87)	Anti-theft alarm			✓	✓	✓	✓	○	
5008 (P87)	Intrusion alarm siren			✓	✓	✓	✓	○	
5008 (P87)	Driver's door module		PDPC_UDS	✓	✓	✓	✓	○	
5008 (P87)	Motorised Boot Unit			✓	✓	✓	✓	○	
5008 (P87)	Hands full access ECU, right-hand side or rear			✓	✓	✓	○	○	
5008 (P87)	Air conditioning			✓	✓	✓	✓	○	
5008 (P87)	Rear air conditioning ECU			✓	✓	✓	✓	○	
5008 (P87)	Front left seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	○	
5008 (P87)	Front right seat heated pads and ventilation regulation ECU			✓	✓	✓	✓	○	
5008 (P87)	Driver's seat comfort ECU			✓	✓	✓	✓	○	
5008 (P87)	Driver's seat pneumatic functions ECU			✓	✓	✓	✓	○	
5008 (P87)	Passenger's seat pneumatic functions ECU			✓	✓	✓	✓	○	
BOXER	Air conditioning		WEBASTO additional heating	✓	✓	✓	✓	○	
BOXER	Engines/ automatic gearbox	MM48P	MM4. 8P 2L unleaded petrol	✓	✓	✓	✓	✓	0002 0011
BOXER	Engines/ automatic gearbox	EDC15C7	2.0L HDI Bosch EDC15C7	✓	✓	✓	✓	✓	
BOXER	Engines/ automatic gearbox	EDC16C39	TUB EDC16C39	○	✓	✓	○	✓	0473
BOXER	Engines/ automatic gearbox		4HP20 automatic gearbox	✓	○	○	✓	○	

BOXER	Active safety		BOSCH ABS5.3	○	✓	✓	○	○	
BOXER	Service module			○	✓	✓	✓	○	
BOXER 3	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	
BOXER 3	Driving assistance / Comfort		Additional heating	○	✓	✓	✓	✓	
BOXER 3	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	
BOXER 3	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	○	
BOXER 3	Driving assistance / Comfort		Pneumatic suspension	✓	✓	✓	✓	✓	
BOXER 3	Built-in systems interface			✓	✓	✓	✓	✓	0474 0475 0476 0477 0478 0479 0480
BOXER 3	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0481 0482 0483
BOXER 3	Inform the driver / Audio / Communication		Tachograph	✓	✓	✓	✓	✓	
BOXER 3	Inform the driver / Audio / Communication		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓	
BOXER 3	Engine / Gearbox	DCU102	4HU PUMA DCU102	✓	✓	✓	✓	✓	0473
BOXER 3	Engine / Gearbox	Engine management ECU	EDC17CP52	○	✓	✓	✓	✓	0233 0473 0484 0485
BOXER 3	Engine / Gearbox	Engine management ECU	EDC16C39	✓	✓	✓	✓	○	
BOXER 3	Active and passive safety	ABS or ESP ECU	ABS8.0	○	✓	✓	✓	✓	0010
BOXER 3	Active and passive safety	ABS or ESP ECU	ESP8.0	○	✓	✓	✓	✓	0010 0036 0275
BOXER 3	Active and passive safety	ABS or ESP ECU	ASR8.0	○	✓	✓	✓	✓	0486
BOXER 3	Active and passive safety	Air bags and pre-tensioners control unit	SAC_TRW	✓	✓	✓	✓	✓	
BOXER 3	Active and passive safety	Air bags and pre-tensioners control unit	SDM	✓	✓	✓	✓	○	
BOXER 3 Minibus	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	
BOXER 3 Minibus	Driving assistance / Comfort		Additional heating	○	✓	✓	✓	✓	
BOXER 3 Minibus	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	
BOXER 3 Minibus	Driving assistance / Comfort		Power steering	○	✓	✓	✓	○	

BOXER 3 Minibus	Driving assistance / Comfort		Pneumatic suspension	✓	✓	✓	✓	✓	
BOXER 3 Minibus	Built-in systems interface			✓	✓	✓	✓	✓	0474 0475 0476 0477 0478 0479 0480
BOXER 3 Minibus	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0482 0483
BOXER 3 Minibus	Inform the driver / Audio / Communication		Tachograph	✓	✓	✓	✓	○	
BOXER 3 Minibus	Inform the driver / Audio / Communication		Telematic unit (RTx) or audio-navigation	✓	✓	✓	✓	✓	
BOXER 3 Minibus	Engine / Gearbox	DCU102	4HU PUMA DCU102	○	✓	✓	✓	✓	0473
BOXER 3 Minibus	Engine / Gearbox	Engine management ECU	EDC17CP52	○	✓	✓	✓	✓	0233 0473 0484 0485
BOXER 3 Minibus	Engine / Gearbox	Engine management ECU	EDC16C39	✓	✓	✓	✓	○	
BOXER 3 Minibus	Active and passive safety	ABS or ESP ECU	ABS8.0	○	✓	✓	✓	✓	
BOXER 3 Minibus	Active and passive safety	ABS or ESP ECU	ESP8.0	○	✓	✓	✓	✓	0010 0036
BOXER 3 Minibus	Active and passive safety	ABS or ESP ECU	ASR8.0	○	✓	✓	✓	✓	0486
BOXER 3 Minibus	Active and passive safety	Air bags and pre-tensioners control unit	SAC_TRW	✓	✓	✓	✓	✓	
BOXER 3 Minibus	Active and passive safety	Air bags and pre-tensioners control unit	SDM	✓	✓	✓	✓	○	
BOXER 3 Euro 5-Euro 6	Built-in systems interface			✓	✓	✓	○	○	
BOXER 3 Euro 5-Euro 6	Engine management ECU		EDC17CP52_UDS	✓	✓	✓	✓	○	0066
BOXER 3 Euro 5-Euro 6	Engine management ECU		SID208	✓	✓	✓	✓	○	
BOXER 3 Euro 5-Euro 6	Engine management ECU	DCM62_F	DCM62_F AHM	✓	✓	✓	✓	○	0152
BOXER 3 Euro 5-Euro 6	Engine management ECU		CMM_DCM71_F	✓	✓	✓	✓	○	
BOXER 3 Euro 5-Euro 6	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90_F	✓	✓	✓	✓	○	0003 0487 0488
BOXER 3 Euro 5-Euro 6	Lane departure warning system			✓	✓	✓	✓	○	
BOXER 3 Euro 5-Euro 6	Trailer relay unit			✓	○	○	✓	○	
BOXER 3 Euro 5-Euro 6	Additional heating			✓	✓	✓	○	○	
BOXER 3 Euro 5-Euro 6	power steering		SSCU	✓	✓	✓	✓	○	
BOXER 3 Euro 5-Euro 6	audio/navigation LTM			✓	✓	✓	✓	○	
BOXER 3 Euro 5-Euro 6	Air conditioning			✓	✓	✓	✓	○	

BOXER 3 Euro 5-Euro 6	instrument panel			✓	✓	✓	✓	○	0483
BOXER 3 Euro 5-Euro 6	Parking assistance			✓	✓	✓	✓	○	
BOXER 3 Euro 5-Euro 6	air bags and pre-tensioners control unit		SDM	✓	✓	✓	✓	✓	
BOXER 3 Euro 5-Euro 6	tachograph			✓	✓	✓	✓	○	
BOXER 3 Euro 5-Euro 6	electronically managed suspension			✓	✓	✓	✓	○	
BOXER 3 Euro 5-Euro 6	Under-inflation detection			✓	✓	✓	✓	○	
BOXER 3 Euro 5-Euro 6	Radio			✓	✓	✓	✓	○	
BIPPER	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	
BIPPER	Built-in systems interface			✓	✓	✓	✓	✓	
BIPPER	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0482 0483
BIPPER	Engine / Gearbox	Petrol	KFV V34P	✓	✓	✓	✓	✓	0002
BIPPER	Engine / Gearbox	Petrol	KFV V34.2	✓	✓	✓	✓	✓	
BIPPER	Engine / Gearbox	Diesel	8HS EDC16C34	✓	✓	✓	✓	✓	
BIPPER	Engine / Gearbox	Diesel	HDI 8DF2	✓	✓	✓	✓	✓	0465
BIPPER	Engine / Gearbox	Diesel	HDI_8DF3	✓	✓	✓	✓	○	0489
BIPPER	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVMP	✓	✓	✓	✓	✓	
BIPPER	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	Controlled manual gearbox MTA	✓	✓	✓	✓	✓	
BIPPER	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ECUABS	✓	✓	✓	✓	✓	
BIPPER	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP 8.1	✓	✓	✓	✓	✓	0003 0275
BIPPER	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90_F	✓	✓	✓	✓	○	0003 0487 0488
BIPPER	Air bags and pre-tensioners control unit			✓	✓	✓	✓	✓	
BIPPER	Telematic unit (RTx) or audio-navigation		CTM	✓	✓	✓	✓	○	

EXPERT	Air bags and pre-tensioners control unit		Air bag and seat belt	✓	✓	✓	○	○	
EXPERT	Air conditioning		WEBASTO additional heating	✓	✓	✓	✓	✓	0364
EXPERT	Engines/ automatic gearbox	MM48P	R6F MM4. 8P	✓	✓	✓	✓	✓	0002 0011
EXPERT	Engines/ automatic gearbox	EDC15C2	RHW BOSCH EDC15C2	✓	✓	✓	✓	✓	
EXPERT	Engines/ automatic gearbox	Diesel	DCN2	✓	✓	✓	✓	✓	
EXPERT	Engines/ automatic gearbox		AL4 autoadaptive automatic gearbox	✓	✓	✓	✓	✓	0002
EXPERT	Active safety		BOSCH ABS5. 3	✓	✓	✓	✓	✓	0010
EXPERT 2	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	✓	
EXPERT 2	Driving assistance / Comfort		Additional heating	✓	✓	✓	✓	✓	0364
EXPERT 2	Driving assistance / Comfort	Air conditioning	Air conditioning / Front air conditioning	✓	✓	✓	✓	✓	
EXPERT 2	Driving assistance / Comfort	Air conditioning	Rear air conditioning	✓	✓	✓	✓	✓	
EXPERT 2	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	○	
EXPERT 2	Driving assistance / Comfort		Pneumatic suspension	✓	✓	✓	✓	○	
EXPERT 2	Built-in systems interface			✓	✓	✓	✓	✓	0021 0091
EXPERT 2	Inform the driver / Audio / Communication		Multifunction screen	✓	✓	✓	✓	✓	
EXPERT 2	Inform the driver / Audio / Communication		Radio	✓	✓	✓	✓	✓	
EXPERT 2	Inform the driver / Audio / Communication		CD player	✓	✓	✓	○	✓	
EXPERT 2	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	
EXPERT 2	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	
EXPERT 2	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	
EXPERT 2	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	
EXPERT 2	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	Data communication ECU	✓	✓	✓	✓	✓	

EXPERT 2	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG radio navigation	✓	✓	✓	✓	✓	
EXPERT 2	Engine / Gearbox	MM6KP	RFH MM6KP (EW10A)	✓	✓	✓	✓	✓	0002
EXPERT 2	Engine / Gearbox	EDC16C3	9HU BOSCH EDC16C3-EDC16C34	✓	✓	✓	✓	✓	0066 0067 0234
EXPERT 2	Engine / Gearbox	HDI_SID803	RHR SIEMENS SID 803	✓	✓	✓	✓	✓	0066 0067 0214
EXPERT 2	Engine / Gearbox	Diesel	DCM3.5	✓	✓	✓	✓	✓	0066 0067 0068 0136 0151 0243
EXPERT 2	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AM6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0222
EXPERT 2	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	
EXPERT 2	Active and passive safety	ABS or ESP ECU	ABS8_BOSCH	✓	✓	✓	✓	✓	0003 0010
EXPERT 2	Active and passive safety	ABS or ESP ECU	ESP_BOSCH8	✓	✓	✓	✓	✓	0003 0010
EXPERT 2	Active and passive safety	ABS or ESP ECU	ABS8.1	✓	✓	✓	✓	✓	0003 0010
EXPERT 2	Active and passive safety	ABS or ESP ECU	ESP8.1	✓	✓	✓	✓	✓	0010
EXPERT 2	Active and passive safety		Air bags and pre-tensioners control unit	✓	✓	✓	✓	○	
EXPERT 2	Visibility / Lighting / Signalling		Rain/sunlight sensor	✓	✓	✓	○	○	
EXPERT 3	Built-in Systems Interface (BSI)			✓	✓	✓	✓	✓	0021 0091
EXPERT 3	Injection/ignition	EDC16C3	EDC16C3 9HU	✓	✓	✓	✓	✓	0066 0067 0234
EXPERT 3	Injection/ignition	EDC17C10_BR2	9HM - DV6UC	✓	✓	✓	✓	✓	0066 0136
EXPERT 3	Injection/ignition	HDI_SID803	HDI_SID803A RHR	✓	✓	✓	✓	✓	0066 0067 0214
EXPERT 3	Injection/ignition	MM6KP	MM6KP RFH	✓	✓	✓	✓	✓	0002
EXPERT 3	Injection/ignition	DCM3.5	DCM3.5 RHE/RHH	✓	✓	✓	✓	✓	0066 0067 0068 0136 0151 0243
EXPERT 3	Injection/ignition	DCM3.5_BR2	RHH-DW10CTED4-163CV	✓	✓	✓	✓	✓	0136 0150
EXPERT 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS81	✓	✓	✓	✓	✓	0003 0010
EXPERT 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		81 ESP	✓	✓	✓	✓	✓	0010

EXPERT 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ABS8_BOSCH	✓	✓	✓	✓	✓	0003 0010
EXPERT 3	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP_BOSCH8	✓	✓	✓	✓	✓	0003 0010
EXPERT 3	Under-inflation detection		DSG	✓	✓	✓	✓	○	
EXPERT 3	Under-inflation detection		DSG_UDS	✓	✓	✓	✓	○	
EXPERT 3	Pneumatic suspension			✓	✓	✓	✓	○	
EXPERT 3	Additional heating			✓	✓	✓	✓	✓	0364
EXPERT 3	Trailer relay unit			✓	✓	✓	✓	✓	
EXPERT 3	Bodywork conversion unit			✓	✓	✓	✓	✓	
EXPERT 3	Engine relay unit			✓	✓	✓	✓	✓	
EXPERT 3	Driver and passenger airbags		SAC_BOSCH	✓	✓	✓	✓	○	
EXPERT 3	Instrument panel			✓	✓	✓	✓	✓	
EXPERT 3	Parking assistance			✓	✓	✓	✓	✓	
EXPERT 3	Controls under the steering wheel			✓	✓	✓	✓	✓	
EXPERT 3	Multifunction screen		Type 'A' (segments) AVEC buttons	✓	✓	✓	✓	✓	
EXPERT 3	Multifunction screen		Type 'C' (dot matrix)	✓	✓	✓	✓	✓	
EXPERT 3	Heating/ventilation			✓	✓	✓	✓	✓	
EXPERT 3	CD player			✓	✓	✓	○	✓	
EXPERT 3	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓	
EXPERT 3	Hands-free Kit / Portable Unit		BOITIER_NOMADE	✓	✓	✓	✓	✓	
EXPERT 3	Radio		RD4	✓	✓	✓	✓	✓	
EXPERT 3	Radio		RD45	✓	✓	✓	✓	✓	
EXPERT 3	Telematic unit (RTx) or audio-navigation		BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓	
EXPERT 3	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG	✓	✓	✓	✓	✓	
EXPERT 3	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	○	

EXPERT 3	Anti-theft alarm		Alarm without anti-lift module	✓	✓	✓	✓	✓	
EXPERT 3	Anti-slip mode selector			✓	✓	○	✓	✓	
EXPERT 3	Rear air conditioning			✓	✓	✓	✓	✓	
EXPERT 3	Rain and brightness sensor			✓	✓	✓	○	○	
EXPERT 3	High frequency receiver			✓	✓	✓	✓	○	
EXPERT 3	Automatic gearbox or controlled manual gearbox			✓	✓	✓	✓	✓	
EXPERT 3	Hands-free Kit / Portable Unit		KML	✓	✓	✓	✓	✓	
EXPERT 3	Hands-free Kit / Portable Unit		BOITIER_NOMADE	✓	✓	✓	✓	✓	
EXPERT 3	Traction control mode selector			✓	✓	○	✓	○	
EXPERT 3	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○	
EXPERT (k0)	Built-in systems interface			✓	✓	✓	✓	○	
EXPERT (k0)	Engine management ECU		EDC17C10_BR2	✓	✓	✓	✓	○	
EXPERT (k0)	Engine management ECU		DCM62	✓	✓	✓	✓	○	
EXPERT (k0)	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	
EXPERT (k0)	Engine management ECU		CMM_DCM71	✓	✓	✓	✓	○	
EXPERT (k0)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○	
EXPERT (k0)	Diesel additive pump			✓	✓	✓	✓	○	
EXPERT (k0)	Voltage maintaining device		DMTR_DTC3B	✓	✓	✓	○	○	
EXPERT (k0)	Automatic or piloted manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	✓	○	
EXPERT (k0)	Automatic or piloted manual gearbox		BVA_AXN8	✓	✓	✓	✓	○	
EXPERT (k0)	Power steering			✓	✓	✓	✓	○	
EXPERT (k0)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	
EXPERT (k0)	Battery charge status control unit			✓	✓	✓	✓	○	

EXPERT (k0)	Supplies protection and management unit			✓	✓	✓	✓	○	
EXPERT (k0)	Instrument panel			✓	✓	✓	✓	○	
EXPERT (k0)	Head Up Display			✓	✓	✓	✓	○	
EXPERT (k0)	Controls under the steering wheel			✓	✓	✓	✓	○	
EXPERT (k0)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
EXPERT (k0)	Traction control mode selector			✓	✓	✓	✓	○	
EXPERT (k0)	Automatic gearbox electric control ECU			✓	✓	✓	✓	○	
EXPERT (k0)	Multifunction control panel			✓	✓	✓	✓	○	
EXPERT (k0)	Airbags and pretensioners ECU			✓	✓	✓	✓	○	
EXPERT (k0)	Seat belt not fastened warning lights unit			✓	○	○	○	✓	
EXPERT (k0)	Rain and brightness sensor			✓	✓	✓	✓	○	
EXPERT (k0)	Multifunction video camera (CMF)			✓	✓	✓	✓	○	
EXPERT (k0)	Vehicle Distance Assistance			✓	✓	✓	✓	○	
EXPERT (k0)	Parking assistance			✓	✓	✓	✓	○	
EXPERT (k0)	Multifunction screen		EMF_C_UDS	✓	✓	✓	✓	○	
EXPERT (k0)	Touch screen			✓	✓	✓	✓	○	
EXPERT (k0)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	○	
EXPERT (k0)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	○	
EXPERT (k0)	Radio			✓	✓	✓	✓	○	
EXPERT (k0)	Control of the telematic unit			✓	✓	✓	○	○	
EXPERT (k0)	Anti-theft alarm			✓	✓	✓	✓	○	
EXPERT (k0)	Intrusion alarm siren			✓	✓	✓	✓	○	
EXPERT (k0)	Left-hand sliding side door ECU			✓	✓	✓	✓	○	
EXPERT (k0)	Right-hand sliding side door ECU			✓	✓	✓	✓	○	

EXPERT (k0)	Hands full access ECU, left-hand side			✓	✓	✓	○	○	
EXPERT (k0)	Hands full access ECU, right-hand side or rear			✓	✓	✓	○	○	
EXPERT (k0)	Air conditioning			✓	✓	✓	✓	○	
EXPERT (k0)	Rear air conditioning ECU			✓	✓	✓	✓	○	
EXPERT (k0)	Rear air conditioning control panel			✓	○	○	✓	○	
EXPERT (k0)	Trailer relay unit			✓	✓	✓	✓	○	
EXPERT (k0)	Engine wiring housing			✓	✓	✓	✓	○	
EXPERT (k0)	Bodywork conversion unit			✓	✓	✓	✓	○	
EXPERT (k0)	Electric steering lock			✓	✓	✓	✓	○	
EXPERT (k0)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	○	
EXPERT (k0)	Service module / Independent telematic		BTA_3R	✓	✓	✓	✓	○	
EXPERT (k0)	Additional heating			✓	✓	✓	✓	○	
HOGGAR	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	0042
HOGGAR	Built-in systems interface			✓	✓	✓	✓	✓	0018 0019 0021 0043 0044
HOGGAR	Inform the driver / Audio / Communication	Display / Telematics	RT3	✓	✓	✓	✓	✓	0023 0024 0026 0027 0028 0029 0030
HOGGAR	Inform the driver / Audio / Communication	Display / Telematics	Display	✓	✓	✓	✓	✓	0045 0046 0047
HOGGAR	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	○	
HOGGAR	Inform the driver / Audio / Communication	Radio	Radio	✓	✓	✓	✓	✓	0005 0031 0048
HOGGAR	Inform the driver / Audio / Communication	Radio	Radio RDE filament	✓	✓	✓	✓	✓	
HOGGAR	Inform the driver / Audio / Communication		CD changer	✓	✓	✓	✓	✓	0009
HOGGAR	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0009
HOGGAR	Inform the driver / Audio / Communication		Service module / Independent telematic	✓	✓	✓	✓	✓	
HOGGAR	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	○	✓	0009

HOGGAR	Vehicle protection / Management of accesses	Anti-theft alarm	ALARME	✓	✓	✓	✓	✓	
HOGGAR	Engine / Gearbox	ME749	NFU or N6A ME749	✓	✓	✓	✓	✓	0002 0009 0038 0049 0050 0051
HOGGAR	Engine / Gearbox	J34P	KFW J34P	✓	✓	✓	✓	✓	0002 0009 0014 0052 0053 0054 0055 0056 0057
HOGGAR	Engine / Gearbox	ME745	TU5JP4 ME745	✓	✓	✓	✓	✓	0002 0009 0050 0051 0058
HOGGAR	Engine / Gearbox	V34.3	HFV V34.3	✓	✓	✓	✓	✓	0059
HOGGAR	Engine / Gearbox	DCN2	WJY DCN2	✓	✓	✓	✓	✓	0009 0060
HOGGAR	Engine / Gearbox	EDC15C2	RHY EDC15C2	✓	✓	✓	✓	✓	0009 0014 0015 0060 0061
HOGGAR	Engine / Gearbox	EDC16C3	8HZ BOSCH EDC16C3 EURO4	✓	✓	✓	✓	✓	0060 0062 0063 0064 0065
HOGGAR	Engine / Gearbox	EDC17C10_BR2	8HR EDC17C10 BR2	✓	✓	✓	✓	✓	0066 0067 0068 0069
HOGGAR	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AL4 automatic gearbox	✓	✓	✓	✓	✓	0002 0009 0017 0070
HOGGAR	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AL4	✓	✓	✓	✓	✓	
HOGGAR	Active and passive safety	ABS or ESP ECU	ABS MK70	✓	✓	✓	✓	✓	0009 0010
HOGGAR	Active and passive safety	ABS or ESP ECU	ESP MK60	✓	✓	✓	✓	✓	0003 0009 0010
HOGGAR	Active and passive safety	ABS or ESP ECU	ABSMK70_1	✓	✓	✓	✓	✓	
HOGGAR	Active and passive safety	ABS or ESP ECU	ESPMK60_0	✓	✓	✓	✓	✓	
HOGGAR	Active and passive safety	Air bags and pre- tensioners control unit	SAC_CENT_AUTOLIV_2	✓	✓	✓	○	○	0009 0034 0035
HOGGAR	Active and passive safety	Air bags and pre- tensioners control unit	SAC_AUTOLIV	✓	✓	✓	○	○	
HOGGAR	Visibility / Lighting / Signalling		Rain/sunlight sensor	✓	✓	✓	○	○	
HOGGAR	Power steering			✓	✓	✓	✓	○	
HOGGAR	Service module / Independent telematic			✓	✓	✓	✓	✓	
ION	Built-in systems interface			✓	✓	✓	✓	✓	
ION	Electric motor ECU			✓	✓	✓	✓	✓	
ION	Traction battery ECU			✓	✓	✓	✓	✓	
ION	Electric vehicle management ECU			✓	✓	✓	✓	✓	

ION	Traction battery cell electronics 01			✓	○	○	✓	○	
ION	Traction battery cell electronics 02			✓	○	○	✓	○	
ION	Traction battery cell electronics 03			✓	○	○	✓	○	
ION	Traction battery cell electronics 04			✓	○	○	✓	○	
ION	Traction battery cell electronics 05			✓	○	○	✓	○	
ION	Traction battery cell electronics 06			✓	○	○	✓	○	
ION	Traction battery cell electronics 07			✓	○	○	✓	○	
ION	Traction battery cell electronics 08			✓	○	○	✓	○	
ION	Traction battery cell electronics 09			✓	○	○	✓	○	
ION	Traction battery cell electronics 10			✓	○	○	✓	○	
ION	Traction battery cell electronics 11			✓	○	○	✓	○	
ION	Traction battery cell electronics 12			✓	○	○	✓	○	
ION	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	✓	0003
ION	Power steering			✓	✓	✓	✓	○	
ION	Steering wheel angle sensor			✓	✓	✓	✓	○	0003
ION	Air bags and pre-tensioners control unit	SRS	SRS (KWP)	✓	✓	✓	✓	✓	
ION	Air bags and pre-tensioners control unit	SRS	SRS (CAN)	✓	✓	✓	✓	○	
ION	Air bags and pre-tensioners control unit		ORC	✓	✓	✓	✓	○	
ION	Gateway wiring housing			✓	✓	✓	✓	○	
ION	Service module / Independent telematic		BTA	✓	✓	✓	✓	✓	
ION	Instrument panel			✓	✓	✓	✓	✓	0157 0490 0491
ION	Radio			✓	✓	✓	✓	✓	
ION	Air conditioning			✓	✓	✓	✓	✓	

ION	Air conditioning compressor and passenger compartment heating control module			✓	✓	✓	✓	✓	
ION	On-board charger / direct voltage transformer assembly			✓	✓	✓	✓	○	
ION	direct voltage (DC/DC) transformer			✓	✓	✓	✓	○	
PARTNER	Built-in systems interface			✓	✓	✓	○	✓	
PARTNER	Protect the vehicle		Transponder PEUGEOT	✓	✓	✓	✓	○	
PARTNER	Driver information/communicati		Radio PHILIPS	✓	✓	✓	✓	✓	
PARTNER	Driver information/communicati		Radio CLARION	✓	✓	✓	○	✓	
PARTNER	Driver information/communicati		CD player	✓	✓	✓	✓	✓	
PARTNER	Driver information/communicati		Instrument panel	✓	✓	✓	✓	✓	
PARTNER	Air bags and pre-tensioners control unit		Air bag and seat belt	✓	✓	✓	○	○	
PARTNER	Air bags and pre-tensioners control unit		Pre-tensioning seat belt control unit	✓	✓	✓	○	○	
PARTNER	Air conditioning		WEBASTO additional heating	✓	✓	✓	✓	✓	0364
PARTNER	Engines/ automatic gearbox	MA3.1	HDY BOSCH MA3.1	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	M744	HFX BOSCH M7.4.4	✓	✓	✓	✓	✓	0002
PARTNER	Engines/ automatic gearbox	S2000P	KFW SAGEM S2000	✓	✓	✓	✓	✓	0002
PARTNER	Engines/ automatic gearbox	MP7.3	KFX BOSCH MP7.3	✓	✓	✓	✓	✓	0001
PARTNER	Engines/ automatic gearbox	MM1AP	KFX MM1AP	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	SL96	KFX SAGEM SL 96	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	ME744	N6A BOSCH ME7.4.4	✓	✓	✓	✓	✓	0002
PARTNER	Engines/ automatic gearbox	ME745	N6A BOSCH ME7.4.5	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	HDI_SID801	RHY SIEMENS SID801	✓	✓	✓	✓	✓	

PARTNER	Engines/ automatic gearbox	EDC15C2	RHY BOSCH EDC15C2	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	DCN2	WJY LUCAS DCN2	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	LPG /GNV	KFX BRC FLYING INJECTION	✓	✓	✓	✓	○	
PARTNER	Engines/ automatic gearbox		Electrical	✓	✓	✓	○	○	
PARTNER	Active safety		BOSCH ABS5	✓	✓	✓	✓	✓	
PARTNER	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	✓	
PARTNER	Driving assistance / Comfort		Additional heating	✓	✓	✓	✓	✓	0364
PARTNER	Built-in systems interface			✓	✓	✓	✓	✓	0018 0019 0021
PARTNER	Anti-theft alarm			✓	✓	✓	○	✓	
PARTNER	Driver information/communicati	Service module	Service module / Independent telematic	✓	✓	✓	✓	✓	
PARTNER	Driver information/communicati	Display / Telematics	AMF	✓	✓	✓	✓	✓	
PARTNER	Driver information/communicati	Display / Telematics	RT3	✓	✓	✓	✓	✓	
PARTNER	Driver information/communicati	Radio	Radio	✓	✓	✓	✓	✓	
PARTNER	Driver information/communicati	Radio	RDE filament	✓	✓	✓	✓	✓	
PARTNER	Driver information/communicati		CD player	✓	✓	✓	✓	✓	
PARTNER	Driver information/communicati		Instrument panel	✓	✓	✓	✓	✓	
PARTNER	Driver information/communicati on		Switching module below steering wheel (COM 2000)	✓	✓	✓	✓	○	
PARTNER	Air bags and pre-tensioners control unit			✓	✓	✓	○	○	
PARTNER	Visibility /lighting		Rain/sunlight sensor	✓	✓	✓	○	○	
PARTNER	Engines/ automatic gearbox	MM48P	HFX MM4. 8P	✓	✓	✓	✓	✓	0002
PARTNER	Engines/ automatic gearbox	S2000PM1	KFW SAGEM S2000PM1	✓	✓	✓	✓	✓	0002
PARTNER	Engines/ automatic gearbox	S2000PM2	KFW SAGEM S2000PM2	✓	✓	✓	✓	✓	0002

PARTNER	Engines/ automatic gearbox	ME744	N6A BOSCH ME7. 4. 4	✓	✓	✓	✓	✓	0002
PARTNER	Engines/ automatic gearbox	ME745	N6A BOSCH ME7. 4. 5	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	ME749	NFU or N6A BOSCH ME749	✓	✓	✓	✓	✓	0002
PARTNER	Engines/ automatic gearbox	J34P	KFW J34P	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	HDI_SID801	RHY SIEMENS SID801	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	DCN2	WJY LUCAS DCN2	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	EDC16C3	9HW BOSCH EDC16C3	✓	✓	✓	✓	✓	
PARTNER	Engines/ automatic gearbox	LPG /GNV	SAGEM SAX500	✓	✓	✓	✓	○	0002
PARTNER	Engines/ automatic gearbox		Electrical	✓	✓	✓	○	○	
PARTNER	Active safety		BOSCH ABS5. 3	✓	✓	✓	✓	✓	0010
PARTNER	Active safety		ABS BOSCH 8	✓	✓	✓	✓	✓	
PARTNER	Active safety		ESP BOSCH 5.7	✓	✓	✓	✓	✓	0036 0037
PARTNER	Active safety		ESP BOSCH 8	✓	✓	✓	✓	✓	0010 0036 0037
PARTNER	Active safety		ABS 8.1	✓	✓	✓	✓	✓	0010
PARTNER	Active safety		ESP 8.1	✓	✓	✓	✓	✓	0003 0010 0141
PARTNER	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	
PARTNER	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	
PARTNER	Driving assistance / Comfort		Under inflation detection	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0088 0454 0455 0456 0457
PARTNER	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	✓	
PARTNER	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0093 0291
PARTNER	Inform the driver / Audio / Communication	Multifunction screen	Type 'A' (segments)	✓	✓	✓	✓	✓	
PARTNER	Inform the driver / Audio / Communication	Multifunction screen	Type 'C' (dot matrix)	✓	✓	✓	✓	✓	
PARTNER	Inform the driver / Audio / Communication		Radio	✓	✓	✓	✓	✓	

PARTNER	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	
PARTNER	Inform the driver / Audio / Communication		CD player	✓	✓	✓	○	✓	
PARTNER	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	○	
PARTNER	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	
PARTNER	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	
PARTNER	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG radio navigation	✓	✓	✓	✓	✓	
PARTNER	Inform the driver / Audio / Communication		Battery charge status unit	✓	✓	✓	✓	○	
PARTNER	Inform the driver / Audio / Communication		Service module / Independent telematic	✓	✓	✓	✓	✓	
PARTNER	Engine / Gearbox	ME745	N6A ME745	✓	✓	✓	✓	✓	
PARTNER	Engine / Gearbox	MEV174	5FS MEV17.4	✓	✓	✓	✓	✓	0002
PARTNER	Engine / Gearbox	EDC16C3	9HT EDC16C3	✓	✓	✓	✓	✓	0066 0067 0234
PARTNER	Engine / Gearbox	EDC17C10_BR2	9HP EDC17C10 BR2	✓	✓	✓	✓	✓	0066 0067 0068 0069
PARTNER	Engine / Gearbox	HDI_SID807	9HL HDI SID807	✓	✓	✓	✓	✓	0066 0067 0068
PARTNER	Engine / Gearbox	Diesel additive pump	Pompe mux MGI	✓	✓	✓	✓	✓	
PARTNER	Engine / Gearbox	Diesel additive pump	Pompe mux TI	✓	✓	✓	✓	✓	
PARTNER	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	CFC300P gearbox	✓	✓	✓	✓	✓	
PARTNER	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	
PARTNER	Active and passive safety		Air bags and pre- tensioners control unit	✓	✓	✓	✓	○	
PARTNER	Active and passive safety	ABS or ESP ECU	ABS 8.1	✓	✓	✓	✓	✓	0010
PARTNER	Active and passive safety	ABS or ESP ECU	ESP 8.1	✓	✓	✓	✓	✓	0003 0010 0275
PARTNER	Visibility / Lighting / Signalling		Rain and light sensor	✓	✓	✓	○	○	
PARTNER B9	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	
PARTNER B9	Driving assistance / Comfort	Air conditioning	CLIM_REGULEE	✓	✓	✓	✓	✓	
PARTNER B9	Driving assistance / Comfort	Air conditioning	CLIM	✓	✓	✓	✓	○	

PARTNER B9	Driving assistance / Comfort	Under inflation detection	DSG	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0088 0454 0455 0456 0457
PARTNER B9	Driving assistance / Comfort	Under inflation detection	DSG_UDS	✓	✓	✓	✓	○	
PARTNER B9	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	✓	
PARTNER B9	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0093 0291
PARTNER B9	Inform the driver / Audio / Communication	Multifunction screen	Type 'A' (segments)	✓	✓	✓	✓	✓	
PARTNER B9	Inform the driver / Audio / Communication	Multifunction screen	Type 'C' (dot matrix)	✓	✓	✓	✓	✓	
PARTNER B9	Inform the driver / Audio / Communication	Radio	AUTORADIO	✓	✓	✓	✓	✓	
PARTNER B9	Inform the driver / Audio / Communication	Radio	RD45	✓	✓	✓	✓	○	
PARTNER B9	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	
PARTNER B9	Inform the driver / Audio / Communication		CD changer / external CD player	✓	✓	✓	○	✓	
PARTNER B9	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	
PARTNER B9	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	○	
PARTNER B9	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	
PARTNER B9	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG radio navigation	✓	✓	✓	✓	✓	
PARTNER B9	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RNEG2010	✓	✓	✓	✓	○	
PARTNER B9	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	SMEG_PLUS	✓	✓	✓	✓	○	
PARTNER B9	Inform the driver / Audio / Communication	Battery charge status unit	BECB	✓	✓	✓	✓	○	
PARTNER B9	Inform the driver / Audio / Communication	Battery charge status unit	BECB_GEN2	✓	✓	✓	✓	○	
PARTNER B9	Inform the driver / Audio / Communication		Service module / Independent telematic	✓	✓	✓	✓	✓	
PARTNER B9	Engine / Gearbox	ME745	N6A ME745	✓	✓	✓	✓	✓	
PARTNER B9	Engine / Gearbox	MEV174	5FS MEV17.4	✓	✓	✓	✓	✓	0002
PARTNER B9	Engine / Gearbox	Petrol	MEV17_4_EURO5	✓	✓	✓	✓	○	

PARTNER B9	Engine / Gearbox	Petrol	MEV17_4_2	✓	✓	✓	✓	○	
PARTNER B9	Engine / Gearbox	Petrol	VD46	✓	✓	✓	✓	○	
PARTNER B9	Engine / Gearbox	EDC16C3	9HT EDC16C3	✓	✓	✓	✓	✓	0066 0067 0234
PARTNER B9	Engine / Gearbox	EDC17C10_BR2	9HP EDC17C10 BR2	✓	✓	✓	✓	✓	0066 0067 0068 0069
PARTNER B9	Engine / Gearbox	HDI_SID807	9HL HDI SID807	✓	✓	✓	✓	✓	0066 0067 0068
PARTNER B9	Engine / Gearbox	Diesel	HDI_SID807_BR2	✓	✓	✓	✓	○	0136 0150
PARTNER B9	Engine / Gearbox	Diesel	EDC17C60	✓	✓	✓	✓	○	0152
PARTNER B9	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	CFC300P gearbox	✓	✓	✓	✓	✓	
PARTNER B9	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVMP_MCP_UDS	✓	✓	✓	○	○	
PARTNER B9	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	
PARTNER B9	Active and passive safety		Air bags and pre-tensioners control unit	✓	✓	✓	✓	○	
PARTNER B9	Active and passive safety	ABS or ESP ECU	ABS 8.1	✓	✓	✓	✓	✓	0010
PARTNER B9	Active and passive safety	ABS or ESP ECU	ESP 8.1	✓	✓	✓	✓	✓	0003 0010 0275
PARTNER B9	Active and passive safety	ABS or ESP ECU	ESP90	✓	✓	✓	○	○	0003 0275 0357 0358
PARTNER B9	Visibility / Lighting / Signalling		Rain and light sensor	✓	✓	✓	○	○	
PARTNER B9	Engine relay unit			✓	✓	✓	✓	○	
PARTNER B9	Trailer relay unit			✓	✓	✓	✓	○	
PARTNER B9	Bodywork Conversion Unit			✓	✓	✓	✓	○	
PARTNER B9	Traction control mode selector			✓	✓	○	✓	○	
PARTNER B9	high frequency receiver			✓	✓	✓	✓	○	
PARTNER B9	Voltage retaining device		DMTR	✓	✓	✓	○	○	
PARTNER B9	Vehicle Distance Assistance			✓	✓	✓	✓	○	
PARTNER B9	Diesel additive pump		Pompe mux MGI	✓	✓	✓	✓	✓	
PARTNER B9	Diesel additive pump		Pompe mux TI	✓	✓	✓	✓	✓	
PARTNER B9	Diesel additive pump		PADDGO_E5	✓	✓	✓	✓	○	

PARTNER B9	Diesel additive pump		PADDGO_TI_E6	✓	✓	✓	✓	○	
PARTNER Electric(B9e)	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0093 0291
PARTNER Electric(B9e)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP81	✓	✓	✓	✓	○	0003 0275
PARTNER Electric(B9e)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90	✓	✓	✓	○	○	0003 0275 0357 0358
PARTNER Electric(B9e)	Power steering			✓	✓	✓	✓	✓	
PARTNER Electric(B9e)	Engine relay unit			✓	✓	✓	✓	○	
PARTNER Electric(B9e)	Air bags and pre-tensioners control unit			✓	✓	✓	✓	○	
PARTNER Electric(B9e)	Multifunction screen	Type 'A' (segments)	EMF_A	✓	✓	✓	✓	✓	
PARTNER Electric(B9e)	Multifunction screen	Type 'C' (dot matrix)	EMF_C	✓	✓	✓	✓	✓	
PARTNER Electric(B9e)	Instrument panel			✓	✓	✓	✓	✓	
PARTNER Electric(B9e)	Parking assistance			✓	✓	✓	✓	○	
PARTNER Electric(B9e)	Controls under the steering wheel			✓	✓	✓	✓	✓	
PARTNER Electric(B9e)	Radio		AUTORADIO	✓	✓	✓	✓	✓	
PARTNER Electric(B9e)	Radio		RD45	✓	✓	✓	✓	○	
PARTNER Electric(B9e)	Telematic unit (RTx) or audio-navigation		RADIONAV_RNEG	✓	✓	✓	✓	○	
PARTNER Electric(B9e)	Telematic unit (RTx) or audio-navigation		RNEG2010	✓	✓	✓	✓	○	
PARTNER Electric(B9e)	Telematic unit (RTx) or audio-navigation		SMEG_PLUS	✓	✓	✓	✓	○	
PARTNER Electric(B9e)	Anti-theft alarm		Anti-theft alarm	✓	✓	✓	✓	✓	
PARTNER Electric(B9e)	Service module		Service module / Independent telematic	✓	✓	✓	✓	✓	
PARTNER Electric(B9e)	Rain and light sensor		Rain and light sensor	✓	✓	✓	○	○	
PARTNER Electric(B9e)	Rain and light sensor		Rain/sunlight sensor	✓	✓	✓	○	○	
PARTNER Electric(B9e)	On-board charger / direct voltage transformer assembly			✓	✓	✓	✓	○	
PARTNER Electric(B9e)	traction battery ECU			✓	✓	✓	✓	○	0492
PARTNER Electric(B9e)	Traction battery cells management ECU (Module 1)			✓	○	○	✓	○	

PARTNER Electric(B9e)	Traction battery cells management ECU (Module 2)			√	○	○	√	○	
PARTNER Electric(B9e)	Traction battery cells management ECU (Module 3)			√	○	○	√	○	
PARTNER Electric(B9e)	Traction battery cells management ECU (Module 4)			√	○	○	√	○	
PARTNER Electric(B9e)	Traction battery cells management ECU (Module 5)			√	○	○	√	○	
PARTNER Electric(B9e)	Traction battery cells management ECU (Module 6)			√	○	○	√	○	
PARTNER Electric(B9e)	Traction battery cells management ECU (Module 7)			√	○	○	√	○	
PARTNER Electric(B9e)	Traction battery cells management ECU (Module 8)			√	○	○	√	○	
PARTNER Electric(B9e)	Traction battery cells management ECU (Module 9)			√	○	○	√	○	
PARTNER Electric(B9e)	Traction battery cells management ECU (Module 10)			√	○	○	√	○	
PARTNER Electric(B9e)	Air conditioning		CLIM_REGULEE	√	√	√	√	√	
PARTNER Electric(B9e)	Air conditioning		CLIM	√	√	√	√	○	
PARTNER Electric(B9e)	Passenger compartment air heating resistor			√	√	√	√	○	
PARTNER Electric(B9e)	Air conditioning compressor			√	√	√	√	○	
PARTNER Electric(B9e)	electric vehicle ECU			√	√	√	○	○	
PARTNER Electric(B9e)	Drive train interface ECU			√	√	√	√	○	
PARTNER Electric(B9e)	Electric machine management ECU			√	√	√	○	○	
PARTNER Electric(B9e)	Battery charge status unit			√	√	√	√	○	
PARTNER2 (M69)	Built-in systems interface			√	√	√	√	○	
PARTNER2 (M69)	Engine management ECU		EDC17C10_BR2	√	√	√	√	○	

PARTNER2 (M69)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	
PARTNER2 (M69)	Airbags and pretensioners ECU			✓	✓	✓	✓	○	
PARTNER2 (M69)	Instrument panel			✓	✓	✓	✓	✓	
PARTNER2 (M69)	Controls under the steering wheel			✓	✓	✓	✓	○	
PARTNER2 (M69)	Telematic unit (RTx) or audio-navigation			✓	✓	✓	✓	○	
PARTNER2 (M69)	Radio			✓	✓	✓	✓	○	
RCZ	Driving assistance / Comfort		Lane departure warning system	✓	✓	✓	✓	✓	
RCZ	Driving assistance / Comfort		Air conditioning	✓	✓	✓	✓	✓	0042
RCZ	Driving assistance / Comfort		Power steering	✓	✓	✓	✓	✓	
RCZ	Driving assistance / Comfort		Seat driver position memory module.	✓	✓	✓	✓	✓	0285 0286 0287 0288 0289 0290
RCZ	Driving assistance / Comfort		Parking assistance	✓	✓	✓	✓	○	0009 0071
RCZ	Driving assistance / Comfort		Under inflation detection	✓	✓	✓	✓	○	0072 0073 0074 0075 0076 0077 0078 0079 0080 0081 0082 0083 0084 0085 0086 0087 0088
RCZ	Driving assistance / Comfort		Passenger seat memorisation module	✓	✓	✓	✓	✓	
RCZ	Built-in systems interface			✓	✓	✓	✓	✓	0018 0021 0091 0092 0093 0291
RCZ	Inform the driver / Audio / Communication	Multifunction screen	EMF_A	✓	✓	✓	✓	✓	0095 0096 0097
RCZ	Inform the driver / Audio / Communication	Multifunction screen	EMF_C	✓	✓	✓	✓	✓	0095 0096 0097
RCZ	Inform the driver / Audio / Communication		Radio	✓	✓	✓	✓	✓	0005 0031 0048 0098 0292
RCZ	Inform the driver / Audio / Communication		Instrument panel	✓	✓	✓	✓	✓	0009 0099
RCZ	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	BOITIER_NOMADE	✓	✓	✓	✓	✓	0100 0101 0293
RCZ	Inform the driver / Audio / Communication	Hands-free Kit / Portable Unit	KML	✓	✓	✓	✓	✓	0100 0101
RCZ	Inform the driver / Audio / Communication		seat belt not fastened warning lights unit	✓	○	○	○	✓	

RCZ	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	BOITIER_TELEMATIQUE	✓	✓	✓	✓	✓	0005 0030 0097 0102 0103 0105 0106 0107 0108 0109 0110 0111 0112 0220
RCZ	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG	✓	✓	✓	✓	✓	0005 0102 0105 0106 0107 0108 0294 0295 0296
RCZ	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_NG4	✓	✓	✓	✓	✓	0005 0102 0105 0106 0107 0108 0294 0295 0296
RCZ	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEGC	✓	✓	✓	✓	✓	0005 0097 0102 0105 0106 0107 0108 0295 0296
RCZ	Inform the driver / Audio / Communication	Telematic unit (RTx) or audio-navigation	RADIONAV_RNEG_ECO	✓	✓	✓	✓	✓	
RCZ	Inform the driver / Audio / Communication		Controls under the steering wheel	✓	✓	✓	✓	✓	0003
RCZ	Inform the driver / Audio / Communication		CD changer	✓	✓	✓	○	✓	0048 0292 0297
RCZ	Inform the driver / Audio / Communication		Audio amplifier	✓	✓	✓	○	✓	0009
RCZ	Inform the driver / Audio / Communication	Service module / Independent telematic	MD_SERV	✓	✓	✓	✓	✓	0005 0298 0299
RCZ	Inform the driver / Audio / Communication	Service module / Independent telematic	BTA	✓	✓	✓	✓	✓	0005 0300
RCZ	Inform the driver / Audio / Communication		Control panel dot matrix display	✓	✓	✓	✓	✓	0301 0302 0303
RCZ	Inform the driver / Audio / Communication	Battery charge status unit	BECB	✓	✓	✓	✓	○	
RCZ	Inform the driver / Audio / Communication	Battery charge status unit	BECB_GEN2	✓	✓	✓	✓	○	
RCZ	Inform the driver / Audio / Communication		Folding roof	✓	✓	✓	✓	✓	0140 0304
RCZ	Engine / Gearbox	ME745	N6A ME745	✓	✓	✓	✓	✓	0002 0009 0051 0058
RCZ	Engine / Gearbox	MM6LPB	RFJ MM6LPB	✓	✓	✓	✓	✓	0002 0009 0014 0038 0053 0054 0055 0134 0178 0179
RCZ	Engine / Gearbox	MEV17.4	5FW MEV17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0123 0124 0125 0126 0132 0133 0305 0306 0307 0308 0309
RCZ	Engine / Gearbox	MEV174	5FS MEV17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133 0135
RCZ	Engine / Gearbox	MED174	5FV MED17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0123 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133

RCZ	Engine / Gearbox	MED17.4	5FT MED17.4	✓	✓	✓	✓	✓	0002 0009 0014 0038 0054 0055 0123 0124 0125 0126 0127 0128 0129 0130 0131 0132 0133
RCZ	Engine / Gearbox	MEVD17_4_2	5FU MEVD17.4.2	✓	✓	✓	✓	✓	0002 0009 0014 0054 0060 0123 0124 0126 0127 0128 0129 0131 0132 0179 0181 0270 0305 0308 0310 0311 0312
RCZ	Engine / Gearbox	Petrol	MM6KP	✓	✓	✓	✓	✓	0002 0009 0014 0053 0054 0055 0060 0125 0178 0229 0230 0231 0232
RCZ	Engine / Gearbox	ME749	NFU ME749 Bio Flex	✓	✓	✓	✓	✓	0002 0049 0058
RCZ	Engine / Gearbox	MEV17_4_2	EP6C 5FS MEV17.4.2	✓	✓	✓	✓	✓	0002 0009 0014 0054 0060 0124 0126 0132 0135 0179 0181 0305 0308 0309 0311 0312 0313 0314
RCZ	Engine / Gearbox	Petrol	MED17_4_EURO5	✓	✓	✓	✓	✓	
RCZ	Engine / Gearbox	Petrol	MED17_4_4	✓	✓	✓	✓	✓	
RCZ	Engine / Gearbox	EDC16C3	9HV EDC16C3	✓	✓	✓	✓	✓	0009 0060 0062 0063 0066 0067 0136 0235 0236 0237 0238 0239 0240
RCZ	Engine / Gearbox	DCM3.4	RHR DCM3.4	✓	✓	✓	✓	✓	0061 0066 0067 0134 0136 0147 0151 0170 0171 0172 0173 0174 0243 0250 0251 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0262 0263 0264 0265 0266 0267 0268 0269 0270
RCZ	Engine / Gearbox	HDI_SID807	9HL HDI SID807	✓	✓	✓	✓	✓	0042 0064 0066 0067 0068 0134 0136 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0253 0254 0255 0256 0258 0315 0316 0317 0318 0319 0320
RCZ	Engine / Gearbox	HDI_SID807_BR2	9HR HDI_SID807_BR2	✓	✓	✓	✓	✓	0060 0064 0066 0067 0068 0069 0134 0136 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0181 0250 0253 0254 0255 0256 0258 0316 0318 0319 0320 0321 0322 0323 0324 0325 0326 0327 0328
RCZ	Engine / Gearbox	DCM3.5	RHH DCM3.5	✓	✓	✓	✓	✓	0042 0066 0067 0068 0134 0136 0142 0143 0144 0145 0146 0147 0151 0170 0171 0172 0173 0174 0243 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0262 0316 0320 0328

RCZ	Engine / Gearbox	EDC17C10	9HP EDC17C10	✓	✓	✓	✓	✓	0038 0068 0134 0142 0143 0144 0145 0146 0149 0170 0171 0172 0173 0174 0233 0240 0250 0252 0258 0316 0318 0319 0325 0330 0331 0332 0333 0334 0335 0336
RCZ	Engine / Gearbox	EDC17C10_BR2	9HP EDC17C10_BR2	✓	✓	✓	✓	✓	0060 0066 0067 0068 0069 0134 0142 0143 0144 0145 0146 0149 0170 0171 0172 0173 0174 0181 0240 0250 0258 0316 0318 0319 0324 0325 0326 0327 0328 0330 0331 0332 0333 0334 0335 0336 0337 0338
RCZ	Engine / Gearbox	Diesel	DCM35_BR2	✓	✓	✓	✓	✓	0136 0150
RCZ	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AM6C gearbox	✓	✓	✓	✓	✓	0155 0221 0222 0223 0224 0225 0226 0227 0339 0340
RCZ	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AM6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0009 0155 0222 0223 0224 0225 0226 0227
RCZ	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AT6 Euro5 automatic gearbox	✓	✓	✓	✓	✓	0009 0155 0222 0223 0224 0225 0226 0227
RCZ	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	CFC300P gearbox	✓	✓	✓	✓	✓	0198 0341 0342 0343 0344 0345 0346 0347 0348 0349 0350 0351 0352 0353 0354
RCZ	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	AL4 gearbox	✓	✓	✓	✓	✓	0002 0009 0017
RCZ	Engine / Gearbox	Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_UDS	✓	✓	✓	○	○	0155
RCZ	Vehicle protection / Management of accesses		Anti-theft alarm	✓	✓	✓	✓	✓	0096 0137 0138
RCZ	Vehicle protection / Management of accesses		Driver's door module	✓	✓	✓	✓	✓	
RCZ	Vehicle protection / Management of accesses		Sun roof	✓	✓	✓	✓	✓	0274
RCZ	Active and passive safety	ABS or ESP ECU	ABS 8.1	✓	✓	✓	✓	✓	0009 0010
RCZ	Active and passive safety	ABS or ESP ECU	ESP 8.1	✓	✓	✓	✓	✓	0003 0010 0275
RCZ	Active and passive safety		Air bags and pre-tensioners control unit	✓	✓	✓	✓	○	0034 0035 0276 0277 0278 0279

RCZ	Visibility / Lighting / Signalling		Rain and light sensor	✓	✓	✓	○	○	
RCZ	Visibility / Lighting / Signalling		Dynamic headlamp height adjuster	✓	✓	✓	✓	✓	
RCZ	Visibility / Lighting / Signalling		Driving school module	✓	✓	✓	○	✓	
RCZ	Visibility / Lighting / Signalling		Windscreen wiper	✓	○	○	○	✓	
RCZ	Diesel additive pump		Pompe mux MGI	✓	✓	✓	✓	✓	0009 0156 0355
RCZ	Diesel additive pump		Pompe mux TI	✓	✓	✓	✓	✓	0009
RCZ	Pedestrian impact detection unit			✓	✓	✓	✓	○	
RCZ	Engine relay unit			✓	✓	✓	✓	✓	
RCZ	Trailer relay unit			✓	✓	✓	✓	○	
RCZ	high frequency receiver			✓	✓	✓	✓	○	
RCZ	Voltage retaining device		DMTR_DTC3B	✓	✓	✓	○	○	
TRAVELLER (KOP)	Built-in Systems Interface			✓	✓	✓	✓	○	0157
TRAVELLER (KOP)	Trailer relay unit			✓	✓	✓	✓	✓	
TRAVELLER (KOP)	Engine management ECU		DCM62	✓	✓	✓	✓	○	0152
TRAVELLER (KOP)	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	0152
TRAVELLER (KOP)	Engine management ECU		CMM_DCM71	✓	✓	✓	✓	○	
TRAVELLER (KOP)	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○	
TRAVELLER (KOP)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)		ESP90	✓	✓	✓	✓	○	0003 0275 0357 0358
TRAVELLER (KOP)	air bags and pre-tensioners control unit			✓	✓	✓	✓	○	0034 0035 0276 0277 0279 0402 0493 0494
TRAVELLER (KOP)	Voltage retaining device		DMTC	✓	○	○	○	○	
TRAVELLER (KOP)	Battery charge status unit		BECB_GEN2	✓	✓	✓	✓	○	
TRAVELLER (KOP)	Air conditioning			✓	✓	✓	✓	○	
TRAVELLER (KOP)	Radio		RD6	✓	✓	✓	✓	○	
TRAVELLER (KOP)	Multifunction video camera (CMF)			✓	✓	✓	✓	○	
TRAVELLER (KOP)	Engine relay unit			✓	✓	✓	✓	○	

TRAVELLER (KOP)	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
TRAVELLER (KOP)	Electric steering lock			✓	✓	✓	✓	✓	0425
TRAVELLER (KOP)	Instrument panel			✓	✓	✓	✓	○	
TRAVELLER (KOP)	touch screen			✓	✓	✓	✓	✓	
TRAVELLER (KOP)	Multiplexed control panel			✓	✓	✓	✓	○	
TRAVELLER (KOP)	multifunction screen		EMF_C_UDS	✓	✓	✓	○	○	
TRAVELLER (KOP)	supply protection and management unit			✓	✓	✓	✓	○	
TRAVELLER (KOP)	Service module / Independent telematic		BTA_2	✓	✓	✓	✓	○	
TRAVELLER (KOP)	Service module / Independent telematic		BTA_3R	✓	✓	✓	○	○	
TRAVELLER (KOP)	Additional heating			✓	✓	✓	✓	○	
TRAVELLER (KOP)	controls under the steering wheel			✓	✓	✓	✓	○	
TRAVELLER (KOP)	Vehicle Distance Assistance			✓	✓	✓	✓	○	
TRAVELLER (KOP)	Rain and light sensor			✓	✓	✓	✓	○	
TRAVELLER (KOP)	Telematic unit (RTx) or audio-navigation		NAC	✓	✓	✓	✓	○	
TRAVELLER (KOP)	Telematic unit (RTx) or audio-navigation		RCC	✓	✓	✓	✓	○	
TRAVELLER (KOP)	Power steering			✓	✓	✓	○	✓	
TRAVELLER (KOP)	Rear air conditioning ECU			✓	✓	✓	✓	○	
TRAVELLER (KOP)	Hands full access ECU, right-hand side or rear			✓	✓	○	○	○	
TRAVELLER (KOP)	Hands full access ECU, left-hand side			✓	✓	○	○	○	
TRAVELLER (KOP)	Left-hand sliding side door ECU			✓	✓	✓	✓	○	0495 0496 0497 0498
TRAVELLER (KOP)	Right-hand sliding side door ECU			✓	✓	✓	✓	○	
TRAVELLER (KOP)	Parking assistance		AAS_UDS	✓	✓	✓	✓	○	
TRAVELLER (KOP)	Automatic gearbox or controlled manual gearbox		BVA_AM6_AT6_UDS	✓	✓	✓	○	○	0155

TRAVELLER (KOP)	Automatic gearbox or controlled manual gearbox		BVA_AXN8	✓	✓	✓	✓	○	
RIFTER	Built-in systems interface			✓	✓	✓	✓	○	
RIFTER	Engine management ECU		EDC17C60	✓	✓	✓	✓	○	
RIFTER	Engine management ECU		CMM_MD1CS003	✓	✓	✓	✓	○	
RIFTER	Engine management ECU	EDC17C10_BR2	9HB - DV6DU	✓	✓	✓	✓	○	
RIFTER	Engine management ECU		V46_21	✓	✓	✓	✓	○	
RIFTER	Engine management ECU		CMM_VD56	✓	✓	✓	✓	○	
RIFTER	Diesel additive pump			✓	✓	✓	✓	○	
RIFTER	Automatic or piloted manual gearbox			✓	✓	✓	✓	○	
RIFTER	Power steering			✓	✓	✓	✓	○	
RIFTER	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)			✓	✓	✓	✓	○	
RIFTER	Overload indicator ECU			✓	✓	✓	✓	○	
RIFTER	Trailer relay unit			✓	✓	✓	✓	○	
RIFTER	Bodywork conversion unit			✓	✓	✓	✓	○	
RIFTER	Battery charge status control unit			✓	✓	✓	✓	○	
RIFTER	Electric steering lock			✓	✓	✓	✓	○	
RIFTER	Instrument panel			✓	✓	✓	✓	○	
RIFTER	Head Up Display			✓	✓	✓	✓	○	
RIFTER	Controls on the steering wheel / Integral controls			✓	✓	✓	✓	○	
RIFTER	Traction control mode selector			✓	✓	✓	✓	○	
RIFTER	Multifunction control panel			✓	✓	✓	✓	○	
RIFTER	Airbags and pretensioners ECU			✓	✓	✓	✓	○	
RIFTER	Seat belt not fastened warning lights unit			✓	○	○	○	○	
RIFTER	Rain and brightness sensor			✓	✓	✓	✓	○	

RIFTER	Multifunction video camera (CMF)			✓	✓	✓	✓	○	
RIFTER	Parking assistance			✓	✓	✓	✓	○	
RIFTER	Multifunction screen			✓	✓	✓	✓	○	
RIFTER	Touch screen			✓	✓	✓	✓	○	
RIFTER	Audio- navigation/telematic unit/connected audio		NAC	✓	✓	✓	✓	○	
RIFTER	Audio- navigation/telematic unit/connected audio		RCC	✓	✓	✓	✓	○	
RIFTER	Radio			✓	✓	✓	✓	○	
RIFTER	Control of the telematic unit			✓	✓	✓	○	○	
RIFTER	Service module / Independent telematic			✓	✓	✓	✓	○	
RIFTER	External CD player			✓	✓	✓	✓	○	
RIFTER	Anti-theft alarm			✓	✓	✓	✓	○	
RIFTER	Intrusion alarm siren			✓	✓	✓	✓	○	
RIFTER	Driver's door module			✓	✓	✓	✓	○	
RIFTER	Air conditioning			✓	✓	✓	✓	○	
RIFTER	Additional heating			✓	✓	✓	✓	○	



Function List

Index	Special Function	Index	Special Function
0001	Injection ECU initialisation procedure	0002	Initialising the autoadaptives
0003	Calibration of the steering wheel angle sensor	0004	Deactivation of the dynamic stability control and traction control systems
0005	VIN configuration	0006	Configuration of the vehicle localisation unit fitted due to theft
0007	Electric folding roof closing cycle	0008	Electric folding roof opening cycle
0009	Configuration	0010	Bleeding
0011	Check after operation	0012	Configuration procedure
0013	Particulate filter regeneration	0014	Injectors
0015	Injection ECU	0016	Read the component tachometers
0017	Oil wear counter	0018	Maintenance
0019	Forcing of the customer mode	0020	Programming of the built-in systems interface (Engine immobiliser code and keys)
0021	Resetting to zero of the service mileage	0022	ECU configuration
0023	Telematics screen	0024	Data communication ECU -VIN code
0025	Data communication ECU	0026	Configuration of the telematic unit
0027	Manual configuration of the voice mail	0028	Manual configuration of the ordinary SMSC number
0029	Manual configuration of the emergency voice number for the emergency call	0030	Battery replacement
0031	Radio configuration	0032	Lighting table
0033	CD changer configuration	0034	Locking
0035	Unlocking	0036	Steering wheel angle sensor calibration
0037	De-calibration of the steering wheel angle sensor	0038	Programming /pairing

0039	Replacement of the additive ECU	0040	Configuration of the additive ECU
0041	Additive type configuration	0042	Manual configuration
0043	Programming of the built-in systems interface (engine immobiliser code and keys)	0044	ECUs present
0045	Configuration of the displays mode	0046	Configuration of options
0047	Customer language configuration	0048	Different configuration for the 16 levels
0049	Writing of the alcohol content	0050	Replacement of the ECU
0051	Replacements of the throttle housing, of the accelerator pedal sensor, of the injectors, of the oxygen sensors	0052	Control unit
0053	Oxygen sensors	0054	Motorised throttle unit
0055	Canister purge electrovalve	0056	Engine speed sensor or engine speed sensor target
0057	Mechanical parts linked with the engine combustion (cylinder head, valve, ...)	0058	Routine
0059	Initialisation of the auto-adaptive components	0060	Programming / matching
0061	Pairing	0062	Injector characterisation IMA 4pts
0063	Injector characterisation IMA 5pts	0064	Replacement of the EGR valve
0065	Replacement of exhaust gas recycling electric throttle	0066	Forced regeneration vehicle stationary
0067	Forced regeneration vehicle moving	0068	Programming of the total quantity of additive injected into the particulate emission filter
0069	Programming of the quantity of additive remaining in the reservoir	0070	Accelerator pedal initialisation
0071	Overall check of the sensors	0072	Reading of the status of deactivation of the tyre under-inflation detection function
0073	Deactivation of the tyre under-inflation detection function	0074	Activation of the tyre under-inflation detection function
0075	Erasing of the secondary wheels	0076	Read wheel transmitter module identifiers

0077	Write wheel transmitter module identifiers by references	0078	Direct reading and writing of the wheel identifiers
0079	Front right wheel learning	0080	Front left wheel learning
0081	Left rear wheel learning	0082	Right rear wheel learning
0083	Programming of all of the wheel transmitters	0084	Front left-hand wheel
0085	Front right-hand wheel	0086	Rear right-hand wheel
0087	Rear left-hand wheel	0088	Valve programming check
0089	Over specification tyre fit	0090	Return to the original fit
0091	Programming of keys	0092	Forcing of the fuel gauging data
0093	Reset to zero of the counter for the number of restarts (Stop and start and hybrid)	0094	Stop and start function activated (new vehicle)
0095	Customer configuration	0096	Vehicle configuration
0097	Configuration of the personalisation menu	0098	Antenna configuration
0099	Service zero reset	0100	Configuration of the Nomad unit
0101	Configuration of the audio parameters	0102	Configuration of the customer options
0103	Configuration of the display options	0104	Clearing of personal data
0105	Telephone data	0106	Guidance information
0107	Phone book information	0108	All the data
0109	Juke-Box configuration	0110	Erase Juke-Box files
0111	Activation of emergency and assistance services	0112	Configuration of other services
0113	Setting to the gearbox actuator removal position	0114	Setting to the gearbox actuator fitting position
0115	Sequence of programming operations(gearbox and clutch actuators)	0116	Clutch actuator programming operations
0117	Gearbox actuator programming operations	0118	Initialisation of the gearbox actuator
0119	Clutch counters	0120	Clutch cycles counters
0121	Gearbox counters	0122	Gear selector and steering wheel gear controls counters

0123	Replacement control unit Med17.4	0124	Upstream and downstream oxygen sensors
0125	Accelerator pedal sensor	0126	Catalytic converter
0127	Fuel pressure regulation electrovalve	0128	Fuel HP pump
0129	Rail pressure sensor	0130	Camshaft phase sensor
0131	Inlet camshaft dephasing electrovalve	0132	Inlet pressure sensor
0133	Timing	0134	ECU replacement
0135	Control unit replacement MEV174	0136	Replacement of the particle emission filter
0137	Configuration of Thatcham mode	0138	Configuration of the detection peak
0139	Vehicle in coup position	0140	Vehicle in cabriolet position
0141	Calibration of the gyrometer/accelerometer sensor	0142	Initialisation of the 4 diesel injectors
0143	Initialisation of diesel injector 1	0144	Initialisation of diesel injector 2
0145	Initialisation of diesel injector 3	0146	Initialisation of diesel injector 4
0147	Replacement of the additive reservoir, of the pump or of the pipes	0148	Particle filter replacement
0149	Filling of the additive reservoir or pouch	0150	Forced regeneration of the particle filter, vehicle stationary
0151	Filling of the diesel additive adding reservoir	0152	Particle filter regeneration
0153	Replacement of the ECU with reading / writing of the adaptive data	0154	Replacement of the ECU without reading / writing the adaptive data
0155	Replacement of the automatic gearbox oil	0156	REPLACEMENT OF THE ADDITIVE PUMP
0157	Maintenance indicator reset	0158	Clutch C2 pressure modulating electrovalve
0159	Clutch C3 pressure modulating electrovalve	0160	Converter lock-up pressure modulating electrovalve
0161	Gear lever locking control (shift-lock)	0162	Start lock
0163	Control of the additional oil pump (Stop and Start)	0164	Sequential test of all the solenoid valves
0165	1 sequence solenoid valve	0166	2 sequence solenoid valve

0167	Line pressure modulating electrovalve	0168	Brake B1 pressure modulating electrovalve
0169	Clutch C1 pressure modulating electrovalve	0170	Classification of the 4 injectors
0171	Classification of injector 1	0172	Classification of injector 2
0173	Classification of injector 3	0174	Classification of injector 4
0175	All the engine management ECU programmed auto-adaptive values	0176	Inlet camshaft dephaser
0177	Inlet camshaft dephaser solenoid valve	0178	Cylinder reference sensor
0179	Accelerator pedal	0180	Vacuum pump
0181	Checking the immobiliser code in the engine management ECU	0182	Replacement of the motorised butterfly housing
0183	Replacement of the accelerator pedal	0184	Replacement of injectors
0185	Engine	0186	Engine speed sensor
0187	Engine speed sensor target	0188	Oxygen sensor
0189	Replacement of the vacuum pump	0190	Tyre above specification
0191	Bleeding of the hydraulic block ABS MK100	0192	Bleeding of the hydraulic block ESP MK100
0193	Setting of the gearbox actuator to the removal position	0194	Setting of the gearbox actuator to the fitting position
0195	Sequence of programming operations	0196	Replacement of the clutch
0197	Replacement of the clutch actuator	0198	Replacement of the gear lever
0199	Replacement of the gearbox	0200	Replacement of the gearbox actuator
0201	Replacement of the piloted manual gearbox and of the piloted manual gearbox actuators	0202	Replacement of the piloted manual gearbox and of the piloted manual gearbox ECU
0203	Replacing the gearbox ECU	0204	VIN code
0205	Configuration of the hands-free kit	0206	Configuration of the screen
0207	Illumination table / Button lighting level	0208	Downloading
0209	Configuration of the various display modes	0210	Configuration of the various user languages
0211	Gearbox	0212	Re-centring of autoadaptive systems
0213	Injector classification	0214	Additive ECU

0215	Accelerator pedal learning	0216	Reading of the change of fit parameters
0217	Changing the mode Electrical	0218	Deactivation of economy mode
0219	Configuration of the instrument panel	0220	Status of the backup battery
0221	Reading of the configuration	0222	Reading of the oil wear counter
0223	Writing to oil wear counter	0224	Neutral position programming
0225	Replacement of the automatic gearbox without its ECU	0226	Replacement of the ECU without the automatic gearbox
0227	Replacement of the automatic gearbox and its ECU	0228	Configuration of the ECU
0229	Write VIN	0230	Writing of the ethanol content
0231	Replacement of the non BioFlex engine management ECU	0232	Replacement of the cooling fan
0233	Forced regeneration, vehicle stationary	0234	Replacement particle emission filter
0235	Initialisation of the additive level when filling or replacing the additive reservoir	0236	Priming of the additive system if replacing parts (additive reservoir, pump or pipes)
0237	Electric EGR valve replacement	0238	EGR mixer butterfly replacement
0239	Replacement of the EGR doser butterfly and replacement of the EGR doser by-pass butterfly	0240	Particulate filter replacement
0241	RECORDING THE COUNTERS	0242	Write counters.
0243	Replacement of the diesel additive reservoir, of the pump or of the pipes	0244	Fuel additive level zero reset
0245	Configuration of the amount of additive in the particle filter	0246	Replacement of one or several injectors
0247	Filling of the diesel additive tank	0248	EGR valve programming
0249	Programming of the injectors	0250	Configuration of ECU
0251	Programming of the total quantity of additive	0252	Replacement of the 4 injectors
0253	Replacement of injector 1	0254	Replacement of injector 2
0255	Replacement of injector 3	0256	Replacement of injector 4
0257	EGR electrovalve replacement	0258	Replacement of the turbo

0259	Air flow sensor replacement	0260	Replacement of the differential pressure sensor
0261	Replacement of the high pressure pump or the flow regulation valve	0262	Filling of the additive reservoir
0263	EGR programming information	0264	Turbo programming information
0265	Differential pressure sensor programming information	0266	EGR electrovalve
0267	Turbo	0268	Differential pressure sensor
0269	High pressure pump	0270	Flowmeter
0271	Transition from Factory mode to Customer mode	0272	Roof opening control
0273	Roof closing control	0274	Programming of the sunroof
0275	Longitudinal acceleration sensor calibration	0276	Front airbags
0277	Pre-tensioners	0278	Lateral airbags
0279	Satellites	0280	Calibration
0281	Cleaning or replacement of the particulate emission filter	0282	Filling of the reservoir, lighting of the low additive level warning light
0283	Replacement of the metering pump or replacement of the reservoir	0284	Priming of the additive adding circuit
0285	Seat functions	0286	Seat back functions
0287	Head restraint functions	0288	Steering column functions
0289	Lumbar supports functions	0290	CONTROL FUNCTION
0291	Activation of Stop and Start (new vehicle)	0292	Identical configuration for the 16 levels
0293	Name of the Nomad unit	0294	Juke-Box data
0295	Configuration of the audio functions	0296	Configuration of the other functions
0297	Configuration of CD player	0298	Configuration of the vehicle options
0299	Configuration of the customer services	0300	Configuration of the options
0301	RD4 audio equipment	0302	RNEG navigation radio
0303	NG4 navigation radio	0304	Vehicle in coup   position
0305	Fuel sender / pump module	0306	Inlet and exhaust camshaft phase sensor

0307	Inlet and exhaust camshaft dephasing electrovalve	0308	Variable valve lift motor
0309	Variable valve lift system position sensor	0310	Dephaser
0311	Canister discharge electrovalve	0312	Check the timing adjustment
0313	Inlet and exhaust camshaft dephaser	0314	Inlet and exhaust camshaft dephaser Electrovalve
0315	Change of high pressure pump with its fuel flow regulator	0316	Change of air mixer
0317	Replacement of the air flow sensor	0318	Change of engine block without the flowmeter
0319	Change of engine block with the flowmeter	0320	Replacement of the oxygen sensor
0321	Temporary reactivation of the Stop and Start function\n(for a maximum distance of 10 km)	0322	Replacement of diesel high pressure pump
0323	Replacement of the fuel flow regulator	0324	Replacement of the EGR exchanger
0325	Change to the air flowmeter	0326	Replacement of the ancillary drive belt
0327	Replacement of the exhaust manifold	0328	Replacement of the cylinder head
0329	Change of RAS (turbo air cooler) by-pass	0330	Injector 1 replacement
0331	Injector 2 replacement	0332	Injector 3 replacement
0333	Injector 4 replacement	0334	Change of EGR valve
0335	Replacement of the additive reservoir or additive pouch, of the pump or of the pipes	0336	Oxygen sensor replacement
0337	Replacement of 4 injectors	0338	High pressure pump replacement
0339	Semi-automatic configuration	0340	Configuration by the technical assistance platform (secure)
0341	Gearbox programming	0342	Removal/refitting or replacement of the gearbox ECU
0343	Replacement of the hydraulic clutch bearing	0344	Check of the gearbox control actuator oil level
0345	Draining of the gearbox control actuator oil	0346	Removal/refitting or replacement of a gearbox control actuator position sensor
0347	Removal/refitting or replacement of the electropump assembly	0348	Removal/refitting or replacement of the gearbox control actuator

0349	Removal/refitting or replacement of a solenoid valve or of the pressure sensor	0350	Removal/refitting or replacement of the control actuator reservoir or of the accumulator
0351	Removal/refitting or replacement of the electropump assembly electric motor	0352	Removal/refitting or replacement of the clutch cover or of the clutch disc
0353	Removal/refitting or replacement of the gearbox	0354	Replacement of the paddles at the steering wheel
0355	REPLACEMENT OF THE ADDITIVE BAG TANK	0356	Initialisation
0357	Reactivation of automatic application of the electric parking brake	0358	Deactivation of the automatic application of the electric parking brake function
0359	Bleeding of the hydraulic unit regulation circuit	0360	Maintenance mileage zero reset + maintenance number
0361	Maintenance mileage zero reset	0362	Maintenance number zero reset carried out
0363	Miscellaneous functions	0364	CO2 reading
0365	Automatic configuration	0366	Initialisation of the air mixer
0367	Initialisation of the EGR valve	0368	Initialisation of the turbocharger turbine valve 2 (VT2)
0369	Initialisation of the EGR butterfly	0370	Compression test
0371	Regeneration when stopped	0372	Regeneration when driving
0373	Configuration of the quantity of additive present in the particle emission filter	0374	Replacement of the diesel high pressure rail
0375	Matching	0376	Replacement of the engine block and cylinder head with the flowmeter
0377	Replacement of the particle emission filter differential pressure sensor	0378	Replacement of the exhaust gas recycling valve
0379	Replacement of the EGR exchanger bypass	0380	Replacement of the turbocharger
0381	Replacement of the engine block without the flowmeter	0382	Replacement of the impeller block
0383	Replacement of the cylinder block bearing	0384	Replacement of the ancillaries drive belt
0385	Replacement of the exchanger of the exhaust gas recycling solenoid valve	0386	Initialisation of the oxygen sensor
0387	Activation of the electric vacuum pump diagnostics strategy	0388	Deactivation of the electric vacuum pump diagnostics strategy

0389	Initialisation of the wheel transmitter modules	0390	Front left hand wheel
0391	Front right hand wheel	0392	Rear right hand wheel
0393	Rear left hand wheel	0394	Interrogation of the status of the active damper function
0395	Reactivation of the function mass damper	0396	Initialising of the active damper
0397	Put in fitting / removal position	0398	Cable tensioning
0399	Electric parking brake calibration	0400	Supply
0401	Side air bags	0402	Direction of the vehicle
0403	Configuration of the anti-lift function	0404	Personalisation menu configuration
0405	Phone book and call list data	0406	Check of the detection of a hands-free remote control by the front left door handle aerial
0407	Check of the detection of a hands-free remote control by the front right door handle aerial	0408	Check of the detection of a hands-free remote control by the boot external aerial
0409	Check of the detection of a hands-free remote control inside the vehicle (dashboard)	0410	Check of the detection of a hands-free remote control inside the vehicle (central armrest)
0411	Check of the detection of a hands-free remote control inside the vehicle's boot	0412	Check of the detection of a hands-free remote control located outside the vehicle
0413	Check of the detection of a hands-free remote control inside the vehicle (inside front and boot)	0414	Checking the matching between the hands-free identifier and the hands-free control unit
0415	Initialisation of the rain and brightness sensor	0416	Programming of the actuators
0417	Unit configuration	0418	Reinitialisation of the motor's thermal protection
0419	Re-initialisation of the heat protection of the motorised tailgate closing assistance module	0420	Programming of the motorised tailgate customisable position
0421	Erasing of the customisable position programmed by the motorised tailgate	0422	Programming of the motorised tailgate

0423	Erasing of the motorised tailgate programming	0424	SEAT TYPE
0425	Programming of the immobiliser code for the electric steering lock	0426	C02 adjustment
0427	Replacement parts	0428	Learning of the gearbox gate
0429	Programming of the clutch biting point	0430	Initialisation of the transmissibility value
0431	Bleeding of the hydraulic circuit	0432	Depressurisation of the hydraulic circuit
0433	Pressurise the hydraulic circuit	0434	Replacement of the clutch mechanism or disc
0435	Replace the gearbox actuator	0436	Gearbox actuator position sensor replacement
0437	Removal/refitting or replacement of the reservoir of the control actuator or the accumulator	0438	Replacement of a solenoid valve (clutch, selection, engagement) or of the pressure sensor
0439	Electric pump unit replacement	0440	Replacement of the electropump assembly electric motor
0441	Checking the oil level of the gearbox control actuator	0442	Draining the oil from the gearbox control actuator
0443	Replacement of the accessories drive belt	0444	Replacement of the reduction gear
0445	'Forced starting by starter' mode	0446	Exit from 'Factory' mode
0447	Reactivation	0448	Bleeding of the precharge pump circuit
0449	Initialisation of the ECU supply	0450	Tyre
0451	Learning wheel transmitter	0452	Search for the faulty wheel module
0453	Search for discharged wheel transmitter batteries	0454	Check of the front left valve
0455	Check of the front right valve	0456	Check of the rear right valve
0457	Check of the rear left valve	0458	Initialisation of the radar
0459	Clutch pedal position sensor calibration	0460	Engine compartment 1
0461	Service indicator	0462	Initialisation of the EGR solenoid valve
0463	Initialisation of the air flow sensor	0464	Initialisation of the air flow sensor following replacement of the engine ECU
0465	Forced regeneration of the particle emission filter	0466	Replacement or filling of the diesel additive reservoir

0467	Replacement of the pump and of the pipes of the additive circuit	0468	Programming of the transverse acceleration sensor
0469	Programming of the longitudinal acceleration sensor	0470	Programming of the master cylinder pressure sensor
0471	Programming of the steering wheel angle sensor	0472	Steering wheel angle sensor programming
0473	Reading of the recognition	0474	ECUs triggered and communicating
0475	ECUs with faults in their memory	0476	ECUS with permanent faults
0477	ECUs with communication faults	0478	General configuration information, Assessment of the ECUs present on the multiplexed networks
0479	Vehicle specification - Equipment	0480	Passive safety
0481	Service indicators	0482	Maintenance limit
0483	Zeroing of the service indicator	0484	Reinitialisation of the recognition
0485	Reading of the injector codes (IMA)	0486	Bleeding of the hydraulic block ASR8.0
0487	Calibration of the longitudinal and lateral acceleration sensor	0488	Decalibration of the longitudinal and lateral acceleration sensor
0489	Particulate filter forced regeneration	0490	'Arduous' maintenance schedule
0491	'Normal' maintenance schedule	0492	Traction battery controller 10
0493	side air bags	0494	locking
0495	Storage 7 of the most recent elements used to start the vehicle	0496	Storage 8 of the most recent elements used to start the vehicle
0497	Storage 5 of the most recent elements used to start the vehicle	0498	Storage 6 of the most recent elements used to start the vehicle