



Statement: Pictures illustrated herein are for reference only, we reserve the right to modify this Quick Reference Guide.

Main Components

Measurement Unit Assembly

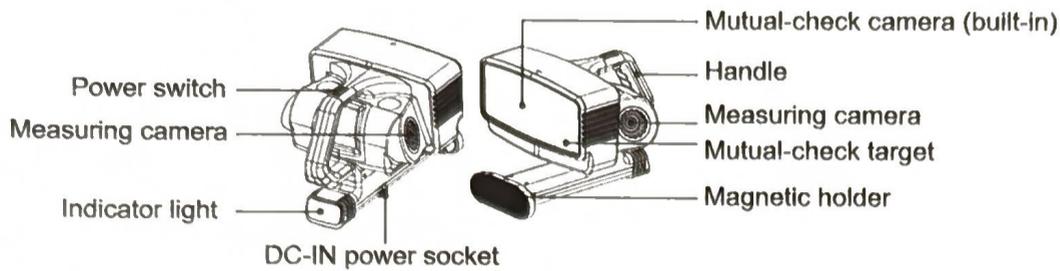


Clamp and Target

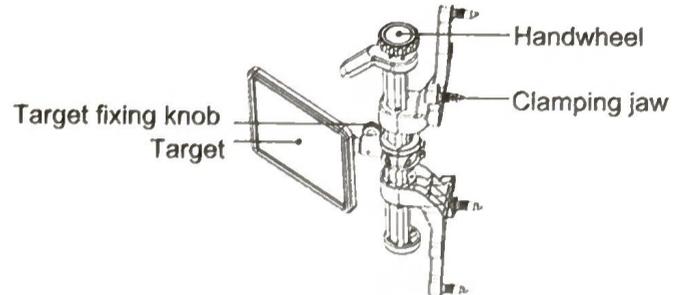

Operating Instructions


1 Use of Positioning Sticker

The product comes with positioning stickers to assist with the installation of the device. Attach the positioning sticker about 1cm away from the surface of the lift platform and ensure that the positioning sticker is parallel to the surface of the lift platform.

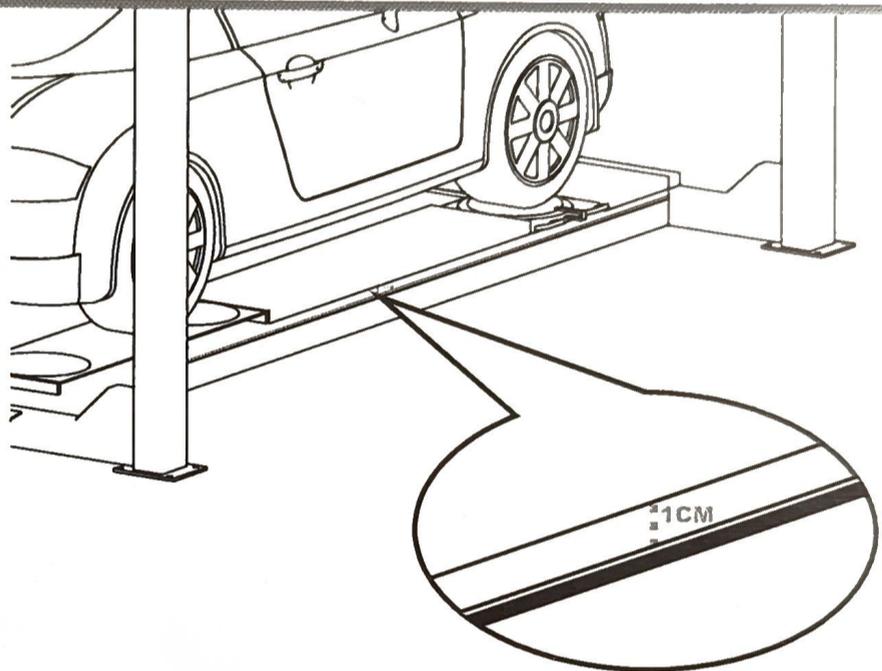

2 Device Installation


- Clamp installation:** clamp the 4 clamping jaws of the clamp onto the metal edge of the wheel rim, and orient the patterned side of the target towards the center (measurement unit).
- Measurement unit installation:** install the measuring unit (R) between the front and rear wheel clamps, align the upper edge of its magnetic suction head with the positioning sticker on the side of lift axle plate. Install the measurement unit (L) according to this method.

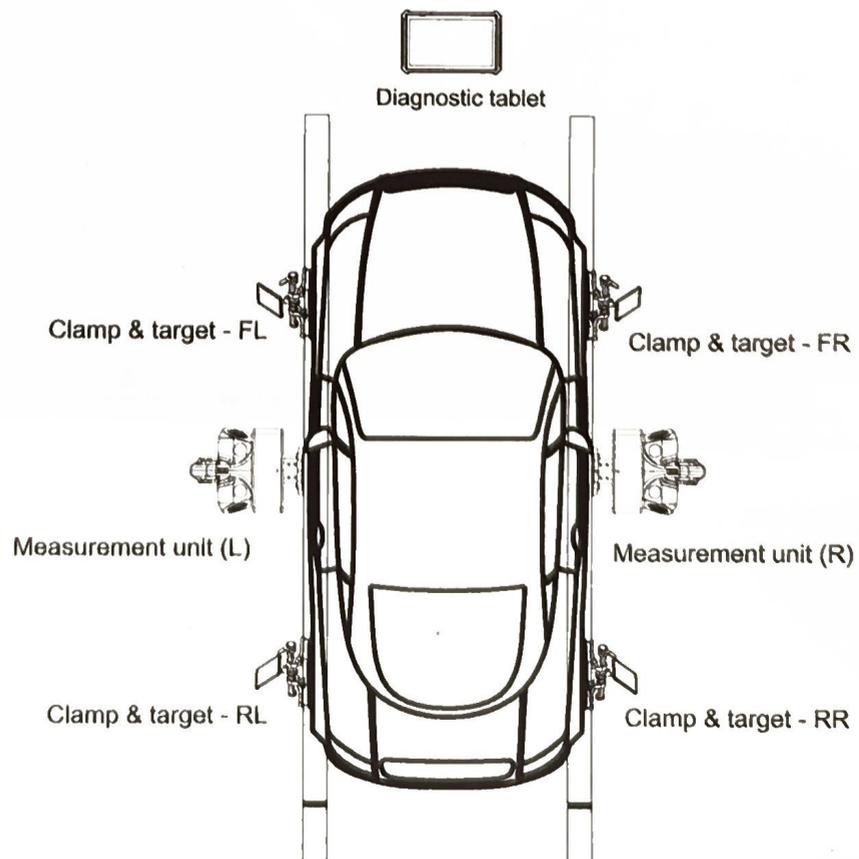

Statement: Pictures illustrated herein are for reference only, we reserve the right to modify this Quick Reference Guide.

3 Device Connection

After the clamps and measurement units are all installed, the indicator lights on the measurement units flash blue quickly, indicating that the measurement units are searching for the diagnostic tablet. The indicator lights then flash blue slowly, which indicates the device is networking internally. When both measurement units are successfully connected to the tablet, the indicator lights will be steady on green.

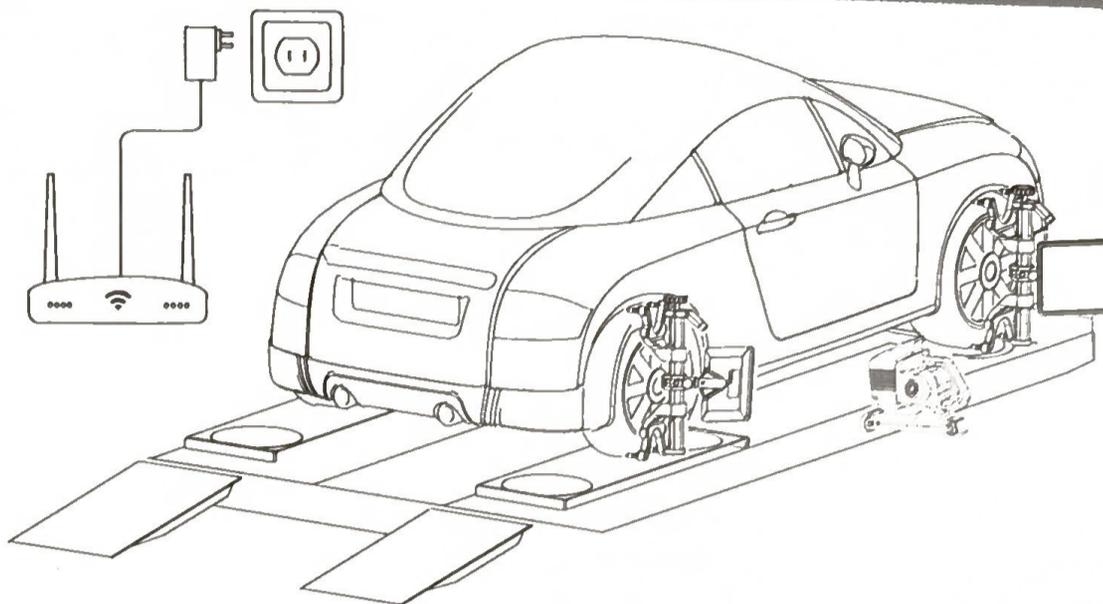


Note:

- Please place the router within 10 meters radius of the workstation.
- It is forbidden to modify the router setting, otherwise it may cause the device to connect abnormally.
- Please power on the router before connecting the device, and then the network indicator flashes blue slowly, it means that the network connection is available.

4 Device Activation

1. Enter the main interface of the four-wheel alignment measurement program by clicking on the [Four-Wheel Alignment] application on the tablet.
2. Click the [Four-Wheel Alignment] icon on the main interface to enter the device activation interface, select the device, and click [Activate].
3. Enter the serial number and activation code for X-613, then click [Activate].

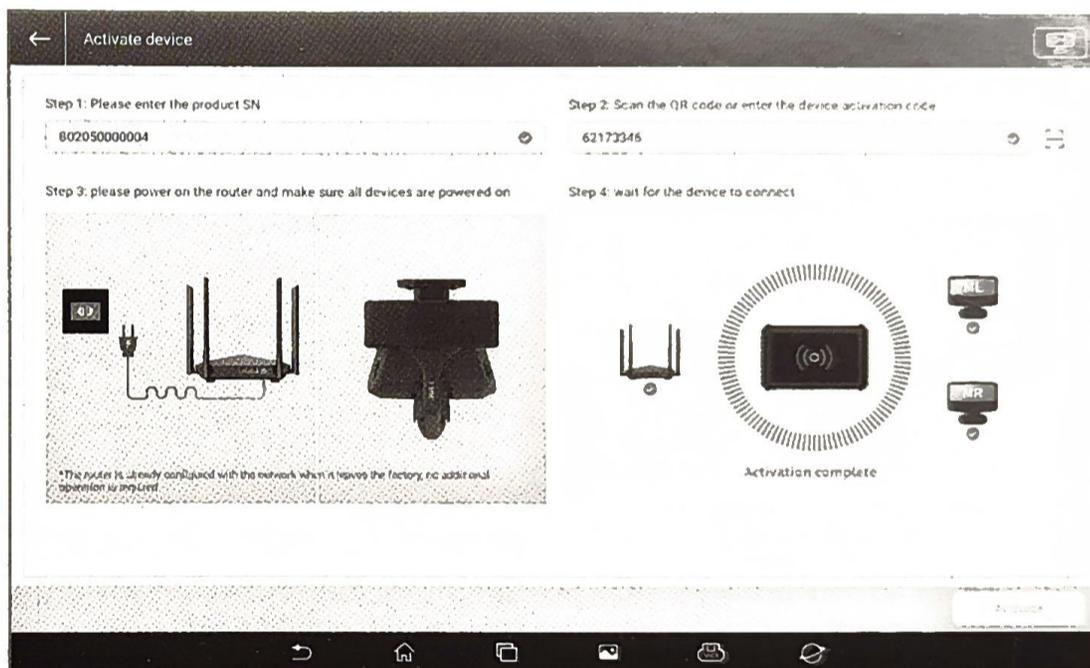

5 Application Operation

After the device is activated, the four-wheel aligner can be performed by operating the application program on the diagnostic tablet.

